




RADIANT HEATING SYSTEMS
MANIFOLD SUPPLY AND
RETURN BALL VALVES

INSTRUCTION SHEET




Manifold Supply and Return Ball Valves Instruction Sheet

The Manifold Supply and Return Ball Valves (part number A2631250) feature an integrated temperature gauge and filter (strainer) inside the ball. This allows easy cleaning of the filter without having to drain the system. Gain access to the filter by simply closing the valve and opening the filter-inspection cap as shown in the following instructions.

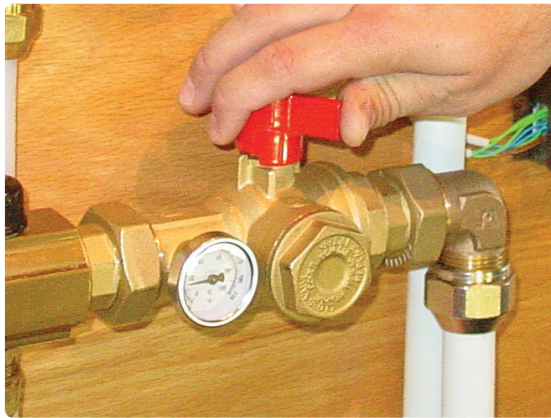


Step 1: Close the valve.

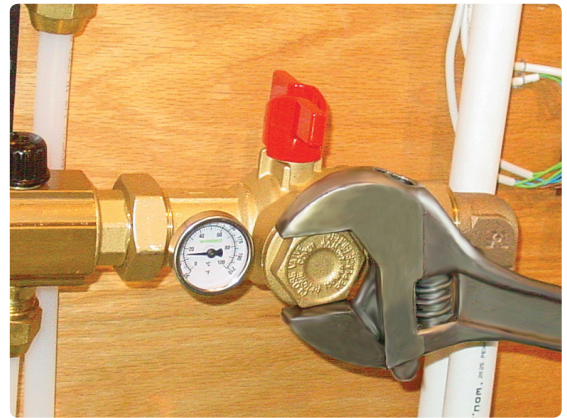


Step 2: Remove the filter-inspection cap.




Step 3: Remove the circlip which retains the filter.

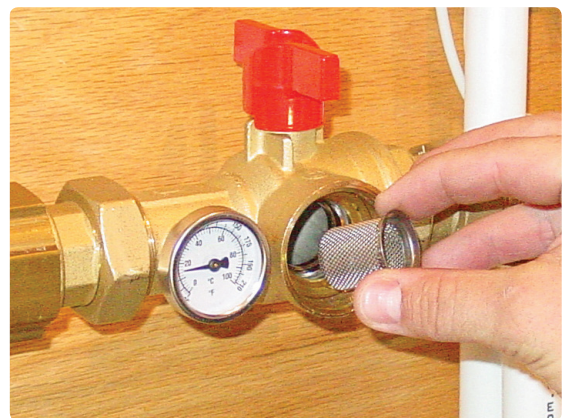


Step 4: Remove the filter.

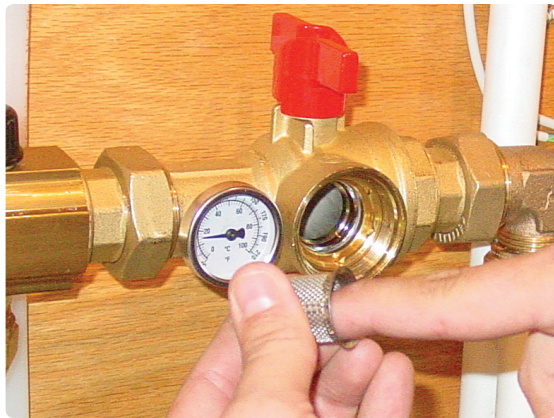


Step 5: Remove any dirt and debris from the filter.

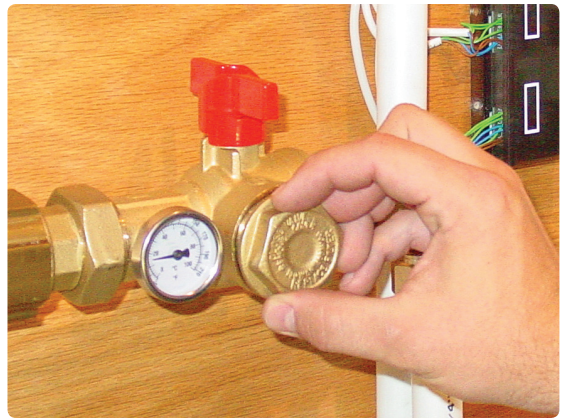

Step 6: Replace the filter, circlip and filter-inspection cap.

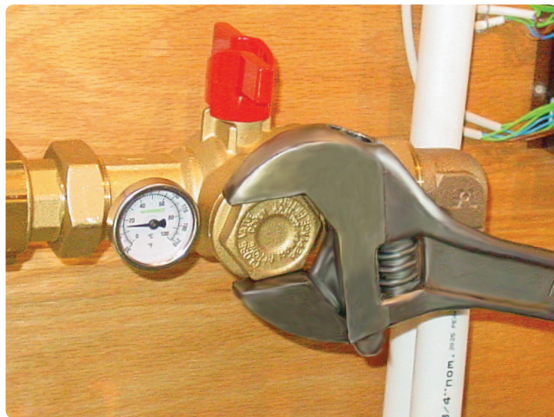

Step 7: Tighten the cap.

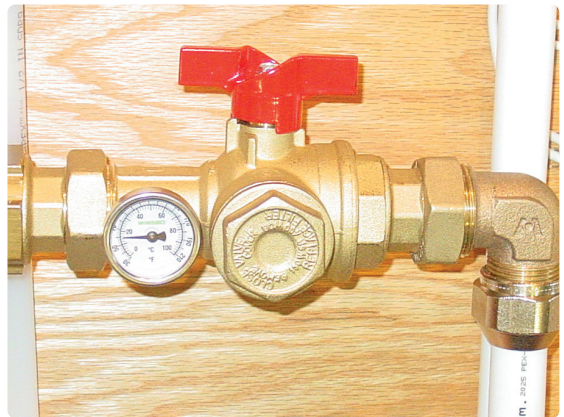

Step 8: Open the valve.

Uponor, Inc.
5925 148th Street West
Apple Valley, MN 55124 USA
Tel: 800.321.4739
Fax: 952.891.2008

Uponor Ltd.
2000 Argentia Rd., Plaza 1, Ste. 200
Mississauga, ON L5N 1W1 CANADA
Tel: 888.994.7726
Fax: 800.638.9517

Uponor

www.uponorpro.com