

NY Thermal Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nythermal.com
Email: info@nythermal.com

84917 Circulator Cartridge, UPS15-78 (59200469)

Applicable Boiler Models

- Tx151C

Kit Contents

- 1 Grundfos Circulator Cartridge

Tools Required

- Allen Key
- ¼" Nut Driver

Replacement Instructions

- 1) Turn off power and gas to the boiler.
- 2) Drain boiler of water.
- 3) Remove front cover.
- 4) Remove circulator cartridge
- 5) Install new cartridge
- 6) Refill boiler with water and purge excess air.
- 7) Turn on power and gas to the boiler.



CAUTION

Air in Boiler - Ensure the boiler is completely filled with water, and that all the air is purged. Failure to do so may result in property damage.

CAUTION

Pressure - Ensure the system is refilled to a minimum of 15psi. Failure to do so may result in property damage.