 


Quick Sling Hanger Unit Installation: *(Please adhere to all local laws and building codes)* **Model#: (QSLG1000)**

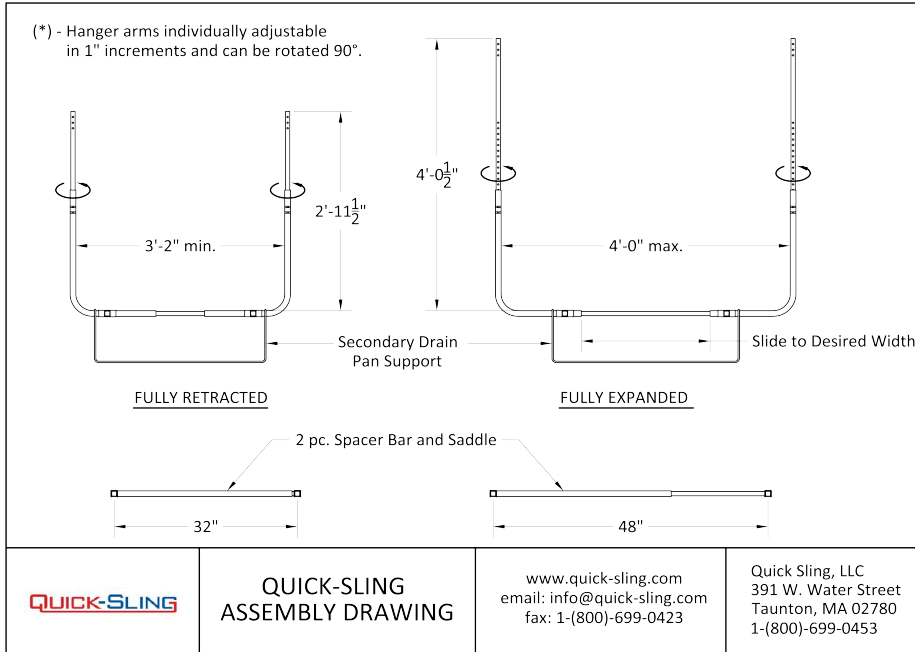

Step #1: Remove pre-assembled J-Bars & Extension Arms from box and lay on a flat surface.

Step #2: Remove 30.5" Extension Bar & insert into bottom of two J-Bars (2 x's).

Step #3: Determine desired width, then insert & tighten 1/4"-20 Thumb Screws (Green Labeled Bag). **Make sure centerline mark on SL103 is equal distance from each J-Bar.**

Step #4: Adjust L & R Hanger Arms (SL101) to desired height. You may also adjust height after installation to provide a level surface for the HVAC Unit. See Photo #1 & #3 for reference.



Photo #1
(On left)
Extension Arms
mounted to
Rafters with
enclosed
hardware.

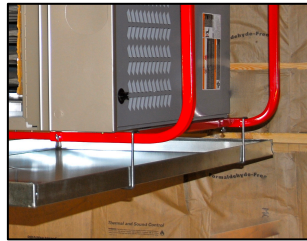 


Photo #2
(On left)
Drain Pan
Hanger
Support &
Drain Pan
on bottom
of Sling.

 
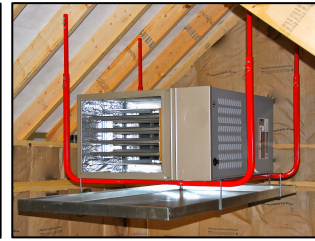 


Photo #3
(On left)
Quick Sling
Hanger Unit
installed on
Rafters with
Furnace &
Drain Pan.

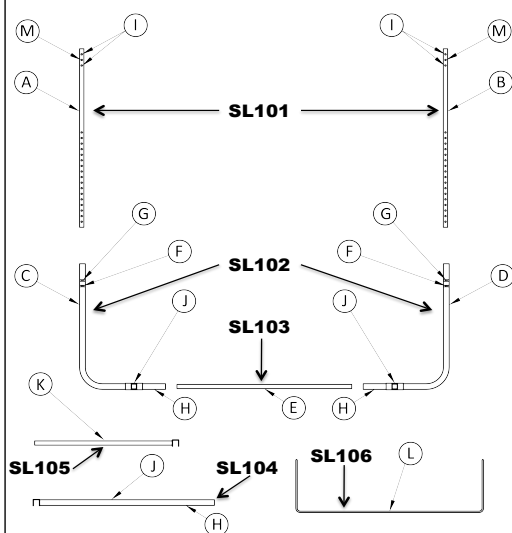

PARTS LIST

- (A) Left Hanger Arm (SL101)
- (B) Right Hanger Arm (SL101)
- (C) Left J-Bar (SL102)
- (D) Right J-Bar (SL102)
- (E) 30 1/2" Extension Bar (SL103)
- (F) 1 1/4" Long Thumb Screw & Wing Nut (*)
- (G) 1 1/4" Long Thumb Screw & Wing Nut (*)
- (H) 1/4" Thumb Screw in Tapped Hole
- (I) 2 1/2" Screws (2 min. per Arm)
- (J) 1" Spacer Bar and Saddle (SL104)
- (K) 3/4" Spacer Bar and Saddle (SL105)
- (L) Secondary Drain Pan Support (SL106) (32 1/4" max. width)
- (M) (1) - 3" Bolt & Wing Nut per arm

Step #5: Hang the Quick Sling Unit using hardware in *Purple & Orange Labeled Bags*. One Through Bolt & two Pan Head screws must go in each Hanger Arm. See Photo #1.

Step #6: After the Sling Unit is hanging, attach the two 2-piece Spacer Bar & Saddle connecting both frames (SL104 & SL105) and tighten the thumbscrews.

Step #7: Now hang (SL106) Drain Pan Support on each J-Bar Frame (See Photo #2). You are now ready to insert HVAC Unit & Secondary Drain Pan.

Step #8: Use Anti-Vibration Rubber Pads (*Pink Labeled Bag*) between HVAC unit and J-Bar Frame.

Safe Install Warning

Install At Your Own Risk!

The load capacity of this product can only be assured if installation is carried out properly.

Mounting hardware is included with most models. However, it is the Buyer's sole responsibility to determine that the enclosed hardware is safe and suitable for the selected mounting location. Additional materials and safety precautions may be required, depending upon the size and location of the installation. When hardware is not included, the Buyer is solely responsible for furnishing and installing anchors and related mounting materials that are safe and suitable for the selected mounting location. Quick-Sling™ is not responsible for any installation faults or defects. It is highly recommended that the installation/mounting location be periodically inspected by a skilled technician. Make sure that the installation location is suitable enough to hold the brackets and associated equipment loads.

Disclaimer Of Liability

Quick-Sling LLC and its successors, distributors, jobbers, dealers and retailers ("Seller") shall in no way be responsible for any direct, indirect or consequential damage resulting from improper installation, misuse or misapplication of this product. It is the BUYER's sole responsibility for assuring proper installation and use.

Seller makes no warranty of merchantability of the goods or the fitness of the goods for any particular purpose. Seller makes no warranties of any kind, express or implied. The goods are sold as-is and with all faults.