



Water Filter Cartridges Installation



Installation

- Turn off cold water supply and open nearest faucet to drain pipes before starting installation. Place a tray or towel under the cold water line to catch excess water.
- Remove housing from filter head and set aside.
- Remove o-ring from housing. Lubricate with a water based lubricant and seat securely on housing.
- Place filter into housing. Screw bottom of housing onto the cap and hand-tighten. **DO NOT OVERTIGHTEN.** Make certain cap standpipe slips into cartridge.
- Turn on water supply to allow filter to slowly fill with water, then press the pressure relief button on the housing to release trapped air. Open faucet and flush filter with water for 5 minutes. Check for leaks and tighten fittings as needed.

Warning

- It's important to seat the O-ring properly in the groove or water leakage may occur.
- **FOR COLD WATER USE ONLY (40-100°F), DO NOT INSTALL ON HOT WATER.**
- The filter cartridge has a limited service life. A decrease in water flow indicates that the cartridge should be replaced.