



# DOES THE AIR HANDLER INSTALL NEED A REFRIGERATION DETECTION KIT?

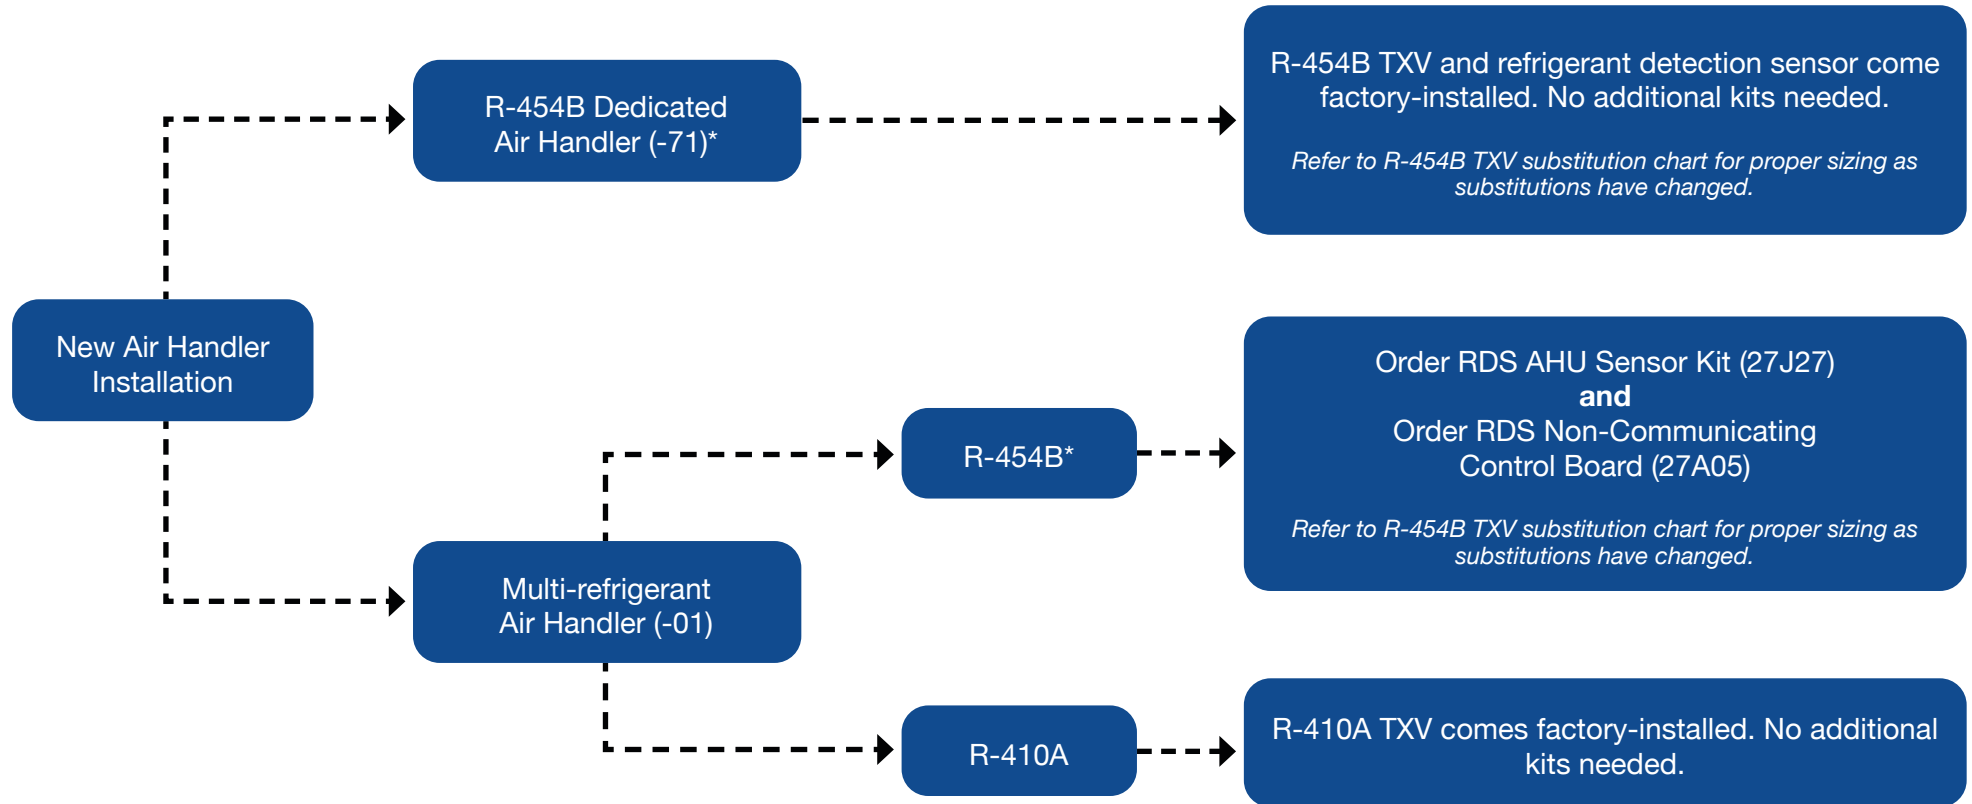

*\*For secondary joints, please see the air handler installation instructions for additional requirements.  
RDS boards and sensors are exclusively for use with Allied Air equipment.*

# DOES THE COIL INSTALL NEED A REFRIGERATION DETECTION KIT?

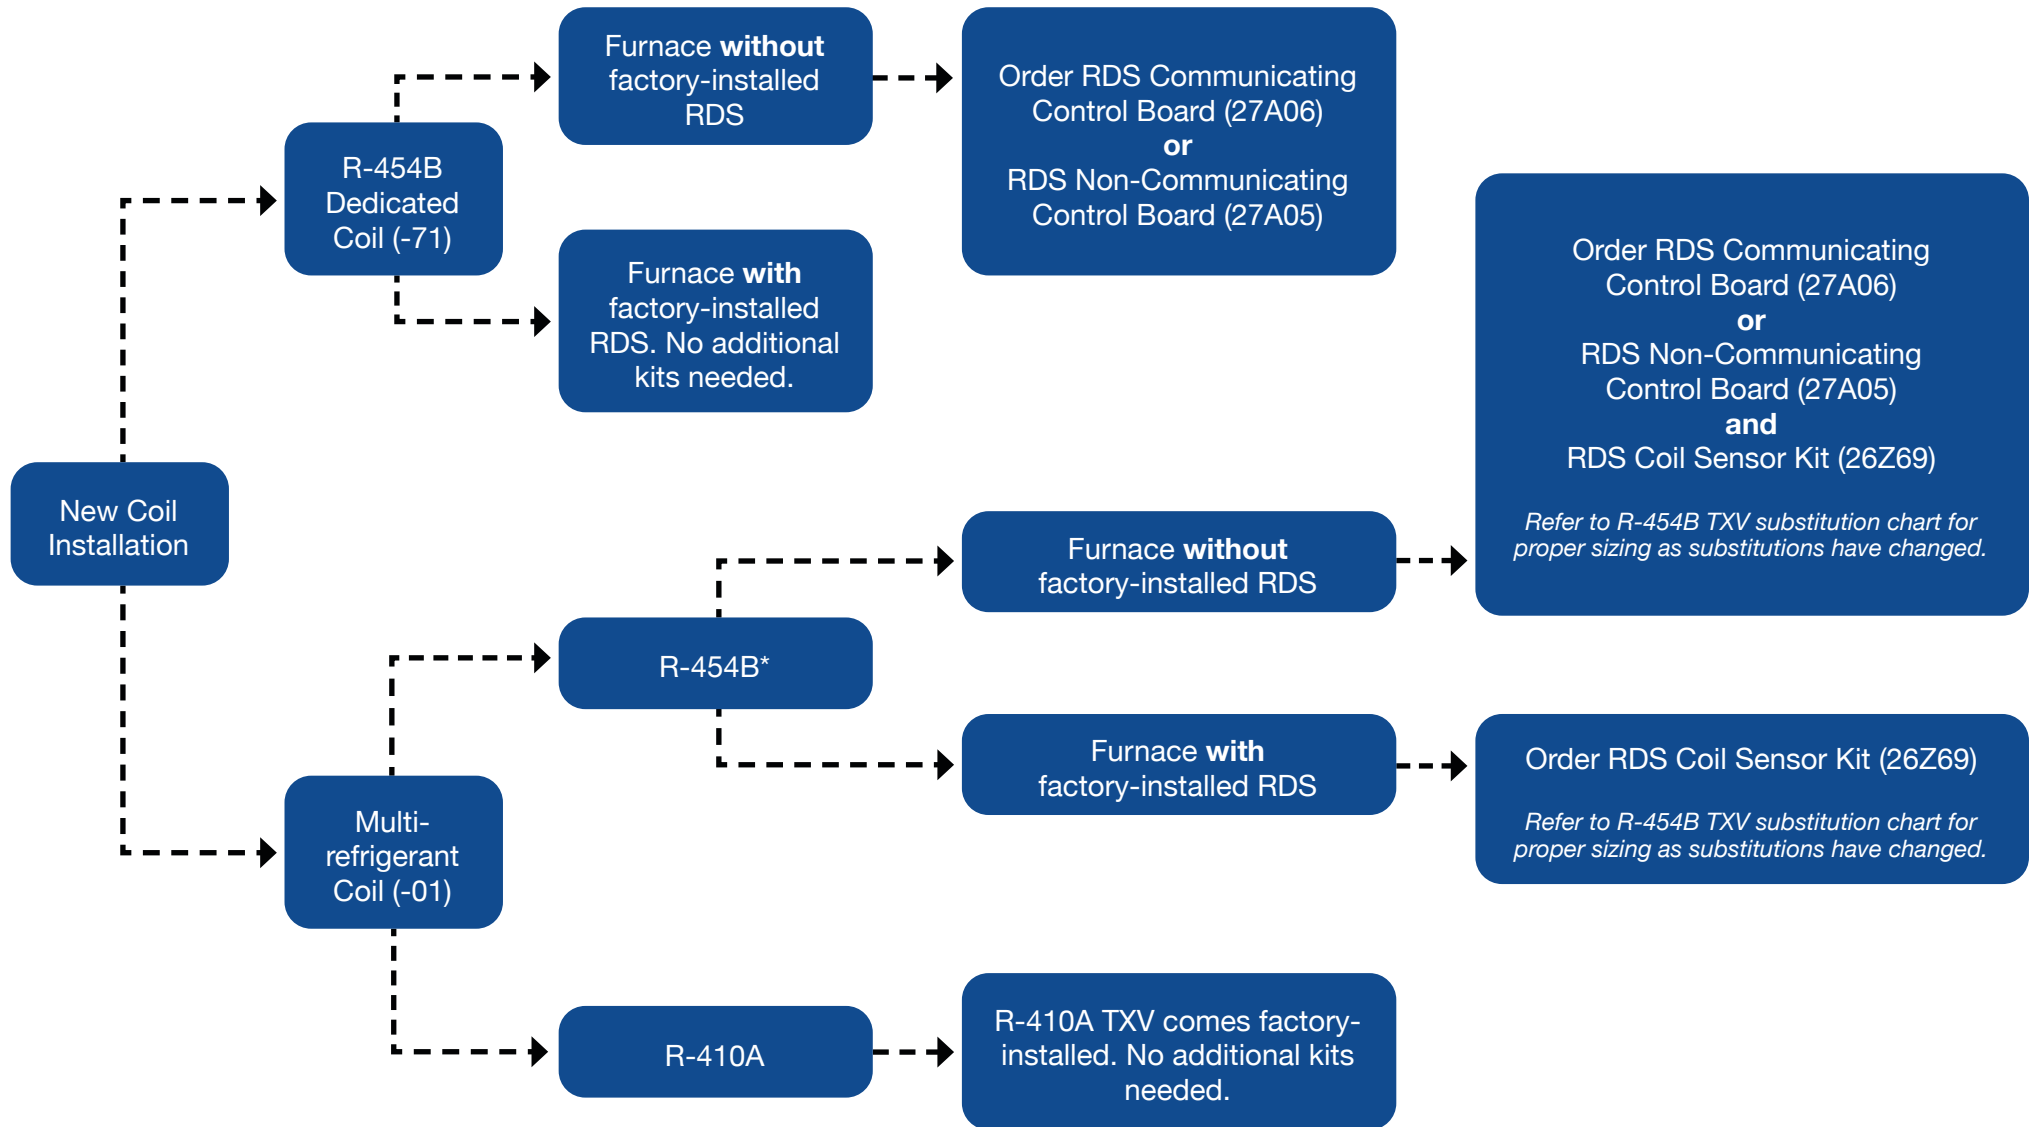

*\*For secondary joints, please see the coil installation instructions for additional requirements.  
RDS boards and sensors are exclusively for use with Allied Air equipment.*

# R-454B TXV SUBSTITUTION CHART



Size	Order Number
18/24	26Z70
24	
30	
30/36	
36	
42	26Z71
48	
49	
50/60	26Z72
60	

**NOTE** - Additional components are required for R-454B Conversion. See Optional Accessories table.