

EV SERIES Premium ERV

Installation, Operation and Maintenance Manual

EV Premium S/SH

EV Premium M/MH

EV Premium L/LH



Model: EV Premium L, M, S shown

⚠ CAUTION**RISK OF ELECTRIC SHOCK OR EQUIPMENT DAMAGE**

Whenever electrical wiring is connected, disconnected or changed, the power supply to the ERV and its controls must be disconnected. Lock and tag the disconnect switch or circuit breaker to prevent accidental reconnection of electric power.

⚠ CAUTION**RISK OF CONTACT WITH HIGH SPEED MOVING PARTS**

This appliance has two high speed fans that can cause injury or be damaged if objects come into contact with the impellers when they are spinning. The fans may be controlled by external controlling devices and switch on at any time. When working in the area of the fans, electric power to the unit must be disconnected.

IMPORTANT

All ductwork is to be designed and installed in accordance with SMACNA guidelines.

IMPORTANT

This ERV is intended for ducted ventilation only. Ducting at least 40 inches [1 meter] in length must be installed on all four airstreams.

⚠ CAUTION**RISK OF INJURY FROM FALLING OBJECTS**

Installation of this unit requires hoisting hardware overhead and working directly beneath heavy objects during the installation process. Observe all OSHA-approved work practices. Always wear OSHA-approved Personal Protective Equipment (PPE).

IMPORTANT

Only persons who have been properly trained and authorized are to access the ERV electrical box and the controller. Changes to the controller are to be made only by trained and authorized personnel.

IMPORTANT

This equipment is to be installed by following industry best practices and all applicable codes. Any damage to components, assemblies, subassemblies or the cabinet which is caused by improper installation practices will void the warranty.

READ AND SAVE THIS MANUAL/LIRE ET CONSERVER CE MANUEL**NOTICE**

This manual has space for recording operating settings at time of unit commissioning that must be completed by the installer. See Sections 5.1 and 5.2 of this manual.

Information that is recorded is specific to just one ERV. If additional ERVs are being documented, please make copies of these pages and identify each copy by its unit tag.

UNIT INFORMATION

Record information as shown below. In the unlikely event that factory assistance is ever required, this information will be needed.

Locate the RenewAire unit label, to be found outside of the appliance, near the terminal block. Record the model and serial numbers below.

NOTE: This information is for purposes of identifying the specific air handling appliance. Unit-specific option data can then be obtained, as needed, from the Model Number.

ERV Model:

☐

EV Premium S

☐

EV Premium SH

☐

EV Premium M

☐

EV Premium MH

☐





EV Premium L

☐

EV Premium LH

Serial Number:

UNIT INFORMATION

 RenewAire® Energy Recovery Ventilation		 ETL LISTED CONFORMS TO ASHRAE 154-2013
MODEL EVPremiumM MODELE		 CERTIFIED TO CAN/CSA C22.2 No. 113
⚠ WARNING ⚠ AVERTISSEMENT Danger of electrical shock. Always disconnect from power source before servicing. Danger de choc électrique. Toujours déconnecter la source d'alimentation avant les réparations.		
120V, 60HZ, 1 Phase, 2.5A Unit MCA: 10 MFS: 10 120V, 60HZ, 1 Phasée, 2.5A Unit MCA: 10 MFS: 10		
Motor: Qty 2: @ 0.11 HP & 1.22 F.L.A. Moteur: Qte 2: de chaque 0.11 CV & 1.22 A.P.C.		
Motors Thermally Protected Moteurs protégés thermiquement		
Do not install in a cooking area or connect directly to any appliance. Ne pas installer dans une zone de cuisson ou de se connecter directement à n'importe quel appareil.		
	CERTIFIED RATINGS EV Premium M Rated Air Flow @ 0.2 in wg (50Pa) 224 cfm 106 (L/s) 0.4 in wg (100Pa) 209 cfm 99 (L/s)	Complete ratings at: www.hvi.org
Energy Performance Net Supply Air Flow 50 cfm (24 L/s) at 32°F (0°C)	Adjustable Sensible Recovery Efficiency 83%	Sensible Recovery Efficiency 78%
50 cfm (24 L/s) at 95°F (35°C)	Total Recovery Efficiency 61%	Moisture Transfer 69%
Adjusted Total Recovery Efficiency 63%		
Part No.: 160020_000 Serial Number: E202612R		RenewAire, LLC 201 Raemisch Road Waunakee, WI 53597

UNIT LABEL (TYPICAL)




PREMIUM S

Energy Recovery Ventilator EC Motor



INDOOR UNIT

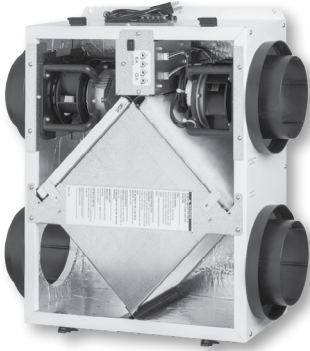

SPECIFICATIONS

Ventilation Type:

Static plate, heat and humidity transfer

Typical Airflow Range: 30–130 CFM

Unit is HVI Tested/Certified per CSA C439

Protocol: Using one L-30-G5 Core

Standard Features:

White painted cabinet
Line-cord power supply
Low-voltage circuit for controls
Unit may be mounted in any orientation
Cross-core differential pressure ports
Dial-A-Flow: balance and airflow adjustment
Variable speed
Boost-mode

Controls:

Onboard digital controller with independent variable speeds

Filters:

Total qty. 2, MERV 8, spun-polyester media:
7 1/2" x 10 1/2" x 1"

Unit Weight: 32 lbs.

Max. Shipping Dimensions & Weight (in carton):

30" L x 22" W x 15" H
38 lbs.

Motor(s):

Qty. 2, 120V EC motorized impellers

Accessories:

Backdraft damper: 6", 8"
Automatic balancing damper: 4", 5", 6"
Louvered wall vent 6": white, brown
Louvered wall vent 8": taupe vinyl, galvanized, paintable galvalume
Louvered wall vent with 8" round duct connection: 12" W x 8" H
Hooded wall vent 8": galvanized, paintable galvalume
Digital time clock: wall mount (TC7D-W), in exterior enclosure (TC7D-E)
Carbon dioxide sensor/control: wall mount (CO2-W), duct mount (CO2-D)
IAQ sensor: wall mount (IAQ-W), duct mount (IAQ-D)
Motion occupancy sensor/control: ceiling mount (MC-C), wall mount (MC-W)
Push-button boost timer (PBT)
Percentage timer control (PTL)
Percentage timer control with furnace interlock (FM)
Push-button point-of-use controls (PBL), PTL req'd.
MERV 13 filter: OA airstream (shipped loose)
Electric duct heater: RH series (1–4 kW); designed for indoor ductwork installation only

EC MOTOR OPERATING RANGE

Sample Points Depicted in Larger Dots		
Airflow (CFM)	External Static Pressure (Inches Water Column)	Unit Power Consumption (Watts)
Max. Speed		
138	0.1	137
131	0.2	136
125	0.3	134
119	0.4	133
112	0.5	133
106	0.6	130
97	0.7	128
91	0.8	124
83	0.9	121
74	1.0	116
56	1.2	98
35	1.4	85
Min. Speed		
28	0.1	13
13	0.2	12


Note: Watts is for the entire unit.

Note: Airflow performance includes effect of clean, standard filter supplied with unit.

Note: Refer to CORES for specific operating point electrical data.

ELECTRICAL DATA

Watts	Volts	Hz	Phase	FLA per motor	Min. Cir. Amps	Max. Overcurrent Protection Device
53	120	60	1	0.85	10	10

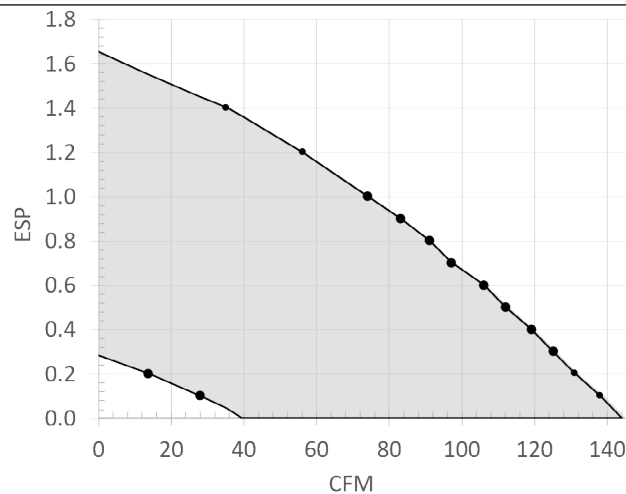


CORE PERFORMANCE

Airflow (CFM)	Sensible EFF%	Total EFF% Winter/Summer
Max. Speed		
138	62	58/36
131	64	59/38
125	65	61/40
119	66	62/41
112	67	63/43
106	68	65/45
97	70	67/48
91	71	68/49
83	73	70/51
74	75	71/54
56	78	75/59
35	82	80/65
Min. Speed		
28	83	81/67
13	86	85/71

Note: These are core-only ratings and are not HVI certified. Total EFF% calculated at 35/33wb OA and 70/58wb RA (winter) and 98/78wb OA and 75/63wb RA (summer). HVI ratings apply to complete units only. This unit is HVI certified. See HVI certified ratings on pg. 46 of Single/Multi-Family Catalog and at hvi.org.

EV Premium S Energy Recovery Ventilator EC Motor

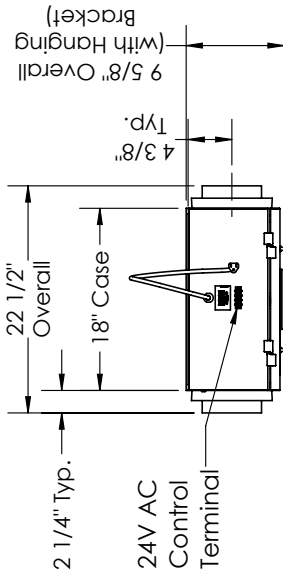


TOP VIEW


ABBREVIATIONS
 EA: Exhaust Air to outside
 OA: Outside Air Intake
 RA: Room Air to be exhausted
 SA: Supply Air to inside

INSTALLATION ORIENTATION
 Unit may be installed in any orientation.


NOTE
 1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

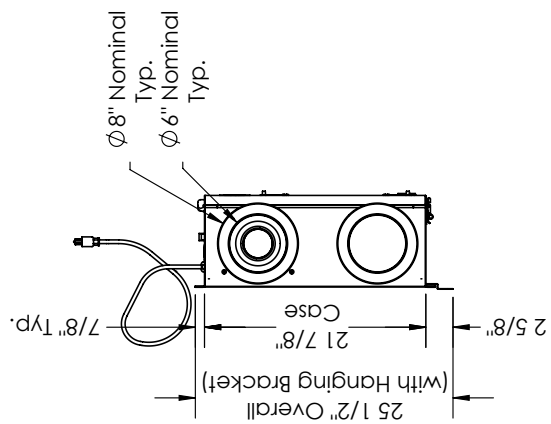

LEFT VIEW

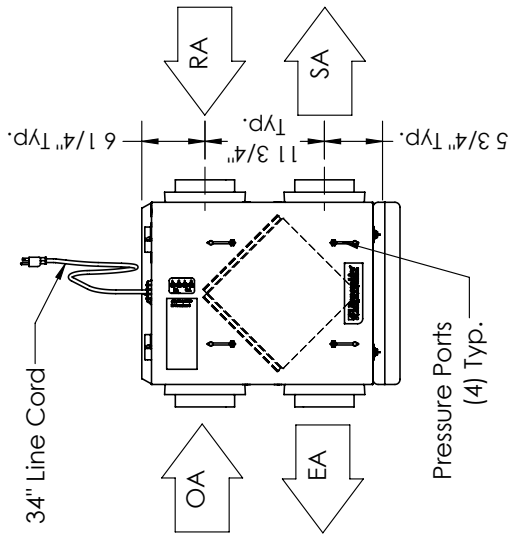

FRONT VIEW

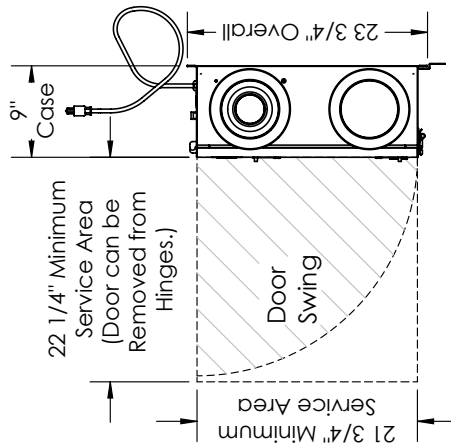

RIGHT VIEW




PREMIUM SH

Energy Recovery Ventilator EC Motor



INDOOR UNIT

NEW

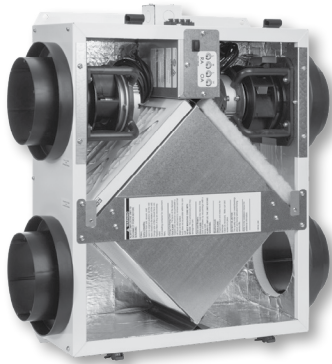

SPECIFICATIONS

Ventilation Type:

Static plate, heat and humidity transfer

Typical Airflow Range: 30–130 CFM

Unit is HVI Tested/Certified per CSA C439

Protocol: Using one L-30-G5 Core

Standard Features:

White painted cabinet
Hard wired to junction box
Low-voltage circuit for controls
Unit may be mounted in any orientation
Cross-core differential pressure ports
Dial-A-Flow: balance and airflow adjustment
Variable speed
Boost-mode

Controls:

Onboard digital controller with independent variable speeds

Filters:

Total qty. 2, MERV 8, spun-polyester media:
7 1/2" x 10 1/2" x 1"

Unit Weight: 32 lbs.

Max. Shipping Dimensions & Weight (in carton):

30" L x 22" W x 15" H
38 lbs.

Motor(s):

Qty. 2, 120V EC motorized impellers

Accessories:

Backdraft damper: 6", 8"
Automatic balancing damper: 4", 5", 6"
Louvered wall vent 6": white, brown
Louvered wall vent 8": taupe vinyl, galvanized, paintable galvalume
Louvered wall vent with 8" round duct connection: 12" W x 8" H
Hooded wall vent 8": galvanized, paintable galvalume
Digital time clock: wall mount (TC7D-W), in exterior enclosure (TC7D-E)
Carbon dioxide sensor/control: wall mount (CO2-W), duct mount (CO2-D)
IAQ sensor: wall mount (IAQ-W), duct mount (IAQ-D)
Motion occupancy sensor/control: ceiling mount (MC-C), wall mount (MC-W)
Push-button boost timer (PBT)
Percentage timer control (PTL)
Percentage timer control with furnace interlock (FM)
Push-button point-of-use controls (PBL), PTL req'd.
MERV 13 filter: OA airstream (shipped loose)
Electric duct heater: RH series (1–4 kW); designed for indoor ductwork installation only

EC MOTOR OPERATING RANGE

Sample Points Depicted in Larger Dots		
Airflow (CFM)	External Static Pressure (Inches Water Column)	Unit Power Consumption (Watts)
Max. Speed		
138	0.1	137
131	0.2	136
125	0.3	134
119	0.4	133
112	0.5	133
106	0.6	130
97	0.7	128
91	0.8	124
83	0.9	121
74	1.0	116
56	1.2	98
35	1.4	85
Min. Speed		
28	0.1	13
13	0.2	12


Note: Watts is for the entire unit.

Note: Airflow performance includes effect of clean, standard filter supplied with unit.

Note: Refer to CORES for specific operating point electrical data.

ELECTRICAL DATA

Watts	Volts	Hz	Phase	FLA per motor	Min. Cir. Amps	Max. Overcurrent Protection Device
53	120	60	1	0.85	10	10

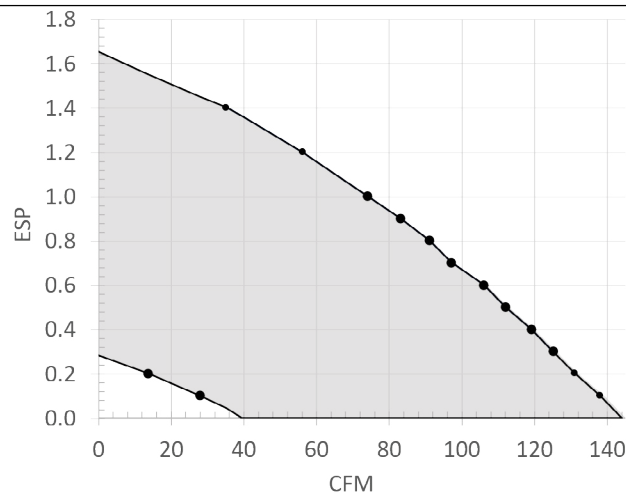


CORE PERFORMANCE

Airflow (CFM)	Sensible EFF%	Total EFF% Winter/Summer
Max. Speed		
138	62	58/36
131	64	59/38
125	65	61/40
119	66	62/41
112	67	63/43
106	68	65/45
97	70	67/48
91	71	68/49
83	73	70/51
74	75	71/54
56	78	75/59
35	82	80/65
Min. Speed		
28	83	81/67
13	86	85/71

Note: These are core-only ratings and are not HVI certified. Total EFF% calculated at 35/33wb OA and 70/58wb RA (winter) and 98/78wb OA and 75/63wb RA (summer). HVI ratings apply to complete units only. This unit is HVI certified. See HVI certified ratings on pg. 46 of Single/Multi-Family Catalog and at hvi.org.

EV Premium SH Energy Recovery Ventilator **EC** Motor

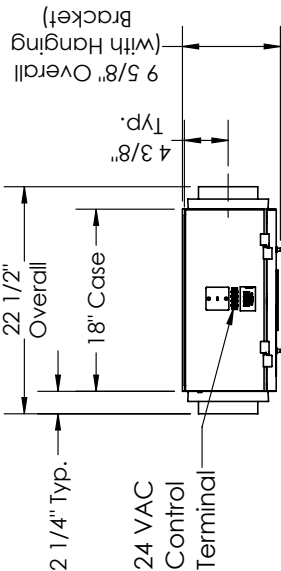


TOP VIEW


ABBREVIATIONS
EA: Exhaust Air to outside
OA: Outside Air intake
RA: Room Air to be exhausted
SA: Supply Air to inside

INSTALLATION ORIENTATION
Unit may be installed in any orientation.


NOTE
1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

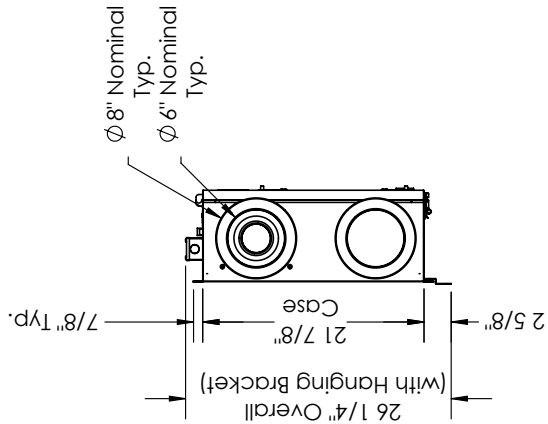

LEFT VIEW

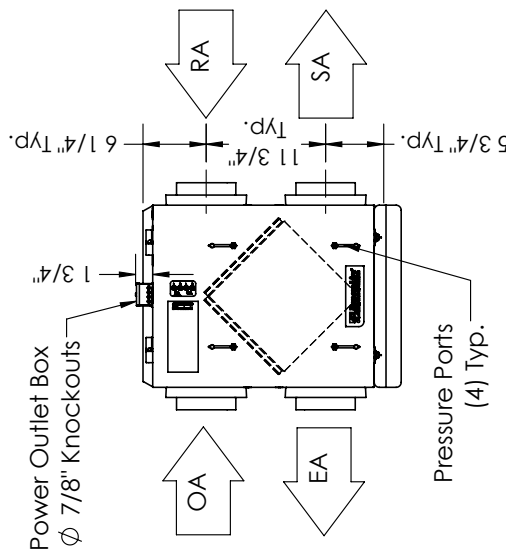

FRONT VIEW

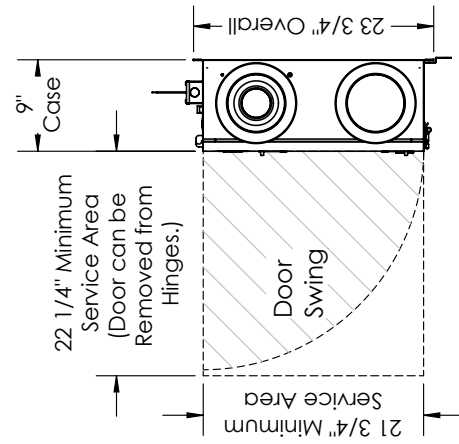

RIGHT VIEW




PREMIUM M

Energy Recovery Ventilator EC Motor



INDOOR UNIT

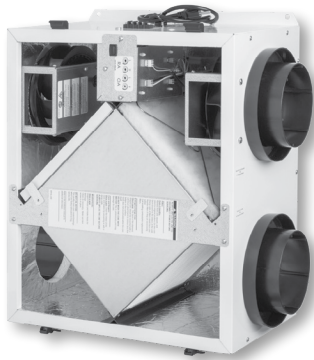

SPECIFICATIONS

Ventilation Type:

Static plate, heat and humidity transfer

Typical Airflow Range: 30–225 CFM

Unit is HVI Tested/Certified per CSA C439

Protocol: Using one L-50-G5 Core

Standard Features:

White painted cabinet
Line-cord power supply
Low-voltage circuit for controls
Unit may be mounted in any orientation
Cross-core differential pressure ports
Dial-A-Flow: balance and airflow adjustment
Variable speed
Boost-mode

Controls:

Onboard digital controller with independent variable speeds

Filters:

Total qty. 2, MERV 8, spun-polyester media:
10 1/2" x 10 1/2" x 1"

Unit Weight: 36 lbs.

Max. Shipping Dimensions & Weight (in carton):

32" L x 22" W x 18" H
48 lbs.

Motor(s):

Qty. 2, 120V EC motorized impellers

Accessories:

Backdraft damper: 6", 8"
Automatic balancing damper: 4", 5", 6"
Louvered wall vent 6": white, brown
Louvered wall vent 8": taupe vinyl, galvanized, paintable galvalume
Louvered wall vent with 8" round duct connection: 12" W x 8" H
Hooded wall vent 8": galvanized, paintable galvalume
Digital time clock: wall mount (TC7D-W), in exterior enclosure (TC7D-E)
Carbon dioxide sensor/control: wall mount (CO2-W), duct mount (CO2-D)
IAQ sensor: wall mount (IAQ-W), duct mount (IAQ-D)
Motion occupancy sensor/control: ceiling mount (MC-C), wall mount (MC-W)
Push-button boost timer (PBT)
Percentage timer control (PTL)
Percentage timer control with furnace interlock (FM)
Push-button point-of-use controls (PBL), PTL req'd.
MERV 13 filter: OA airstream (shipped loose)
Electric duct heater: RH series (1–6 kW); designed for indoor ductwork installation only

EC MOTOR OPERATING RANGE

Sample Points Depicted in Larger Dots		
Airflow (CFM)	External Static Pressure (Inches Water Column)	Unit Power Consumption (Watts)
Max. Speed		
233	0.1	179
225	0.2	176
216	0.3	177
210	0.4	174
201	0.5	173
193	0.6	172
184	0.7	170
176	0.8	168
163	0.9	166
150	1.0	162
117	1.2	148
86	1.4	134
48	1.6	112
Min. Speed		
18	0.1	16


Note: Watts is for the entire unit.

Note: Airflow performance includes effect of clean, standard filter supplied with unit.

Note: Refer to CORES for specific operating point electrical data.

ELECTRICAL DATA

Watts	Volts	Hz	Phase	FLA per motor	Min. Cir. Amps	Max. Overcurrent Protection Device
85	120	60	1	1.22	10	10

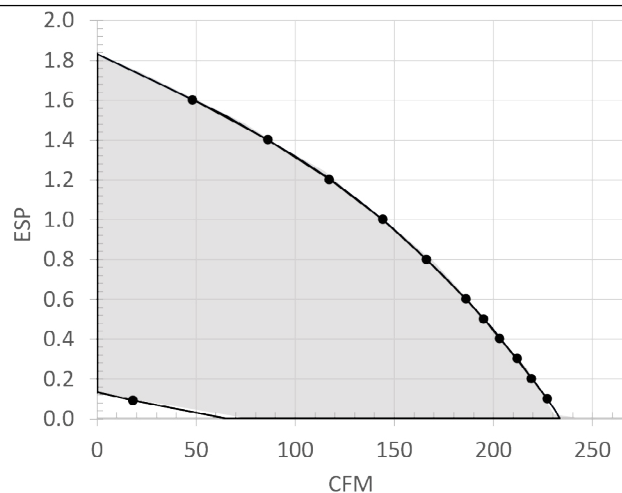


CORE PERFORMANCE

Airflow (CFM)	Sensible EFF%	Total EFF% Winter/Summer
Max. Speed		
233	58	49/26
225	59	50/27
216	60	51/28
210	61	52/30
201	62	53/32
193	63	54/34
184	64	56/36
176	66	57/38
163	67	59/40
150	69	61/42
117	73	67/49
86	77	72/56
48	82	78/63
Min. Speed		
18	86	84/71

Note: These are core-only ratings and are not HVI certified. Total EFF% calculated at 35/33wb OA and 70/58wb RA (winter) and 98/78wb OA and 75/63wb RA (summer). HVI ratings apply to complete units only. This unit is HVI certified. See HVI certified ratings on pg. 46 of Single/Multi-Family Catalog and at hvi.org.

EV Premium M Energy Recovery Ventilator EC Motor



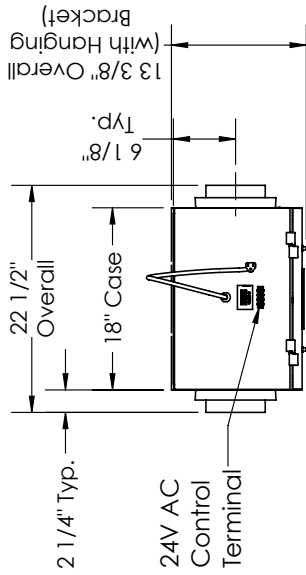


ABBREVIATIONS
 EA: Exhaust Air to outside
 OA: Outside Air Intake
 RA: Room Air to be exhausted
 SA: Supply Air to inside

INSTALLATION ORIENTATION
 Unit may be installed in any orientation.

NOTE
 1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

TOP VIEW

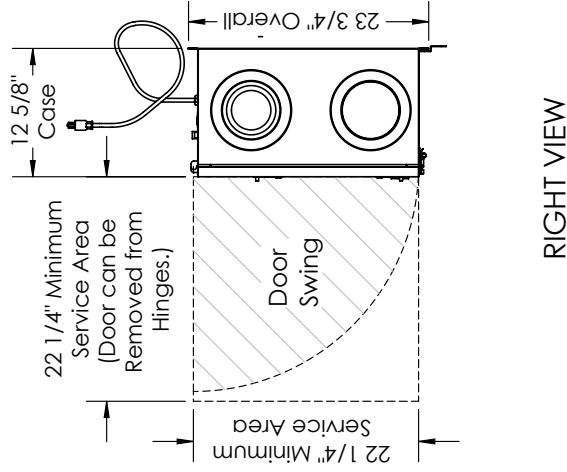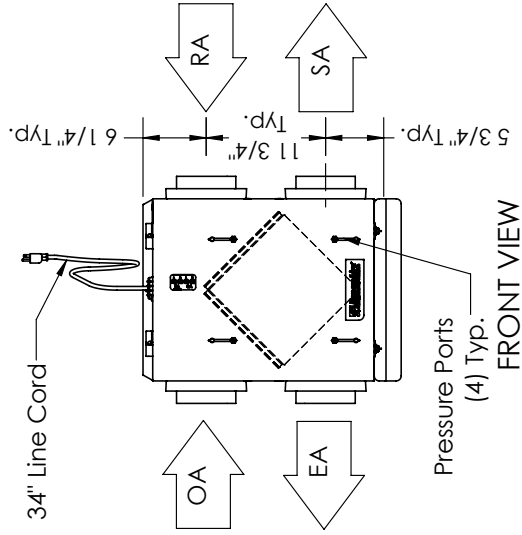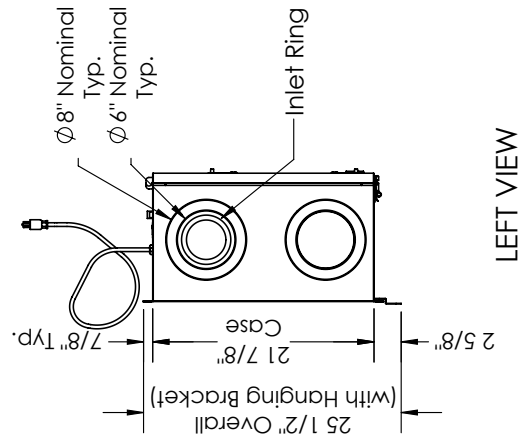




PREMIUM MH

Energy Recovery Ventilator EC Motor



INDOOR UNIT

NEW

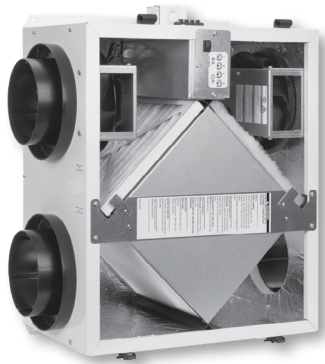

SPECIFICATIONS

Ventilation Type:

Static plate, heat and humidity transfer

Typical Airflow Range: 30–225 CFM

Unit is HVI Tested/Certified per CSA C439

Protocol: Using one L-50-G5 Core

Standard Features:

White painted cabinet
Hard wired to junction box
Low-voltage circuit for controls
Unit may be mounted in any orientation
Cross-core differential pressure ports
Dial-A-Flow: balance and airflow adjustment
Variable speed
Boost-mode

Controls:

Onboard digital controller with independent variable speeds

Filters:

Total qty. 2, MERV 8, spun-polyester media:
10 1/2" x 10 1/2" x 1"

Unit Weight: 36 lbs.

Max. Shipping Dimensions & Weight (in carton):

32" L x 22" W x 18" H
48 lbs.

Motor(s):

Qty. 2, 120V EC motorized impellers

Accessories:

Backdraft damper: 6", 8"
Automatic balancing damper: 4", 5", 6"
Louvered wall vent 6": white, brown
Louvered wall vent 8": taupe vinyl, galvanized, paintable galvalume
Louvered wall vent with 8" round duct connection: 12" W x 8" H
Hooded wall vent 8": galvanized, paintable galvalume
Digital time clock: wall mount (TC7D-W), in exterior enclosure (TC7D-E)
Carbon dioxide sensor/control: wall mount (CO2-W), duct mount (CO2-D)
IAQ sensor: wall mount (IAQ-W), duct mount (IAQ-D)
Motion occupancy sensor/control: ceiling mount (MC-C), wall mount (MC-W)
Push-button boost timer (PBT)
Percentage timer control (PTL)
Percentage timer control with furnace interlock (FM)
Push-button point-of-use controls (PBL), PTL req'd.
MERV 13 filter: OA airstream (shipped loose)
Electric duct heater: RH series (1–6 kW); designed for indoor ductwork installation only

EC MOTOR OPERATING RANGE

Sample Points Depicted in Larger Dots		
Airflow (CFM)	External Static Pressure (Inches Water Column)	Unit Power Consumption (Watts)
Max. Speed		
233	0.1	179
225	0.2	176
216	0.3	177
210	0.4	174
201	0.5	173
193	0.6	172
184	0.7	170
176	0.8	168
163	0.9	166
150	1.0	162
117	1.2	148
86	1.4	134
48	1.6	112
Min. Speed		
18	0.1	16


Note: Watts is for the entire unit.

Note: Airflow performance includes effect of clean, standard filter supplied with unit.

Note: Refer to CORES for specific operating point electrical data.

ELECTRICAL DATA

Watts	Volts	Hz	Phase	FLA per motor	Min. Cir. Amps	Max. Overcurrent Protection Device
85	120	60	1	1.22	10	10

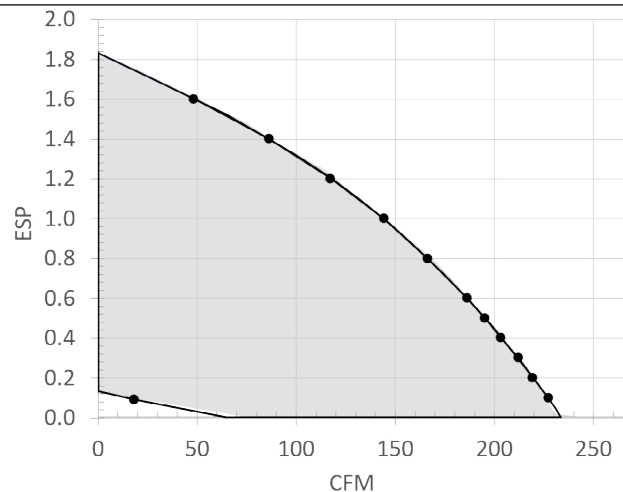

CORE PERFORMANCE

Airflow (CFM)	Sensible EFF%	Total EFF% Winter/Summer
Max. Speed		
233	58	49/26
225	59	50/27
216	60	51/28
210	61	52/30
201	62	53/32
193	63	54/34
184	64	56/36
176	66	57/38
163	67	59/40
150	69	61/42
117	73	67/49
86	77	72/56
48	82	78/63
Min. Speed		
18	86	84/71


Note: These are core-only ratings and are not HVI certified. Total EFF% calculated at 35/33wb OA and 70/58wb RA (winter) and 98/78wb OA and 75/63wb RA (summer). HVI ratings apply to complete units only. This unit is HVI certified. See HVI certified ratings on pg. 46 of Single/Multi-Family Catalog and at hvi.org.

EV Premium MH Energy Recovery Ventilator EC Motor



ABBREVIATIONS
 EA: Exhaust Air to outside
 OA: Outside Air intake
 RA: Room Air to be exhausted
 SA: Supply Air to inside

INSTALLATION ORIENTATION
 Unit may be installed in any orientation.

NOTE
 1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

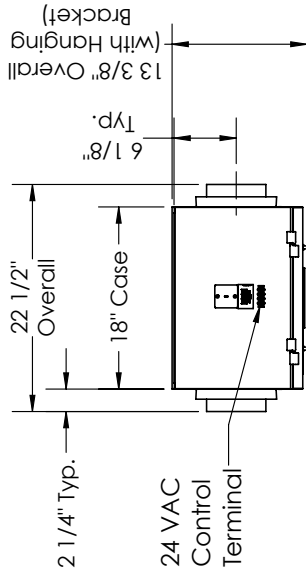

TOP VIEW

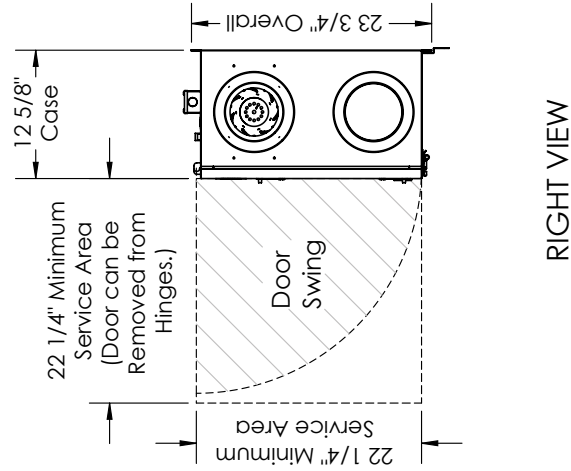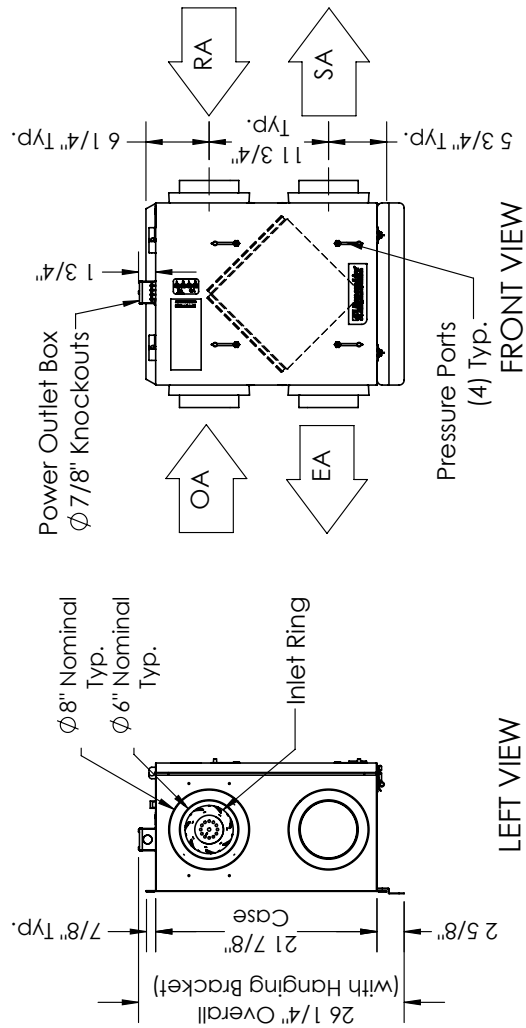




PREMIUM L

Energy Recovery Ventilator EC Motor



INDOOR UNIT

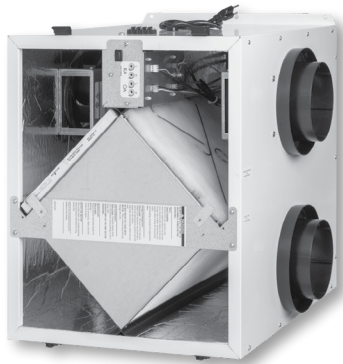

SPECIFICATIONS

Ventilation Type:

Static plate, heat and humidity transfer

Typical Airflow Range: 30–280 CFM

Unit is HVI Tested/Certified per CSA C439

Protocol: Using one L-100-G5 Core

Standard Features:

White painted cabinet
Line-cord power supply
Low-voltage circuit for controls
Unit may be mounted in any orientation
Cross-core differential pressure ports
Dial-A-Flow: balance and airflow adjustment
Variable speed
Boost-mode

Controls:

Onboard digital controller with independent variable speeds

Filters:

Total qty. 2, MERV 8, spun-polyester media:
10 1/2" x 21 3/4" x 1"

Unit Weight: 52 lbs.

Max. Shipping Dimensions & Weight (in carton):

33" L x 22" W x 29" H
66 lbs.

Motor(s):

Qty. 2, 120V EC motorized impellers

Accessories:

Backdraft damper: 6", 8"
Automatic balancing damper: 4", 5", 6"
Louvered wall vent 6": white, brown
Louvered wall vent 8": taupe vinyl, galvanized, paintable galvalume
Louvered wall vent with 8" round duct connection: 12" W x 8" H
Hooded wall vent 8": galvanized, paintable galvalume
Digital time clock: wall mount (TC7D-W), in exterior enclosure (TC7D-E)
Carbon dioxide sensor/control: wall mount (CO2-W), duct mount (CO2-D)
IAQ sensor: wall mount (IAQ-W), duct mount (IAQ-D)
Motion occupancy sensor/control: ceiling mount (MC-C), wall mount (MC-W)
Push-button boost timer (PBT)
Percentage timer control (PTL)
Percentage timer control with furnace interlock (FM)
Push-button point-of-use controls (PBL), PTL req'd.
MERV 13 filter: OA airstream (shipped loose)
Electric duct heater: RH series (1–8 kW); designed for indoor ductwork installation only

EC MOTOR OPERATING RANGE

Sample Points Depicted in Larger Dots		
Airflow (CFM)	External Static Pressure (Inches Water Column)	Unit Power Consumption (Watts)
Max. Speed		
288	0.1	177
280	0.2	178
269	0.3	179
261	0.4	180
252	0.5	180
244	0.6	180
233	0.7	179
222	0.8	179
212	0.9	178
199	1.0	176
170	1.2	170
136	1.4	160
93	1.6	142
36	1.8	110
Min. Speed		
67	0.1	19
36	0.2	17


Note: Watts is for the entire unit.

Note: Airflow performance includes effect of clean, standard filter supplied with unit.

Note: Refer to CORES for specific operating point electrical data.

ELECTRICAL DATA

Watts	Volts	Hz	Phase	FLA per motor	Min. Cir. Amps	Max. Overcurrent Protection Device
85	120	60	1	1.22	10	10

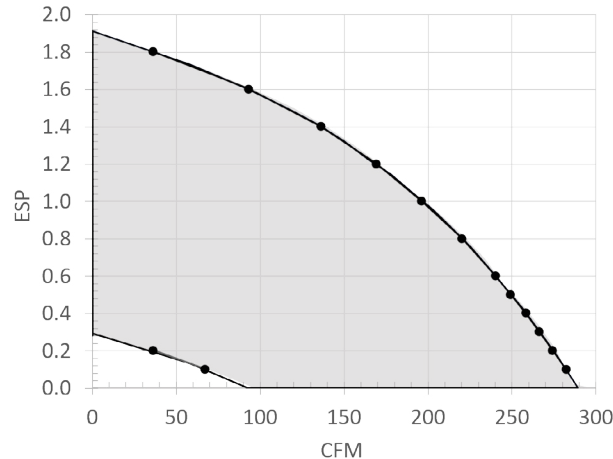

CORE PERFORMANCE

Airflow (CFM)	Sensible EFF%	Total EFF% Winter/Summer
Max. Speed		
288	71	63/45
280	71	64/46
269	72	65/47
261	72	65/48
252	73	66/49
244	73	67/50
233	74	68/51
222	75	69/52
212	75	69/53
199	76	70/54
170	78	73/57
136	80	75/60
93	83	79/64
36	86	83/69
Min. Speed		
67	85	81/67
36	86	83/69


Note: These are core-only ratings and are not HVI certified. Total EFF% calculated at 35/33wb OA and 70/58wb RA (winter) and 98/78wb OA and 75/63wb RA (summer). HVI ratings apply to complete units only. This unit is HVI certified. See HVI certified ratings on pg. 46 of Single/Multi-Family Catalog and at hvi.org.

EV Premium L Energy Recovery Ventilator EC Motor


ABBREVIATIONS
 EA: Exhaust Air to outside
 OA: Outside Air intake
 RA: Room Air to be exhausted
 SA: Supply Air to inside

INSTALLATION ORIENTATION
 Unit may be installed in any orientation.

NOTE
 1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

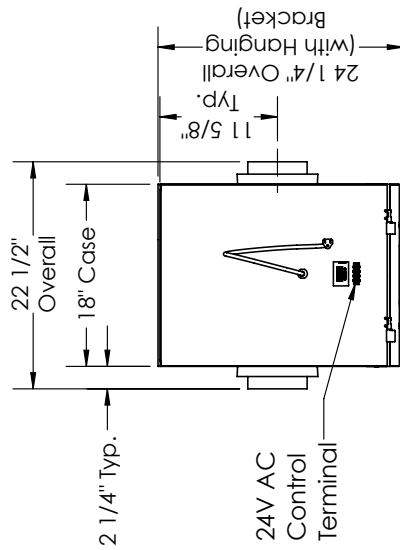

TOP VIEW

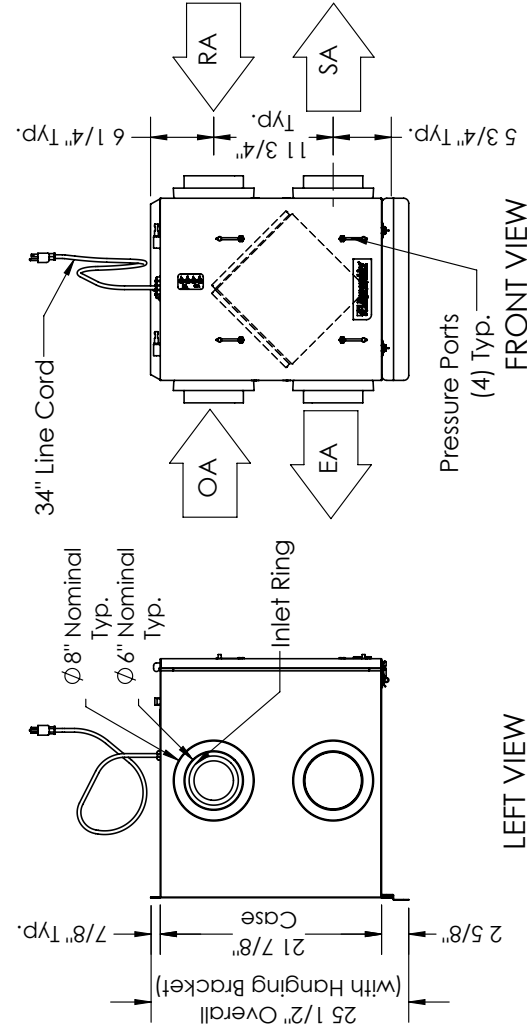

LEFT VIEW

FRONT VIEW


RIGHT VIEW



PREMIUM LH

INDOOR UNIT

NEW

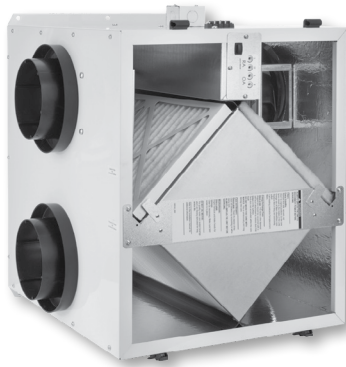

Energy Recovery Ventilator EC Motor



SPECIFICATIONS

Ventilation Type:

Static plate, heat and humidity transfer

Typical Airflow Range: 30–280 CFM

Unit is HVI Tested/Certified per CSA C439

Protocol: Using one L-100-G5 Core

Standard Features:

White painted cabinet
Hard wired to junction box
Low-voltage circuit for controls
Unit may be mounted in any orientation
Cross-core differential pressure ports
Dial-A-Flow: balance and airflow adjustment
Variable speed
Boost-mode

Controls:

Onboard digital controller with independent variable speeds

Filters:

Total qty. 2, MERV 8, spun-polyester media:
10 1/2" x 21 3/4" x 1"

Unit Weight: 52 lbs.

Max. Shipping Dimensions & Weight (in carton):

33" L x 22" W x 29" H
66 lbs.

Motor(s):

Qty. 2, 120V EC motorized impellers

Accessories:

Backdraft damper: 6", 8"
Automatic balancing damper: 4", 5", 6"
Louvered wall vent 6": white, brown
Louvered wall vent 8": taupe vinyl, galvanized, paintable galvalume
Louvered wall vent with 8" round duct connection: 12" W x 8" H
Hooded wall vent 8": galvanized, paintable galvalume
Digital time clock: wall mount (TC7D-W), in exterior enclosure (TC7D-E)
Carbon dioxide sensor/control: wall mount (CO2-W), duct mount (CO2-D)
IAQ sensor: wall mount (IAQ-W), duct mount (IAQ-D)
Motion occupancy sensor/control: ceiling mount (MC-C), wall mount (MC-W)
Push-button boost timer (PBT)
Percentage timer control (PTL)
Percentage timer control with furnace interlock (FM)
Push-button point-of-use controls (PBL), PTL req'd.
MERV 13 filter: OA airstream (shipped loose)
Electric duct heater: RH series (1–8 kW); designed for indoor ductwork installation only

EC MOTOR OPERATING RANGE

Sample Points Depicted in Larger Dots		
Airflow (CFM)	External Static Pressure (Inches Water Column)	Unit Power Consumption (Watts)
Max. Speed		
288	0.1	177
280	0.2	178
269	0.3	179
261	0.4	180
252	0.5	180
244	0.6	180
233	0.7	179
222	0.8	179
212	0.9	178
199	1.0	176
170	1.2	170
136	1.4	160
93	1.6	142
36	1.8	110
Min. Speed		
67	0.1	19
36	0.2	17


Note: Watts is for the entire unit.

Note: Airflow performance includes effect of clean, standard filter supplied with unit.

Note: Refer to CORES for specific operating point electrical data.

ELECTRICAL DATA

Watts	Volts	Hz	Phase	FLA per motor	Min. Cir. Amps	Max. Overcurrent Protection Device
85	120	60	1	1.22	10	10

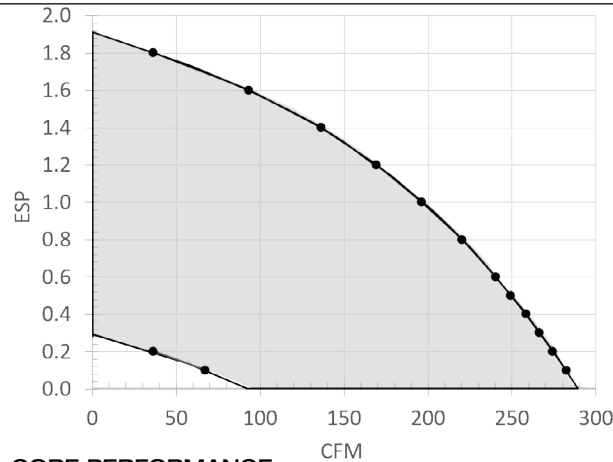

CORE PERFORMANCE

Airflow (CFM)	Sensible EFF%	Total EFF% Winter/Summer
Max. Speed		
288	71	63/45
280	71	64/46
269	72	65/47
261	72	65/48
252	73	66/49
244	73	67/50
233	74	68/51
222	75	69/52
212	75	69/53
199	76	70/54
170	78	73/57
136	80	75/60
93	83	79/64
36	86	83/69
Min. Speed		
67	85	81/67
36	86	83/69


Note: These are core-only ratings and are not HVI certified. Total EFF% calculated at 35/33wb OA and 70/58wb RA (winter) and 98/78wb OA and 75/63wb RA (summer). HVI ratings apply to complete units only. This unit is HVI certified. See HVI certified ratings on pg. 46 of Single/Multi-Family Catalog and at hvi.org.

EV Premium LH Energy Recovery Ventilator EC Motor


ABBREVIATIONS
 EA: Exhaust Air to outside
 OA: Outside Air intake
 RA: Room Air to be exhausted
 SA: Supply Air to inside

INSTALLATION ORIENTATION
 Unit may be installed in any orientation.


NOTE
 1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.
 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

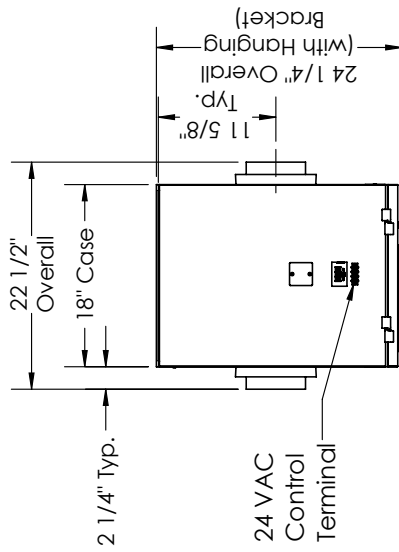

TOP VIEW

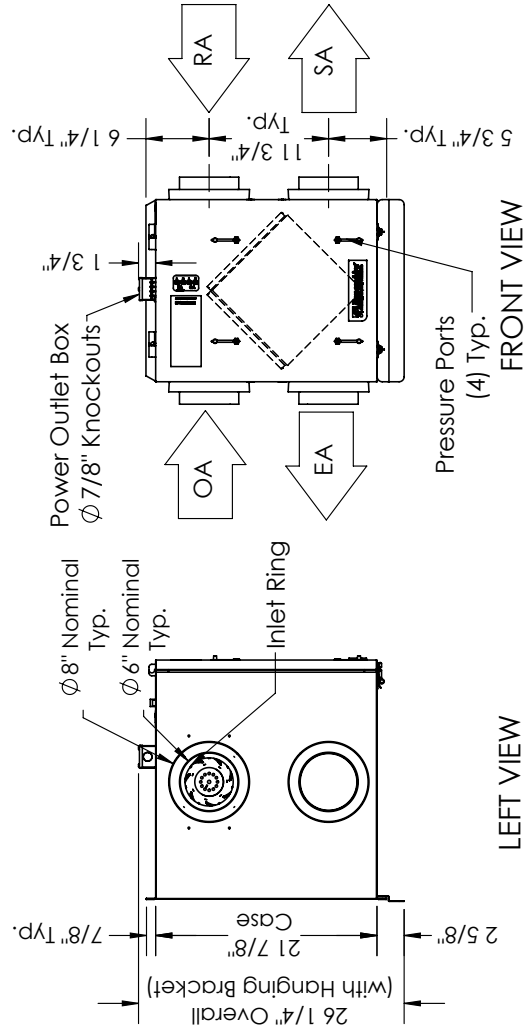

LEFT VIEW

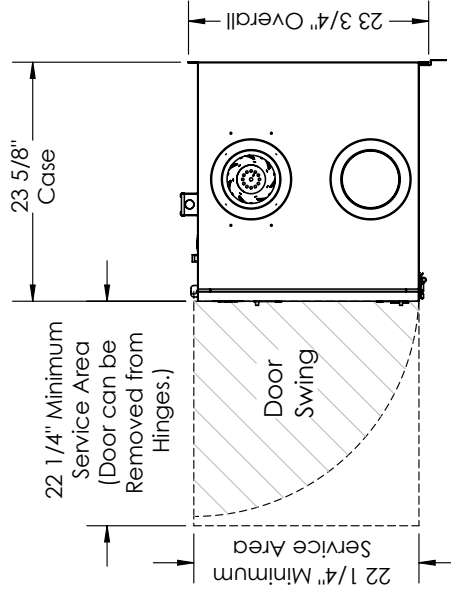

RIGHT VIEW

1.0 OVERVIEW	18	5.0 OPERATION	30
1.1 DESCRIPTION	18	5.1 MANOMETER READINGS AT COMMISSIONING	30
1.2 OPERATING MODES	18	5.2 AIRFLOW READINGS AT COMMISSIONING.....	30
1.3 UNIT WEIGHTS.....	19	5.2.1 Conversion of Pressure Drop to Airflow	30
		5.2.2 Continuous Mode (low speed)	31
		5.2.3 Boost Mode (high speed)	31
2.0 COMPONENT DESCRIPTION	19	6.0 MAINTENANCE	32
2.1 CABINET	19	6.1 MAINTENANCE AFTER 30 DAYS OPERATION	32
2.1.1 Removable Door with Interlock Switch	19	6.2 RECALIBRATION OF AIRFLOWS	32
2.2 FANS.....	19	6.3 DOOR REMOVAL	32
2.3 CONTROLLER	19	6.4 SERVICE PARTS.....	33
2.3.1 Controller Power Supply	20		
2.4 DUCTS	20	7.0 TROUBLESHOOTING	33
2.5 ENTHALPIC CORE	22	7.1 INDICATION OF PROBLEM	33
2.6 FILTERS	22	7.2 EV PREMIUM HAS AIRFLOW BUT IS MAKING NOISE.....	33
2.7 CONTROLS TERMINAL STRIP	22	7.3 NO APPARENT AIRFLOW FROM THE EV PREMIUM	34
3.0 UNIT PLACEMENT	23	7.4 INADEQUATE OR REDUCED AIRFLOW FROM THE EV PREMIUM	35
3.1 MOUNTING THE UNIT	23	7.5 EV PREMIUM FAILS TO RUN IN EITHER LOW SPEED OR HIGH SPEED.....	35
3.2 SERVICE CLEARANCES	23	7.6 NO APPARENT REASON FOR LOW AIRFLOW	35
3.3 AC POWER SOURCE.....	24		
3.3.1 EV Premium S, M, L	24	8.0 FACTORY ASSISTANCE	35
3.3.2 EV Premium SH, MH, LH	24		
3.4 LOAD BEARING CAPACITY OF SUPPORTS	24		
4.0 INSTALLATION	24		
4.1 USER-SUPPLIED INSTALLATION MATERIALS.....	24		
4.2 FACTORY-RECOMMENDED ELECTRIC SERVICE ENTRY.....	24		
4.2.1 EV Premium S, M, L	24		
4.2.2 EV Premium SH, MH, LH	24		
4.3 FACTORY-RECOMMENDED LOW-VOLTAGE SERVICE ENTRY.....	24		
4.4 ATTACHING DUCTS	25		
4.5 SELECTING AIRFLOW SETTINGS.....	25		
4.6 BALANCING AIRFLOWS	25		
4.7 WIRING SCHEMATICS.....	27		
4.8 LOW-VOLTAGE WIRING DIAGRAMS	29		
4.8.1 Single Speed Modes CONTINUOUS.....	29		
4.8.2 Low Speed CONTINUOUS/High Speed SWITCHED	29		

TABLE OF ILLUSTRATIONS

Figure 1.2.0 EV Premium Cutaway View	18
Figure 2.1.0 Pressure Port Locations	19
Figure 2.4.0 Airstream Illustration	21
Figure 2.4.1 Separate Return Air Pick-up—Supply Air to Furnace Return Air Trunk	21
Figure 2.4.2 Separate Return Air and Supply Air	21
Figure 2.4.3 Furnace Return Air back into Return Air	21
Figure 2.4.4 Furnace Return Air back into Supply Air	21
Figure 2.6.0 EV Premium Filter Locations	22
Figure 2.7.0 Controls Terminal Strip.	22
Figure 3.1.0 Mounting the ERV to a Stud Wall	23
Figure 4.6.0 Pressure Port Locations	26
Figure 4.6.1 Fan Speed Control Potentiometers	26
Figure 4.7.0 EV Premium Wiring Schematic	27
Figure 4.7.1 EV Premium Hard-Wired Schematic	28
Figure 4.8.0 Low-Voltage Wiring Diagram 1	21
Figure 5.2.0 Pressure Drop to Airflow Conversions	31
Figure 6.4.0 EV Premium Service Parts	32

1.0 OVERVIEW

1.1 DESCRIPTION

The EV Premium ERVs are multi-speed air-to-air energy recovery ventilators that are designed for residential application and have multiple installation options. They can be suspended from floor joists, or they can be mounted on a wall or other object. Each type of installation can be accomplished by a single person. The EV Premium S, M, and L have an integral line cord, ready to be plugged into a standard 120VAC receptacle. The EV Premium SH, MH, and LH need to be hard-wired by the installer.

The ERV exhausts stale Return Air (RA) while transferring both latent and sensible energy between an incoming fresh outdoor airstream (OA). Energy recovery is accomplished by a static plate heat exchanger core. Each airstream has a 120V EC fan, which provides airflow from 30 to 130 CFM for the EV Premium S/SH, from 30 to 225 CFM for the EV Premium M/MH, and from 30 to 280 CFM for the EV Premium L/LH.

The airflow rate can be changed from Continuous to Boost at any time, using many different optional sensors or control devices.


The unit may operate with balanced or unbalanced airflow. However, balanced airflow provides the best energy recovery. Airflow can be adjusted using the motor potentiometers and the values read via the door pressure taps.


The hinged door has an opening for viewing and access to the potentiometers. The entire cabinet is lined with foil-backed 1" thick foam insulation.


1.2 OPERATING MODES

The EV Premium has two different operating modes: Continuous and Boost. Continuous mode should be set to provide the minimum ventilation requirement. Boost mode can be used to supply and exhaust a greater volume of air, up to 130 CFM for the EV Premium S/SH, up to 225 CFM for the EV Premium M/MH, or 280 CFM for the EV Premium L/LH.

The two operating modes are selectable and controlled independently so that different controlling methods can be used to switch back and forth. Example: an IAQ sensor could be used to switch the unit to Boost mode.

 **NOTE:** This unit is an Energy Recovery Ventilator, or ERV. It is commonly referred to throughout this manual as an ERV.

 **NOTE:** Sensible energy is often referred to as "heat energy."

 **NOTE:** Latent energy is often referred to as "moisture energy."

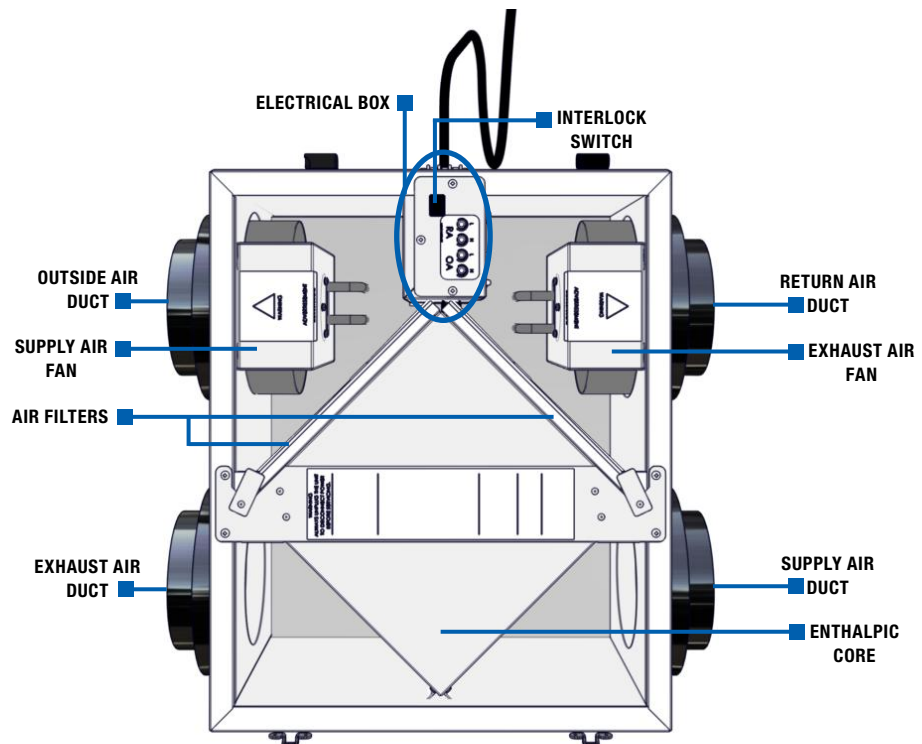


FIGURE 1.2.0 EV PREMIUM CUTAWAY VIEW

1.3 UNIT WEIGHTS

The hanging weight of each EV Premium S/SH is approximately 32 pounds.
The hanging weight of each EV Premium M/MH is approximately 36 pounds.
The hanging weight of each EV Premium L/LH is approximately 52 pounds.

The shipping weight of each EV Premium S/SH is approximately 38 pounds.
The shipping weight of each EV Premium M/MH is approximately 48 pounds.
The shipping weight of each EV Premium L/LH is approximately 66 pounds.

2.0 COMPONENT DESCRIPTION

2.1 CABINET

The cabinet is built of 22 gauge (0.64 mm) galvanized steel and is painted white. It has a hinged, removable door. The exterior of the unit boasts four air pressure test ports, one low-voltage terminal strip, an access/viewing port, and locations for four duct connectors, (6" or 8", shipped loose).

2.1.1 Removable Door with Interlock Switch

The insulated access door is hinged on one side and has two securing latches on the other side. The hinges are separable to allow for removal of the access door for servicing. The door has an access/viewing port built in to permit adjustment of the fan potentiometers. Directly behind the access door is a pressure-sensitive interlock switch that will shut off power to the unit if the door is opened during operation. Also installed on the door are four air pressure test ports, used for connecting a manometer and taking air pressure measurements.

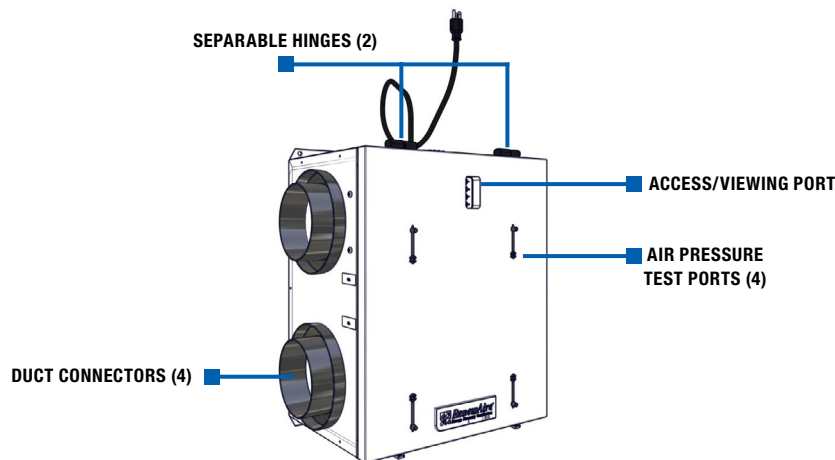


FIGURE 2.1.0 PRESSURE PORT LOCATIONS

2.2 FANS

The EV Premium has two advanced, high efficiency electronically commutated (EC) 120VDC variable speed fans. One fan is used for intake air (Outdoor Air/Supply Air) and the other fan is for the exhaust airstream (Return Air/Exhaust Air). The speed of each fan is controlled independently by a 0–10VDC signal from the controller.

2.3 CONTROLLER

The controller provides the signal to the EC motors using integral potentiometers. Incoming line voltage powers both fans and also a step-down Class II transformer which provides 24VAC to the externally-mounted low-voltage terminal strips. The controller has four potentiometers that are adjusted by the user to establish fan speeds for each operation mode.

2.3.1 Controller Power Supply

Each EV Premium has one terminal strip mounted on the end of the unit. The terminal strip is a 24VAC power supply terminal. The unit control board provides up to 6VA (approximately 0.25A) which can be used to power the various optional control accessories.

2.4 DUCTS



NOTE: If you wish to install the unit in an attic or other unconditioned space, you must insulate all of the unit's ductwork that is located in the attic. Use at least R-6 insulation.

IMPORTANT

It is important to understand and use the equipment airstream terminology as it is used in this manual. The airstreams are defined as:

- **Outside Air (OA):** Air taken from the external atmosphere and, therefore, not previously circulated through the system.
- **Supply Air (SA):** Air that is downstream of the enthalpic core and is either supplied to the occupied space or to an additional conditioner.
- **Conditioned Air (CA):** Air that is supplied to an occupied space.
- **Return Air (RA):** Air that is returned to a heating or cooling appliance from a conditioned space.
- **Exhaust Air (EA):** Air that is removed from a heating or cooling appliance and discharged.

EV Premium units are supplied with a set of 4 duct connectors that must be field-installed. The connectors can be used for either 6" round or 8" round ducts. It is preferable to keep duct runs short and straight to maximize performance.

For all installations, SMACNA guidelines for duct installation should be followed. The most commonly-used ducting is 6" diameter flexible due to ease of installation, sound attenuation, and cost, however, rigid ducting is preferred because there is less resistance to airflow, resulting in less power consumption to deliver the same amount of air.

A total of four duct runs will generally be used:

- One duct will provide clean outdoor air (Outside Air) to the EV Premium. This duct will normally be capped by an air inlet cap mounted on the exterior side wall of a residence and equipped with a bird screen.
Wall intakes must be located at least 10' from any appliance vent or any vent opening from a plumbing drainage system. Wall intakes must also be 10' from any exhaust fan discharge outlet unless that outlet is 3' or more above the intake location. (IRC 2006, Section M1602.2)
- One duct will be needed to exhaust stale air (Exhaust Air) to the outdoors. This duct will normally end at an exhaust cap located on an exterior wall of a residence.
- One duct will be needed to deliver fresh, conditioned air (Supply Air) from the EV Premium to a desired location in the residence. The Supply Air duct may end in a floor or wall grate with an area of at least 28 square inches. Alternatively, the Supply Air duct may be connected directly into the return air duct or the supply air duct for the main heating and cooling system. When connecting to the main return air duct, it must be at least 3' from the return plenum to minimize suction from the furnace blower.
- One duct is used to collect indoor air (Return Air), running from return grilles through the energy exchange core in the EV Premium before being exhausted to the outdoors.

If the EV Premium is located in a conditioned space, only the OA and EA ducts need to be insulated.

If it is installed in an unconditioned space such as an attic or crawl space, the SA, OA, RA, and EA ducts must be insulated.



NOTE: Ducts inside a building that are connected to the outside must be insulated with a sealed vapor barrier on both the inside and the outside of the insulation.

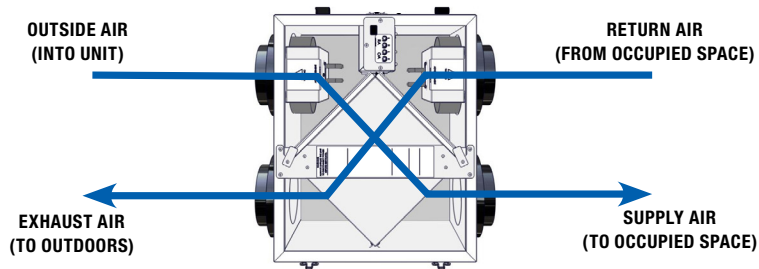


FIGURE 2.4.0 AIRSTREAM ILLUSTRATION

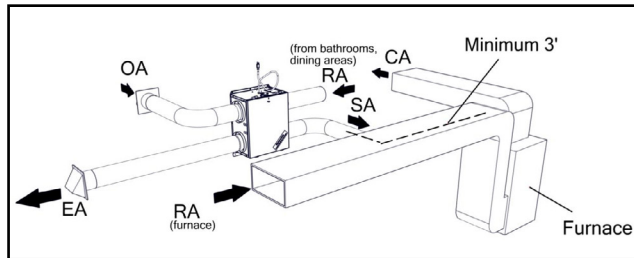


FIGURE 2.4.1 SEPARATE RETURN AIR PICK-UP—SUPPLY AIR TO FURNACE RETURN AIR TRUNK

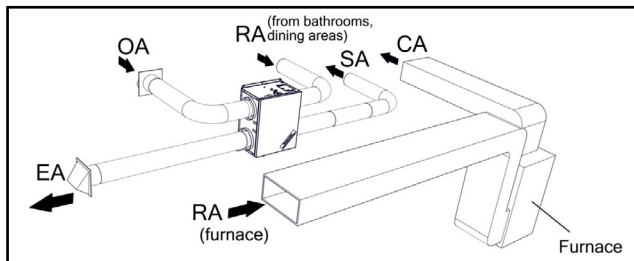


FIGURE 2.4.2 SEPARATE RETURN AIR AND SUPPLY AIR

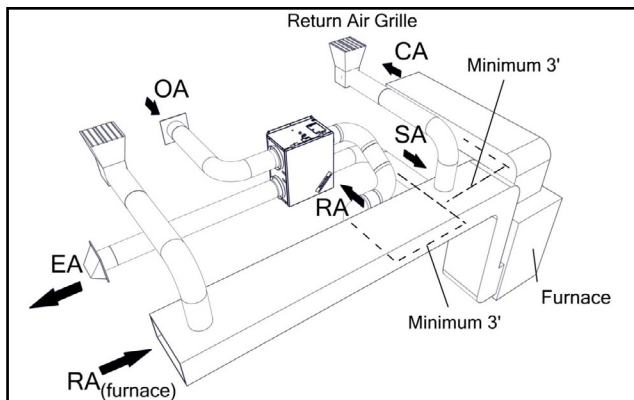


FIGURE 2.4.3 FURNACE RETURN AIR BACK INTO RETURN AIR

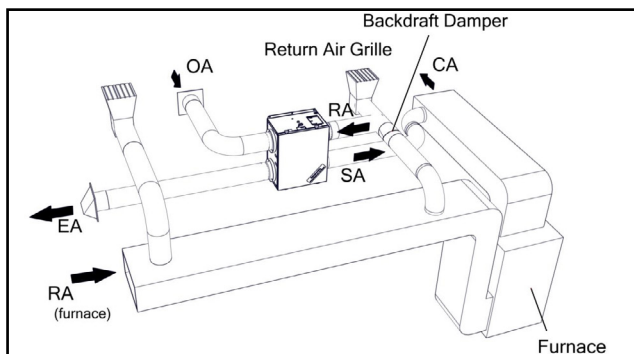


FIGURE 2.4.4 FURNACE RETURN AIR BACK INTO SUPPLY AIR



NOTE: ERV blower may be operated separate from furnace blower.



NOTE: ERV blower may be operated independently from furnace blower.

Use caution to introduce FA at low velocity and where good mixing will occur to minimize discomfort from drafts



NOTE: For the setup in Figure 2.4.3, the furnace blower must be operated any time the ERV is operated. Use furnace fan "on" continuous low speed or optional FM control to cycle furnace fan on ERV.



NOTE: ERV blower may be operated separate from furnace blower.

NOTE: The cores used in all ERVs are static plate enthalpic cores. They are commonly referred to in this manual as “cores.”

2.5 ENTHALPIC CORE

Each EV Premium has a static-plate, cross-flow core separates the outgoing, polluted indoor airstream from the incoming supply airstream—while simultaneously transferring total energy (heat and water vapor) between the two. Airstreams do not mix, and pollutants are not transferred across partition plates.

2.6 FILTERS

Each EV Premium is equipped at the factory with mesh-type anti-microbial MERV 8 filters on both the OA and RA sides of the core. If desired, the mesh-type OA filter can be replaced with an optional MERV 13 pleated paper filter accessory, which will ship loose.

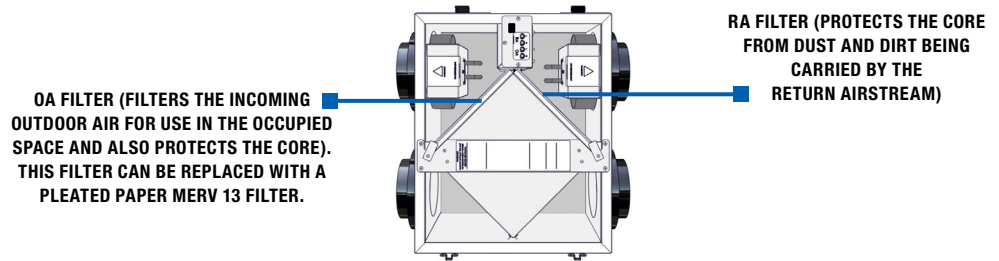


FIGURE 2.6.0 EV PREMIUM FILTER LOCATIONS

2.7 CONTROLS TERMINAL STRIP

A single terminal strip is located at the end of each EV Premium, providing a 24VAC connection to Boost mode or to control accessories. For detailed information, see the Low-Voltage Wiring Diagrams in Section 4.8 of this manual.

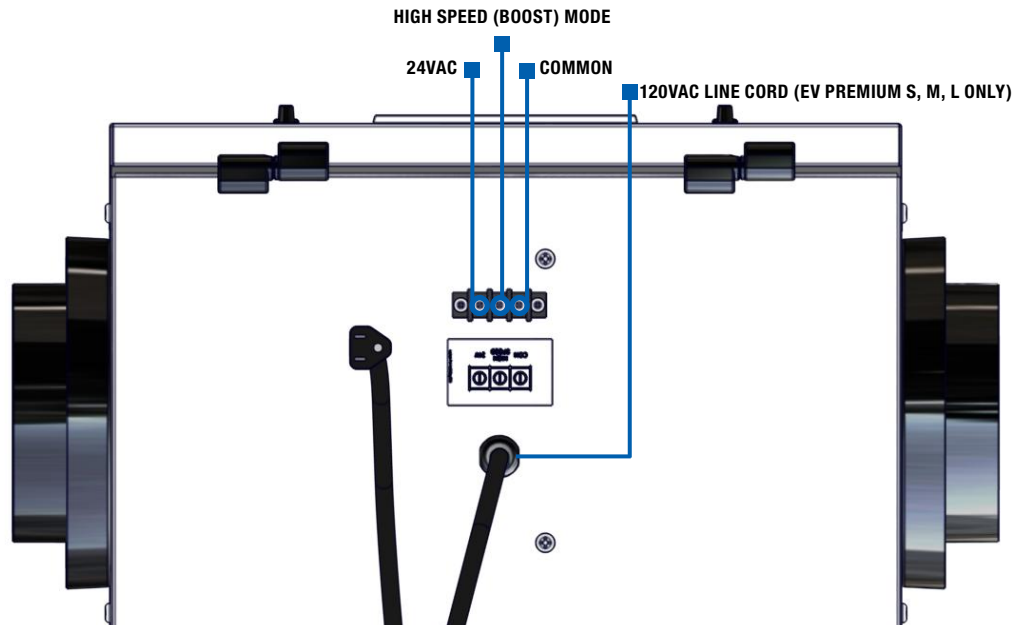


FIGURE 2.7.0 CONTROLS TERMINAL STRIP

3.0 UNIT PLACEMENT

RenewAire recommends installation of the EV Premium by a professional HVAC installer with knowledge of local building codes who is able to properly balance the air streams prior to use. The EV Premium can be installed by one person.

3.1 MOUNTING THE UNIT

- **UNIT MAY BE INSTALLED IN ANY ORIENTATION**

Orient the unit for the simplest duct layout and connections.

May be installed in any position providing sufficient clearance as shown in the front of this manual. Preferred position is horizontal so that the hinged access door can swing down to allow for easiest filter changes and cleaning of the enthalpic core.

- **MOUNTING THE EV PREMIUM ON A CONCRETE FOUNDATION WALL OR STUD WALL**

Mount hanging bracket to the wall with appropriate concrete anchors. Use pre-cut foam tape from small parts bag. Remove backing and apply two pieces of foam tape equally spaced along the unit's mounting flange to be held by the hanging bracket. Apply the other two pieces of foam over two holes that will be used for fastening, on the other flange. The tape should be applied in a "U" shape to cushion both the front and back of the integral flanges.

Lift unit and slide unit flange into the hanging bracket. Using metal flat washers, fasten flange opposite hanging bracket to structure. Safety screws should similarly be installed passing through the hanging bracket and flange. Make sure the screws, which you must supply, are properly selected for the loads and substrate involved, 2" x #10 pan head screws are recommended.

- **SUSPENDING THE EV PREMIUM FROM FLOOR JOISTS OR TRUSSES**

The unit may be screwed directly to joists or trusses using the hanging bracket and integral flange. Mount as described for mounting to concrete foundation wall.

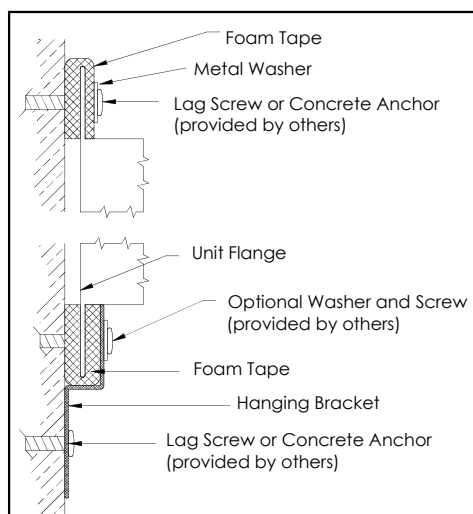


FIGURE 3.1.0 MOUNTING THE ERV TO A STUD WALL

3.2 SERVICE CLEARANCES

Primary consideration is sufficient space to open door latches and for the door to be able to swing open at least 90°. See the dimensioned drawing in the front of this manual for required clearances.



NOTE: If you wish to install the unit in an attic or other unconditioned space, you must insulate all of the unit's ductwork that is located in the attic. Use at least R-6 insulation.



NOTE: The door is equipped with slide-off hinges. For the homeowner's convenience, it is helpful to orient the unit so that the door is easily removed when unlatched.



NOTE: Do not over-tighten the screws. Compression of the gasket may result in vibration transfer.



NOTE: Wall brackets must be supported by two wall studs. If the desired location of the EV Premium does not permit support by two wall studs, the EV Premium must be mounted on a user-supplied 3/4" thick plywood panel that is anchored on two wall studs.

CAUTION

Risk of injury when lifting unit and installing it overhead.

3.3 AC POWER SOURCE

3.3.1 EV Premium S, M, L

Power requirements: 120VAC, 3.0 amps

The EV Premium S, M, and L have an integral 34" long power supply cord. The installer must provide a standard, grounded 120VAC outlet in the proximity of the ERV. Check all local codes.

3.3.2 EV Premium SH, MH, LH

Power requirements: 120 VAC, 3.0 amps

The EV Premium SH, MH, and LH are to be hard-wired by the installer. Check all local codes before wiring. A disconnect switch on the AC supply line may be required.

3.4 LOAD BEARING CAPACITY OF SUPPORTS

The EV Premium ERV is to be installed by attachment to building structural members such as joists, bar joists, beams, wall studs, and columns. It is not to be supported by attachment to fixtures such as ductwork or air handlers unless the fixtures are permanently installed and capable of providing adequate support. Whenever an ERV is installed on or supported by a fixture, the installation must be approved by a design engineer.

4.0 INSTALLATION

⚠ CAUTION

RISK OF INJURY FROM FALLING OBJECTS

Installation of this unit requires hoisting hardware overhead and working directly beneath heavy objects during the installation process. Observe all OSHA-approved work practices. Always wear OSHA-approved Personal Protective Equipment (PPE).

4.1 USER-SUPPLIED INSTALLATION MATERIALS

RenewAire suggests the use of a duct hoist for hoisting the EV Premium into position.

For all installations:

- Medium-strength thread-lock,
- UL-181—rated mastic for duct connections,
- Common hand tools such as pliers, drill, screwdriver bits, stud finder, etc.

4.2 FACTORY-RECOMMENDED ELECTRIC SERVICE ENTRY

4.2.1 EV Premium S, M, L

The EV Premium S, M, and L have a factory-installed 34" line cord that will need to be plugged into a 120V receptacle for operation.

4.2.2 EV Premium SH, MH, LH

The EV Premium SH, MH, and LH are to be hard-wired by the installer. Entry of electric supply wiring is to be through the junction box provided on the unit. The junction box measures 2" x 2" and contains 4" of free length of wire leads. There are 2 knockouts on opposite sides of the junction box that support 1/2" trade size metal conduit. Junction box can be remounted 90 degrees to reposition the knockouts as necessary. It may be easier to mount the unit and connect to the junction box before installing the provided duct collars and ductwork.

4.3 FACTORY-RECOMMENDED LOW-VOLTAGE SERVICE ENTRY

All low-voltage connections are made on the exterior of the unit on the low-voltage terminal strip. Field-installed low-voltage wiring does not enter the unit.

4.4 ATTACHING DUCTS

Ducts are to be fabricated and installed per SMACNA guidelines. Use a combination of zip ties, UL-181—rated duct mastic and then secure the duct from slipping off by means of a screw, positioned behind one or more ribs in the duct. Observe Industry Best Practices when installing and supporting the ducts.

4.5 SELECTING AIRFLOW SETTINGS

For assistance in determining correct airflow settings, go to <https://www.renewaire.com/how-to-buy/home-ventilation-solutions/>. This site will provide a basic low-speed (Continuous) air volume for a residence based on factors such as square footage and the number of bedrooms that are to be entered by the user. The resulting airflow volume is to be used as a guide and modified as desired.

The need for boost mode varies by situation. For example, boost mode could be tied to bathroom and shower usage. Alternatively, boost mode might be set for specific times of the day when more people will be in the space being ventilated. In all cases, an HVAC professional should be consulted to determine how to best set the airflow volumes to provide maximum benefit to the inhabitants.

Airflow volumes are set by taking pressure readings at the pressure ports in the unit door and then adjusting the potentiometers, first the two low speed ones, then the two high speed ones. Normally, the low-speed OA and RA potentiometers are set and then the readings are compared to the chart in Section 5.2.1 of this manual. Measuring the pressure drop across the core for each airstream is used to determine the airflow volume.

4.6 BALANCING AIRFLOWS

EV Premium ERVs provide the ability to deliver and exhaust completely balanced airflows, or to modify them as desired. While balanced airflow is preferred, many owners will prefer to have a slight imbalance, providing a slight excess of Outdoor Air to reduce air infiltration into a home. Some homes may require an imbalance because a furnace or water heater is not direct-vented. Again, an HVAC professional will be able to advise balance settings that will best address the circumstances in each home.

Balancing an airflow is done by setting the Outdoor Air fan speed and then adjusting the Return Air fan speed to eject the same or somewhat less air to the outdoors.

Equipment required for testing airflows:

- A magnehelic gauge (or manometer) or other device capable of measuring 0–1.0 inches water gauge of differential pressure.
- 2 pieces of natural rubber latex tubing, 1/8" I.D., 1/16" wall thickness works best.

Manometers are relatively inexpensive devices that are readily available from online retailers; accuracy within the range of 0–1.0 in. w.g. is the critical measure. Water manometers generally have graduations of 0.1" that are difficult to accurately determine. For all manometers, there are two plastic tubes that connect at the manometer and then the other ends go to pressure ports on the EV Premium.

Individual differential static pressures (DP) are measured ACROSS the core and filters, using the installed pressure ports located on the removable door.



NOTE: Airflow volumes can be changed at any time by the user as experience dictates. Whenever changing airflow volumes for either Continuous (low speed) or Boost (high speed) modes, the fans should again be balanced.

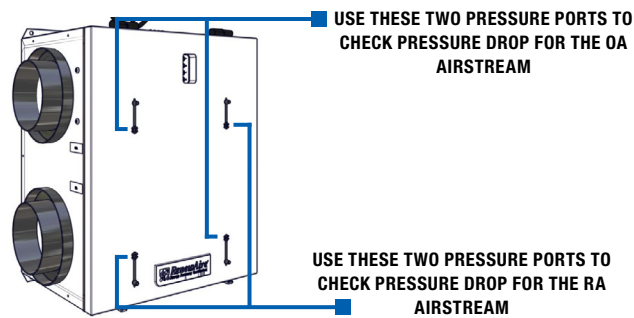


FIGURE 4.6.0 PRESSURE PORT LOCATIONS

- Verify the unit has clean filters in place.
- Open the pressure port caps for the OA airstream and then insert the tubing into the openings about 1".
- Take a differential pressure reading for the OA airstream by installing the "high" pressure side (+) of the measuring device to the OA port and the "low" pressure side (-) to the SA port. Compare the pressure drop to the chart in section 5.2.1 to obtain the CFM. Adjust the fan speed potentiometer (See figure 4.6.1) to obtain the desired CFM. Enter the CFM information in the box in section 5.2.2.
- Take a differential pressure reading for the RA airstream by installing the "high" pressure side (+) of the measuring device to the RA port and the "low" pressure side (-) to the EA port. Compare the pressure drop to the chart in section 5.2.1 to obtain the CFM. Adjust the fan speed potentiometer (See figure 4.6.1) to obtain the desired CFM. Enter the CFM information in the box in section 5.2.2.
- Install a jumper on the low-voltage terminal to force the unit into Boost (high speed) mode. See the wiring diagram in Section 4.7.
- Repeat the process for both airstreams to set both the CFM and balance. Enter the information in the boxes in Section 5.1.
- After adjusting the potentiometers, take additional readings as needed to verify that fan speed settings are correct. See Figure 4.6.1.

NOTE: Adjust low speed fan settings by using the potentiometers marked "L." Adjust high speed fan settings by using the potentiometers marked with "H."



FIGURE 4.6.1 FAN SPEED CONTROL POTENTIOMETERS

4.7 WIRING SCHEMATICS

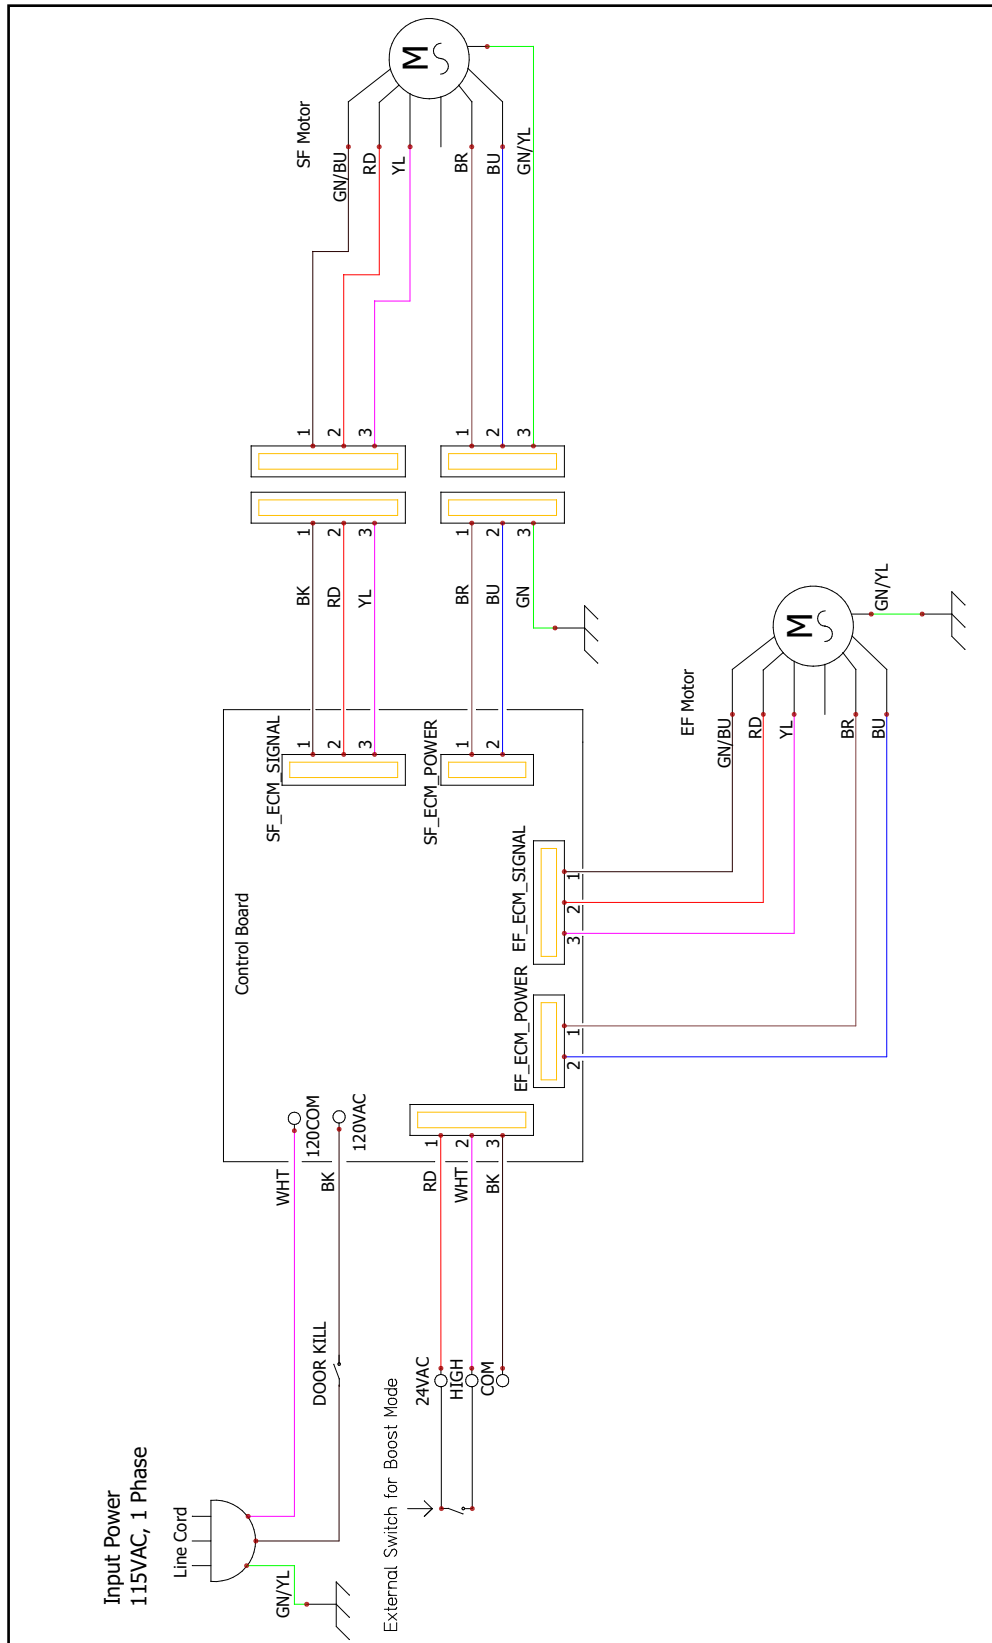


FIGURE 4.7.0 EV PREMIUM WIRING SCHEMATIC

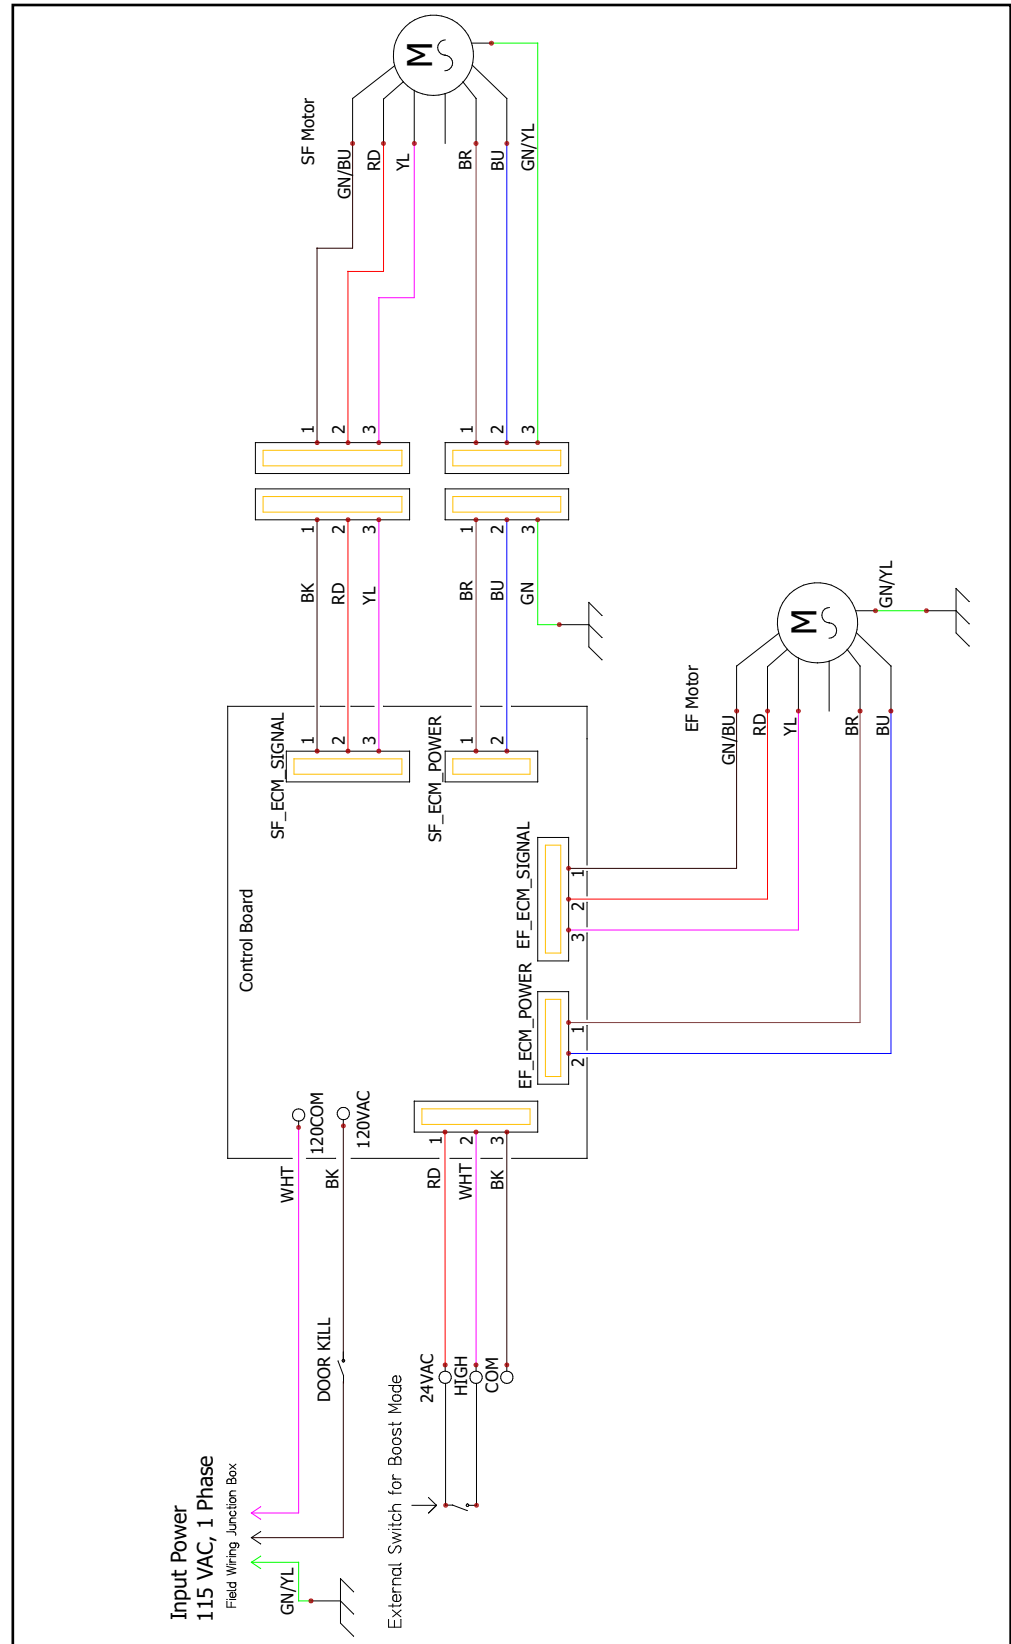


FIGURE 4.7.1 EV PREMIUM HARD-WIRED WIRING SCHEMATIC

4.8 LOW-VOLTAGE WIRING DIAGRAMS

4.8.1 Single Speed Mode CONTINUOUS

When plugged in, the unit will run constantly at Low Speed. If the unit is to operate constantly at a single airflow, adjust the OA and RA low speed potentiometers to the desired airflow as described in section 4.6. The high speed potentiometers are not needed for this application.

4.8.2 Low Speed CONTINUOUS/High Speed SWITCHED

If the EV Premium is to run constantly at Low Speed (Continuous mode or Off) and then switch periodically to Boost mode in response to a controlling device. The external controlling device, such as a PBT control or an occupancy sensor that is to trigger Boost mode (High Speed), is connected to the 24VAC terminal and to the High Speed terminal.

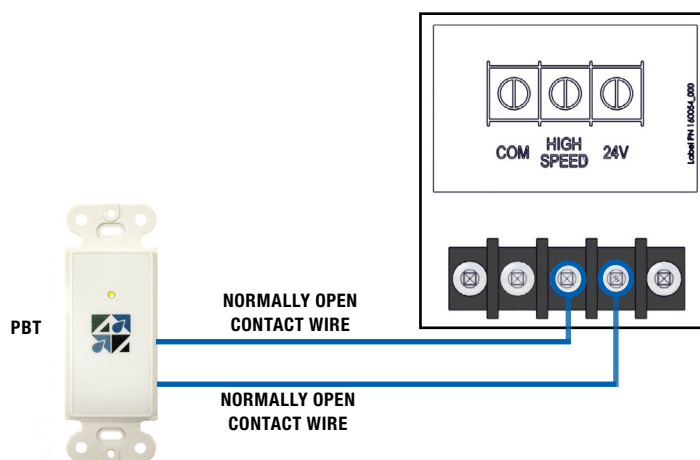


FIGURE 4.8.0 LOW-VOLTAGE WIRING DIAGRAM 1

If multiple controls are desired to operate the unit in Boost mode for different purposes, they may be wired in parallel. The unit control board provides 6 VA so the combined power demand for desired accessories must be lower than this threshold. For example, a PBT controller may be wired to an EV Premium unit and up to 6 PBL controls may be connected to the PBT PB terminals in parallel. For additional information see the installation manuals for the control(s) you select for wiring diagrams and specific instructions.

5.0 OPERATION

5.1 MANOMETER READINGS AT COMMISSIONING

Return Air Pressure Port	In. w.g.:	<input type="text"/>	Pressure Drop:	<input type="text"/>
Exhaust Air Pressure Port	In. w.g.:	<input type="text"/>		
Outside Air Pressure Port	In. w.g.:	<input type="text"/>	Pressure Drop:	<input type="text"/>
Supply Air Pressure Port	In. w.g.:	<input type="text"/>		

5.2 AIRFLOW READINGS AT COMMISSIONING

5.2.1 Conversion of Pressure Drop to Airflow

See the tables below.

(Units equipped with clean MERV 8 filters.)

To determine the airflow in CFM, obtain the manometer readings shown above and calculate the differences between them. Then apply the following formula to convert the readings to CFM:

EV Premium S/SH: [Airflow in CFM] = 183 x [Pressure Drop in inches w.g.]

EV Premium M/MH: [Airflow in CFM] = 283 x [Pressure Drop in inches w.g.]

EV Premium L/LH: [Airflow in CFM] = 593 x [Pressure Drop in inches w.g.]

EXAMPLE: 1 In. w.g. of pressure drop corresponds to 283 CFM, 0.5 In. w.g. corresponds to 141.5 CFM, and so on for the EV Premium M.

(Units equipped with a MERV 13 filter in the OA airstream. Formulas below are for OA airstream only.)

EV Premium S/SH: [Airflow in CFM] = 154 x [Core Pressure Drop in inches w.g.]

EV Premium M/MH: [Airflow in CFM] = 235 x [Core Pressure Drop in inches w.g.]

EV Premium L/LH: [Airflow in CFM] = 487 x [Core Pressure Drop in inches w.g.]

EXAMPLE: 1 In. w.g. of pressure drop across the core corresponds to 235 CFM, 0.5 In. w.g. corresponds to 117.5 CFM, and so on for the EV Premium M.

EV PREMIUM S/SH		
Pressure Drop (In. W.G.)	Airflow with MERV 8 Filters (CFM)	Airflow with MERV 13 Filters (CFM)
0.1	18	15
0.2	37	31
0.3	55	46
0.4	73	62
0.5	92	77
0.6	110	92
0.7	128	108

EV PREMIUM M/MH		
Pressure Drop (In. W.G.)	Airflow with MERV 8 Filters (CFM)	Airflow with MERV 13 Filters (CFM)
0.1	28	24
0.2	57	47
0.3	85	71
0.4	113	94
0.5	142	118
0.6	170	141
0.7	198	165

EV PREMIUM L/LH		
Pressure Drop (In. W.G.)	Airflow with MERV 8 Filters (CFM)	Airflow with MERV 13 Filters (CFM)
0.1	59	49
0.2	119	97
0.3	178	146
0.4	237	195

FIGURE 5.2.0 PRESSURE DROP TO AIRFLOW CONVERSIONS

5.2.2 Continuous Mode (low speed)

Outdoor Airflow: CFM

Return Airflow: CFM

5.2.3 Boost Mode (high speed)

Outdoor Airflow: CFM

Return Airflow: CFM

IMPORTANT

This unit is only to be used after completion of building construction. It is not to be used during construction.

6.0 MAINTENANCE

The primary maintenance requirement is filter replacement. Filters are not to be cleaned, they must be replaced. The standard filter as shipped from the factory is a mesh-type, anti-microbial MERV 8. These standard filters are NOT to be sprayed with filter treatments or dust adhesives. The standard mesh-type OA MERV 8 filters may be replaced with pleated paper MERV 13 filters post-construction, if desired. Both filters should be replaced every three months, or more frequently, if needed, based on the cleanliness of the OA and RA air entering the unit.

The enthalpic core should be vacuumed annually. Remove the hinged access door by sliding it horizontally on its pin hinges and then remove the filters for access to the core. Use a soft-bristled nozzle on a good vacuum and carefully vacuum the inlet faces of the core.

Ducts should be inspected annually. Ensure all ducts and joints are free from damage, contaminants, or leaks in order for the system to behave properly.

6.1 MAINTENANCE AFTER 30 DAYS OPERATION

After 30 days of unit operation, check/tighten all mounting and support hardware. Inspect filters for cleanliness. There is often construction dust collected during initial operation. If filters appear dirty, replace them.

6.2 RECALIBRATION OF AIRFLOWS

Whenever there is a reconfiguration of the heating system in a residence, to include changing damper positions, the fan speed potentiometers on the EV Premium should be re-calibrated for optimum performance. If the residence undergoes significant structural changes, such as an addition to the home, the EV Premium should also be re-calibrated. If optional MERV 13 filters are installed, recalibration is also required.

6.3 DOOR REMOVAL

The hinged door is held in place by two separable hinges on one edge and two security latches on the other edge. The separable hinges have a spring-loaded detent to prevent accidental separation. To remove the door, first disconnect power to the unit. Unlatch and open the door and then strike the edge of the door, pushing the door toward the OA/EA side of the unit.

6.4 SERVICE PARTS

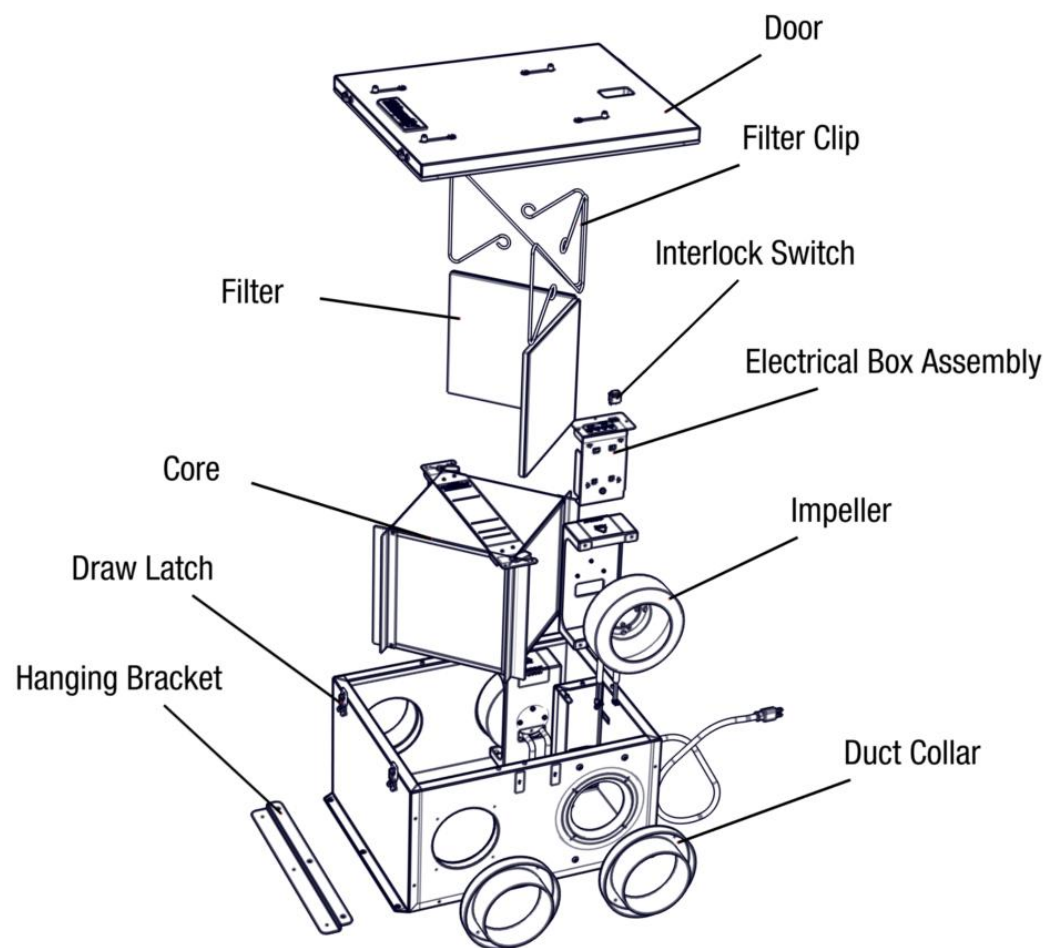


FIGURE 6.4.0 EV PREMIUM SERVICE PARTS

⚠ CAUTION

Many of the troubleshooting steps described herein require working with or near live high-voltage. Take appropriate precautions against electric shock and use Personal Protective Equipment (PPE) as a safeguard. Wear gloves, safety glasses and protective head gear, as necessary.

7.0 TROUBLESHOOTING**7.1 INDICATION OF PROBLEM**

Indications of a problem with the ERV may be the perception that fresh air is not being delivered. The first step in resolving an apparent problem with an EV Premium ERV is to verify that there actually is a problem.

Regardless of the reason for thinking there is a problem with the EV Premium, the first steps in troubleshooting are to check the air filters to make sure they're clean and properly positioned, and then do a hard restart of the unit. A hard restart involves unplugging the unit for several seconds and then plugging it back in. It takes a few moments for the control board to discharge. After reapplying power, check to see if resetting the circuit has solved the problem.

Because there are many different ways of ducting the Supply Air into a dwelling, it's often difficult to say with certainty that the fresh air provided by the EV Premium is not reaching its intended destination or if the ERV is simply no longer providing enough fresh air. Determine where and how the fresh air is supposed to be delivered—if it is being carried in a dedicated duct directly to the air outlet, check for airflow at the outlet.

- Verify that dampers are still correctly positioned (open). If the ERV is being ducted into a main air handling system, shut the air handling system down so that airflow at the ducts can be detected.
- Check for airflow at the air openings nearest to the EV Premium, not at the far end of the house. It may be necessary to hold a thin strip of tissue paper in front of a vent to realize whether or not there is airflow.
- Check for airflow in both low speed and high speed settings. It will be easier to detect airflow in the high speed setting.
- Check ducts and duct runs and problems with bends, sagging, etc.

7.2 EV PREMIUM HAS AIRFLOW BUT IS MAKING NOISE

Feel the EV Premium while it is running to see if there is excessive vibration from the fans. Fan noise and vibration can be caused by an imbalance in the rotors or possibly by a bad bearing. Turn off power to the unit and rotate the fan impellers by hand. Make sure impellers rotate freely. Use wet swabs to clean any dust/dirt buildup off the impeller blades. If problem continues, a fan may have a bad bearing.

7.3 NO APPARENT AIRFLOW FROM THE EV PREMIUM

If it seems that there is no apparent airflow, verify that it has power.

- If it does not have power, trace the power supply back to its source and isolate the problem or symptoms. Look for a switch turned off, a blown fuse or a tripped circuit breaker. If necessary, use a multimeter to trace the power supply and isolate the problem.
- If it has power and the fans will not run, disconnect all power to the unit and check the disconnect switch with an ohmmeter.
- If it has power, check to see if the fans are running by listening for fan noise and feeling the unit for vibration from the fans.
- If it has power and the fans are running, **CHECK THE FILTERS TO MAKE SURE THEY ARE CLEAN.** Check the entire length of the ducts, all the way from the outdoor vent hoods to the indoor vent openings. Make sure a duct has not fallen off or that a flexible duct has not been pinched. In rare cases, there may be obstructions inside the duct. Look to see if a louver in an outdoor vent cap is stuck or blocked or if an indoor louver has been shut.
- If it has power but only one fan is running, disconnect all power to the unit and check the fan connectors to make sure they are still making contact.

7.4 INADEQUATE OR REDUCED AIRFLOW FROM THE EV PREMIUM

If the unit has power and both fans are running, use a manometer to check the pressure differential across the core. See Section 4.6 Balancing Airflows in this manual. The results of a pressure differential test will provide correct information on how much air the unit is moving and also how the volume of air compares to when the unit was first installed. Check both low speed and high speed settings by changing the jumpers on the low-voltage terminal strip, as shown in section 4.7 in this manual. Check ducts for bends, blockages, or leaks.

7.5 EV PREMIUM FAILS TO RUN IN EITHER LOW SPEED OR HIGH SPEED MODE

The low-speed and high-speed modes operate independently of each other so there can be a failure in just one mode and it does not appear in the second mode. If one mode does not work, the problem can be isolated to either the controlling device or to an internal failure by bypassing the controlling device.

- ♦ Remove all wiring from the terminal strip as shown in Section 4.7 of this manual. Mark the wires so they can be reconnected in their proper locations.
- ♦ With no jumper present, check for proper operation.
- ♦ Install a jumper wire from the 24VAC terminal to the High Speed terminal. Check for proper operation. Remove the jumper wire and reinstall the control device wiring.

7.6 NO APPARENT REASON FOR LOW AIRFLOW

The final step in troubleshooting an ERV problem is to reset the fan potentiometers. Use a manometer and follow the instructions in Section 4.6 Balancing Airflows in this manual. Restore the pressure differential settings to their original airflow settings (CFM), as recorded in Section 5.1.

8.0 FACTORY ASSISTANCE

In the unlikely event that you need assistance from the factory for a specific issue, make sure that you have the information called for in the Unit Information page in the front of this manual. The person you speak with at the factory will need that information to properly identify the unit.

To contact RenewAire Customer Service:

Call 800-627-4499

Email: RenewAireSupport@RenewAire.com



About RenewAire

For over 35 years, **RenewAire** has been a pioneer in enhancing indoor air quality (IAQ) in commercial and residential buildings of every size. This is achieved while maximizing sustainability through our fifth-generation, static-plate, enthalpic-core **Energy Recovery Ventilators (ERVs)** that optimize energy efficiency, lower capital costs via load reduction and decrease operational expenses by minimizing equipment needs, resulting in significant energy savings. Our ERVs are competitively priced, simple to install, easy to use and maintain and have a quick payback. They also enjoy the industry's best warranty with the lowest claims due to long-term reliability derived from innovative design practices, expert workmanship and **Quick Response Manufacturing (QRM)**.

As the pioneer of static-plate core technology in North America, RenewAire is the largest ERV producer in the USA. We're **committed to sustainable manufacturing** and lessening our environmental footprint, and to that end our Waunakee, WI plant is 100% powered by wind turbines. The facility is also one of the few buildings worldwide to be LEED® Gold and Green Globes certified, as well as having achieved ENERGY STAR Building status. In 2010, RenewAire joined the Soler & Palau (S&P) Ventilation Group in order to provide direct access to the latest in energy-efficient air-moving technologies. For more information, visit: renewaire.com

201 Raemisch Road | Waunakee, WI | 53597 | 800.627.4499 | [RenewAire.com](https://renewaire.com)