
Photo

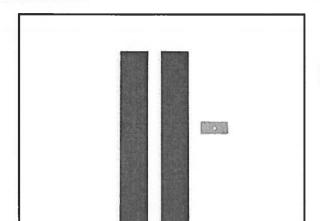

Descriptions

Part to block the air outlet of a cassette-type indoor unit.

Applicable Models


■ PLA-RP·BA/BA2/BA3

Specifications

	Niverban of aboutton sinten	
	Number of shutter plates	
4 directions → 3 directions	1	
4 directions → 2 directions	2	
(Change to 1 direction is not possible.)		
Filter clogging may caus Note 2: Selecting "3 directions" o Note 3: "2 directions" should not	e cooling/heating performance or "2 directions" may increase of be selected when operating in	to drop.) perating sound.
Foamed polyethylene + Foamed urethane		
Black		
Glued to the air outlet of the indo	oor unit.	
	directions → 2 directions Change to 1 direction is no ote 1: Selecting "2 directions" r (Filter clogging may caus ote 2: Selecting "3 directions" c ote 3: "2 directions" should not (Dew formation or dewdr oamed polyethylene + Foamed lack	directions → 2 directions 2 Change to 1 direction is not possible.) ote 1: Selecting "2 directions" requires cleaning of the filter ap (Filter clogging may cause cooling/heating performance ote 2: Selecting "3 directions" or "2 directions" may increase o ote 3: "2 directions" should not be selected when operating in (Dew formation or dewdrop may result.) oamed polyethylene + Foamed urethane

Dimensions

Unit : mm

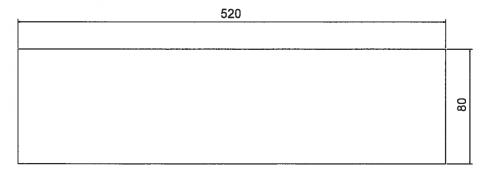

Release coated paper

 
Adhesive face Formed polyethylene

Formed urethane

How to Use / How to Install

Checking for provided parts

Make sure that the parts shown on the right are in this bag, along with the instruction sheet.




Air-outlet shutter plate Installation Manual –


- 1. Locate the Shutter Plate installation position
- This is a part which is used to convert the number of air-outlet from "4 ways" to "3 ways" or "2 ways".

(Convert to "1 way" is not available.)

- Select the outlet direction and decide the outlet to be closed (Indoor unit).
 - *When the number of outlet is selected to "2 ways", be sure to explain to the customer that the filter should be cleaned once a month. (Otherwise, the filter will be clogged, and the performance of the cooling and heating can be lower.)
 - *When the number of outlet is selected to "3 ways" or "2 ways", the operation noise can be larger.
 - *Never to select "2 ways" in the environment of high temperature and high humidity. (It can cause dew.)
- 2. Installation of shutter plate (fig.1)
- Install the shutter plate to the indoor unit so that it can fit the air-outlet concave portion.
 *Install one piece of shutter plate per one air-outlet.
 - *The installation should be done before the decorative panel is installed.
 - **The shutter plate must be installed not to cause wrinkle or gap. (It can cause dew drops.)
 - *When attaching the duct flange to the blow outlet (marked *) between the refrigerant pipe and drain pipe, cut off the shutter plate at the slip portion of release paper, and then attach it.
- 3. Function selection
- When the number of air-outlet is changed, it is necessary to make function selection. For the selection method, refer to the manual for installation of the indoor unit.
- 4. Setting of the auto vane (fig.2)
- It is possible to fix the auto vane of the decorative panel to the totally closed position, which is applied to the air-outlet installed on the shutter plate.

Once the auto vane is fixed, the operation of a remote control and all of automatic control will not be available. Also, the LCD of the remote control will not work.

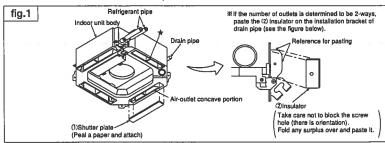

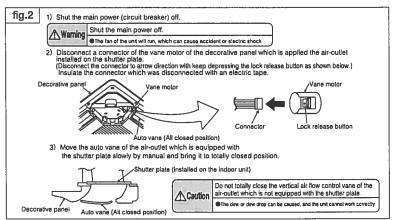

OPTIONAL PARTS