

EN installer instructions

PRINTED CIRCUIT BOARD

INFORMATION

Replaces the Printed Circuit: 000342033601, 000342033602



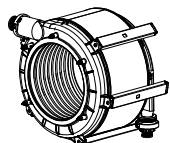
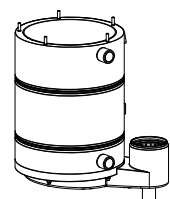
DANGER

Ensure power to the appliance is shut off before attempting to remove/replace an existing PCB. Failure to do so will result in substantial property damage, severe personal injury or death.

Failure to set replacement PCB parameters according to the table on this sheet may cause the burner to operate at improper firing rates, and could result in premature component failure, property damage, personal injury or death.

Follow the instructions included in the installation manual to replace the PCB.

To access the menu and set the parameters, please reference the boiler installation manual.

			Boiler Model		Parameters																
					200	201	219	220	223	224	228*	229	231	232	233	234	235	243	247	250	253
Water Tube Models 	85	HEATING ONLY	125	1	0	53	1	1	2	82	100	56	3	56	1	0	1	2	0	0	
	120	HEATING ONLY	125	1	0	43	1	1	2	119	100	68	2	68	1	0	1	2	0	0	
	150	HEATING ONLY	125	1	0	40	1	1	2	150	100	95	5	95	1	0	1	2	0	0	
	199	HEATING ONLY	125	1	0	65	1	1	2	198	100	97	6	97	1	0	1	2	0	0	
	110/120	COMBI	125	1	0	40	1	1	0	102	100	72	3	66	1	0	1	0	0	0	
	150	COMBI	125	1	0	34	1	1	0	136	100	87	2	68	1	0	1	0	0	0	
	199	COMBI	125	1	1	65	1	1	0	198	100	97	6	97	1	0	1	0	0	0	
Fire Tube Models 	85	HEATING ONLY	125	1	0	40	1	1	2	85	100	78	7	78	1	1	1	2	0	1	
	110	HEATING ONLY	125	1	0	28	1	1	2	109	100	100	11	100	1	1	1	2	0	1	
	150	HEATING ONLY	125	1	0	35	1	1	2	150	100	91	6	91	1	1	1	2	0	1	
	199	HEATING ONLY	125	1	0	34	1	1	2	198	100	91	4	91	1	1	1	2	0	1	
	110	COMBI	125	1	1	28	1	1	0	109	100	100	11	100	1	1	1	2	0	1	
	150	COMBI	125	1	1	35	1	1	0	150	100	91	6	91	1	1	1	2	0	1	
	199	COMBI	125	1	1	34	1	1	0	198	100	91	6	91	1	1	1	2	0	1	

*228 set equal to 1 if using a DHW Tank Sansor