
INSTALLATION GUIDE

GB2 35/50 GPM Grease Interceptor for Indoor Use

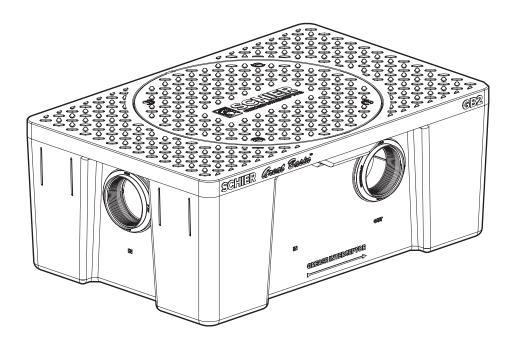

Contents

Special Precautions	2
Getting to Know the GB2	3
On the Floor Installation	4-6
Buried Installation	7-9



SPECIAL PRECAUTIONS

For Schier Grease Interceptor Installations - Failure to follow this guidance voids your warranty

 
WARNING! DO NOT AIR TEST UNIT OR RISER SYSTEM!

Doing so may result in property damage, personal injury or death.

CAUTION! Do not install this unit in any manner except as described in these instructions.


Installation Instructions

Installation instructions and additional components are included with the interceptor. Read all instructions prior to installation. This interceptor is intended to be installed by a licensed plumber in conformance with all local codes.



When Installing Interceptor Inside

If your dishwashing sink(s) discharges into a floor drain/sink (drain), you must regulate the flow into the drain to avoid an overflow of water onto the kitchen floor. This can be done by installing a valve or flow restriction cap on the sink piping that discharges into the drain. See drawing for guidance. For detailed

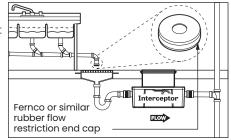


guidance on indirect connections, go to:

webtools.schierproducts.com/Technical_Data/Indirect_Connections.pdf


Flush-to-Grade Burials

 Flush-to-Grade buried installations (without a riser) are not recommended for heavy foot traffic areas without the use of an internal gusset support kit SGK2 (for GB2) or SGK3 (for GB3).




High Temperature Kitchen Water

If water is entering the interceptor at excessive temperature (over 140° F), a drain water tempering valve (DTV) and approved backflow prevention assembly must be installed. Most state and local plumbing codes prohibit water above 140° F being discharged into the sanitary sewer. Water above 140° F will weaken or deform PVC Schedule 40 pipe, poly drainage fixtures like interceptors and erode the coating of cast iron (leading to eventual failure).

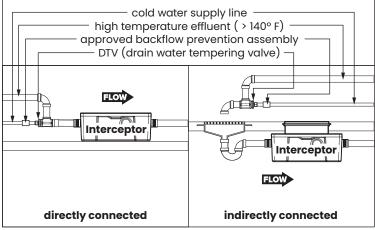


Fully Support Base of Unit

Install unit on solid, level surface in contact with the entire footprint of unit base; for suspended installations design trapeze to support the wet weight of the unit. Do not partially support unit or suspend unit using metal U-channel to create a trapeze

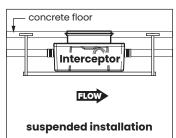


Support Inlet and Outlet Piping

For above grade installations ensure heavy inlet and outlet piping (such as cast iron or long runs) is properly supported or suspended during the entire installation process to prevent connection failure or damage to bulkhead fittings.

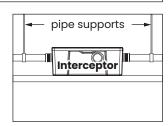

GB2 Installation Guide Page 2 of 9

GETTING TO KNOW THE GB2

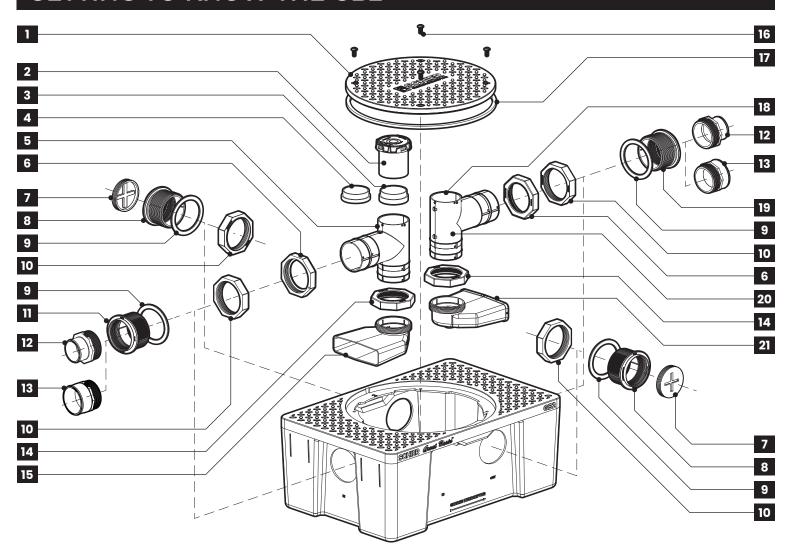

- 1. Cover
- 2. Standard Installation Flow Control Cartridge
- 3. 35 GPM Flow Control Extension (>5' below kitchen only)
- **4.** 50 GPM Flow Control Extension (>5' below kitchen only)
- **5.** Inlet Diffuser (Top)
- **6.** Diffuser Retaining Nuts (x2)

- 7. 4" Cleanout Plugs (x2)
- 8. Optional Side Outlets 4" FPT (x2)
- **9.** Connection Fitting Gaskets (x4)
- **10.** Bulkhead Connection Retaining Nuts (x4)
- 11. Inlet 4" FPT Connection
- 12. 3" Plain End Fittings (x2)
- 13. 4" Plain End Fittings (x2)

- 14. Diffuser Foot Retaining Nuts (x2)
- 15. Inlet Diffuser (Foot)
- **16.** Cover Bolts (x4)
- 17. Cover Gasket
- 18. Air Relief/Visual Access
- 19. Outlet 4" FPT Connection
- **20.** Outlet Diffuser (Top)
- 21. Outlet Diffuser (Foot)

 
GB2 Installation Guide Page 3 of 9

ON THE FLOOR INSTALLATION

Special Precautions




Do not install air gap on outlet side of interceptor.




Install interceptor as close as possible to fixtures being served

ODOR ALERT!

 Interceptor is not a sewer gas trap. All upstream fixtures must be trapped



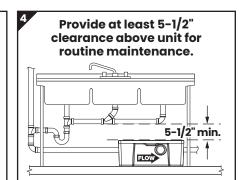

Test Tank for Water Tightness

la

Cap all connection points with 4" cleanout plugs using pipe thread sealant or tape approved for use with plastics.



Remove cover and fill with water to just above the highest connection. For riser system testing (if required) fill to finished grade level. **CAUTION:** Support risers


before filling to prevent tipping. Inspect unit, connections and gaskets for leaks. Check water level at specific time intervals per local code.



Leak?

Call customer care at 913-951-3300 8a - 5p M - F CST


2 Set Up Outlet Diffuser and Install Cleanout Plugs

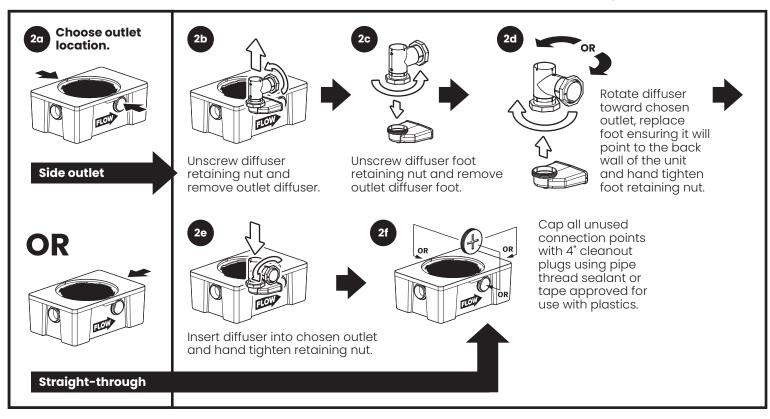

GB2 Installation Guide Page 4 of 9


ON THE FLOOR INSTALLATION

3 Calibrate Flow Control

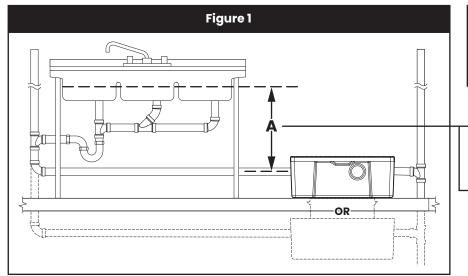

Note to Plumbing Inspector This interceptor includes certified internal flow control and does not require a dedicated "Flow Control Vent" (air intake).


- If dimension is 5 feet or less
 go to Step 4.
- If dimension is greater than 5 feet follow Steps below.

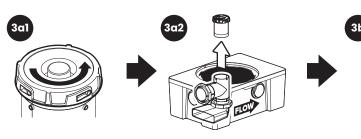


Rotate flow control cartidge counter-clockwise to release and remove from inlet diffuser

Depending on which flow rate is desired, attach either the 35 or 50 GPM Flow Control Cartridge Extension using PVC primer/cement.

Make sure extension is fully inserted into the cartridge and hold both components firmly together (until cement grabs) to prevent push-out.

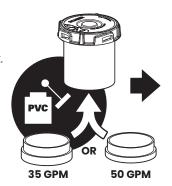

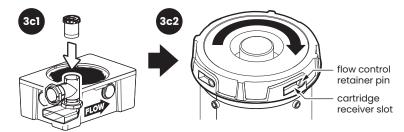


Slide flow control cartridge into top of inlet diffuser and rotate clockwise until cartridge drops onto flow control retainer pins. Continue rotating clockwise until pins are fully seated.

GB2 Installation Guide Page 5 of 9


ON THE FLOOR INSTALLATION

4 connect Piping

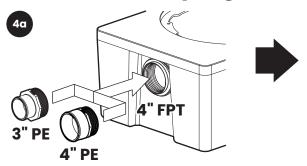

Choose inlet and outlet fittings (included) based on pipe size.

Connect piping using pipe thread sealant or tape approved for use with plastics. Ensure all upstream fixtures are trapped. **Vent per local code.**

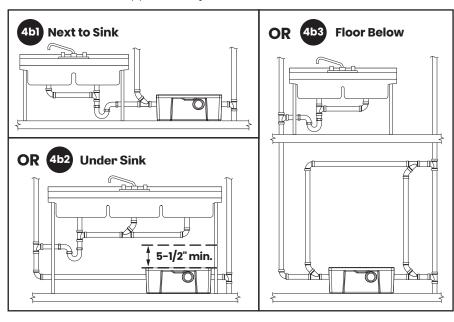

5 Wet or Air Test Piping Per Local Code

WARNING! DO NOT AIR TEST UNIT OR RISER SYSTEM!

Doing so may result in property damage, personal injury or death.




Leak? Call customer care at 913-951-3300 8a - 5p M - F CST


GB2 Installation Guide Page 6 of 9

BURIED INSTALLATION

Special Precautions

Install interceptor as close as possible to fixtures being served

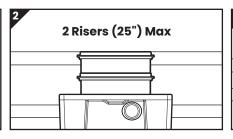

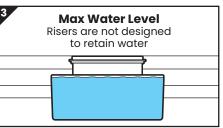

Test Tank for Water Tightness

la

Cap all connection points with 4" cleanout plugs using pipe thread sealant or tape approved for use with plastics.



Remove cover and fill with water to just above the highest connection.
For riser system testing (if required) fill to finished grade level. **CAUTION:** Support risers before filling to prevent tipping.


before filling to prevent tipping. Inspect unit, connections and gaskets for leaks. Check water level at specific time intervals per local code.



Leak?

Call customer care at 913-951-3300 8a - 5p M - F CST


2 Set Up Outlet Diffuser and Install Cleanout Plugs

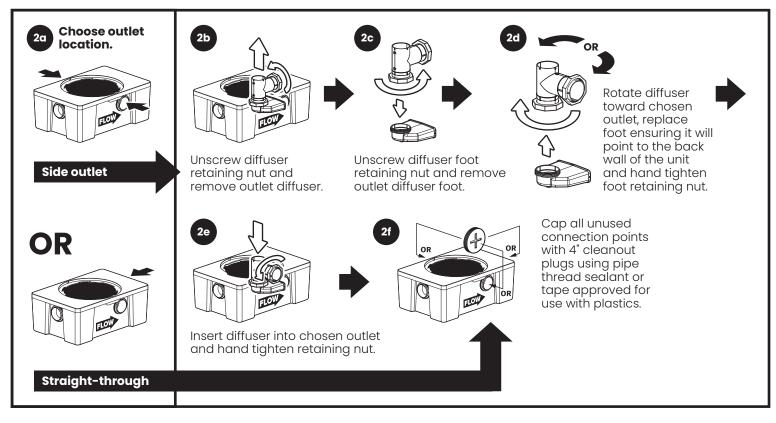

GB2 Installation Guide Page 7 of 9


BURIED INSTALLATION

3 Calibrate Flow Control

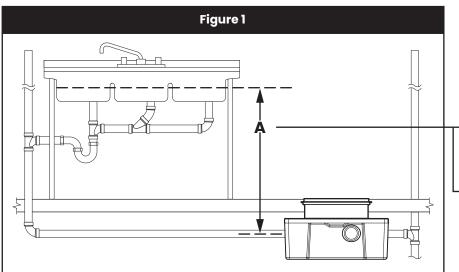

Note to Plumbing Inspector This interceptor includes certified internal flow control and does not require a dedicated "Flow Control Vent" (air intake).


- If dimension is 5 feet or less
 go to Step 4.
- If dimension (A) is greater than 5 feet follow Steps below.

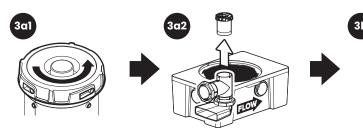


Rotate flow control cartidge counter-clockwise to release and remove from inlet diffuser

Depending on which flow rate is desired, attach either the 35 or 50 GPM Flow Control Cartridge Extension using PVC primer/cement.

Make sure extension is fully inserted into the cartridge and hold both components firmly together (until cement grabs) to prevent push-out.

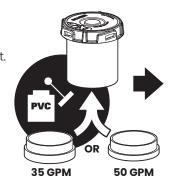


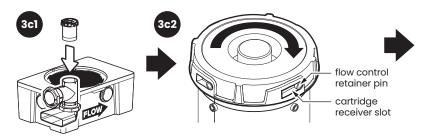


Slide flow control cartridge into top of inlet diffuser and rotate clockwise until cartridge drops onto flow control retainer pins. Continue rotating clockwise until pins are fully seated.

3d

OPTIONAL: For easy flow control removal in deep burial installations, 1-1/2" PVC SCH. 40 pipe may used as an extension handle. Before risers have been installed, cut pipe to length and attach to top of flow control cartridge using PVC primer/cement.

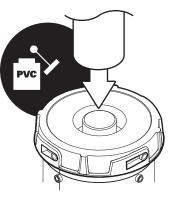

4 Excavation

 

Excavate hole 6" larger than interceptor on all sides.

Add crushed aggregate (approximately 3/4" size rock or sand, with no fines) to base of hole.

GB2 Installation Guide Page 8 of 9


BURIED INSTALLATION


5 Connect Piping



Floor Sink Installation


If your dishwashing sink(s) discharges into a floor drain/sink (drain), you must regulate the flow into the drain to avoid an overflow of water onto the kitchen floor. This can be done by installing a valve or flow restriction cap on the sink piping that discharges into the drain.

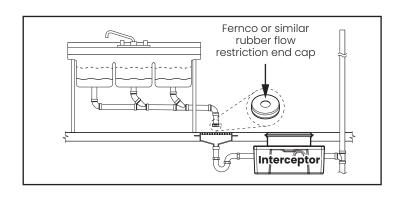

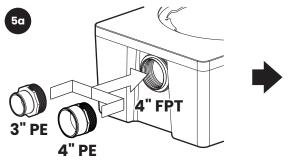

Choose inlet and outlet fittings

 (included) based on pipe size.



Set interceptor and connect piping using pipe thread sealant or tape approved for use with plastics. **Vent** per local code. Fill tank with water so that it remains in place during backfill.

Wet or Air Test Piping Per Local Code




WARNING! DO NOT AIR TEST UNIT OR RISER SYSTEM! Doing so may result in property damage, personal injury or death.




Leak? Call customer care at 913-951-3300 8a - 5p M - F CST

Backfill and Finished Grade

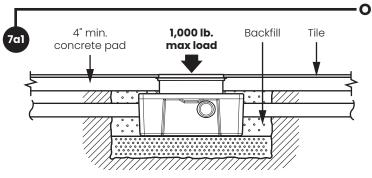

Below Grade with Riser (preferred): See instructions included with FCR1 riser. Backfill evenly around tank using crushed aggregate (approximately 3/4" size rock or sand, with no fines), finish with a minimum 4" thick concrete pad.

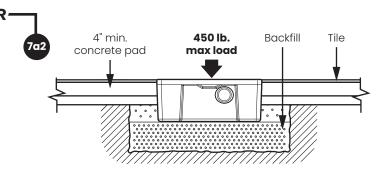

Flush-to-Grade Burials:

WARNING! Not recommended for heavy foot traffic areas without the use of an internal support system **SGK2** (sold additionally). Contact Customer Care for more details. Backfill evenly around tank using crushed aggregate (approximately 3/4" size rock or sand, with no fines), finish with a minimum 4" thick concrete pad.

GB2 Installation Guide Page 9 of 9