

INSTALLATION INSTRUCTIONS

AC95X OR L INSTALLATION INSTRUCTIONS

There are no instructions for the ac95x-l in the box.

We recommend the use of a professional plumber.

Preparation:

- Flush the plumbing system before installation of the mixer faucet. This will prevent residue from clogging the line and aerator. Especially important in new construction.

Maximum water temperature 140 degrees

Minimum water pressure 15 psi

Maximum water pressure 75 psi

Recommended psi should be between 40 and 60.

Hole size: 1 " minimum- 1 3/8" maximum- 4 Inch center to center for the supply lines

1. Flush the system
2. Set the faucet in the installation holes, with a rubber flat washer on each supply tube on top of the sink to prevent leakage.
3. Install metal washer and mounting nut. Tighten.
4. Make connection to the supply lines.
 - a. The supply line size is 1/2". A flexible line from the faucet to the supply angle stop is recommended. (Not supplied- Note: supply the correct length supply line and the correct connection to the angle stop supply).
5. Install the pop-up assembly (if you need separate instructions for this, please fax Rohl.)
6. Install the pop-up rod
 - a. 2 piece assembly- screw the knob on first- insert the upper rod-
 - b. Screw the connection on with the lower rod
 - c. Make the connection to the horizontal rod to the pop-up with the swiveling connections

7. TEST FOR LEAKS

1. LEVER AND CROSS HANDLES
 - i. ZZ92111H LEVER HOT
 - ii. ZZ92112C LEVER COLD
 - iii. ZZ92116H CROSS HOT
 - iv. ZZ92117C CROSS COLD
2. ZZ926190 DOME COVER
3. ZZ 926710 HEAD EXTENSION
4. CERAMIC HEADVALVE
 - i. LEVER HANDLES
 1. ZZ92906021C
 2. ZZ92907021H
 - ii. CROSS HANDLES
 1. 2 X ZZ92907021H
5. ZZ909920 AERATOR COMPLETE
6. ZZ92744000 INSTALLATION SET
7. ZZ903310 POP-UP ROD COMPLETE OR ZZ927870

