



Health and Safety Warning:

Ceramic fiber products are suspected of causing cancer by inhalation. All ceramic fiber products have a hazard communication warning label and a prop 65 warning for airborne fiber inhalation. You should minimize exposure to airborne fibers. When handling ceramic fiber we recommend using particulate respirator mask (N95), protective gloves, safety glasses and long sleeve clothing. For complete safety information consult the SDS sheet. <https://www.lynnmfg.com/documentation/>



Before you start work:


1. Read all instructions and check the kit number before starting work. **See Note A.**
2. Turn off service switch on boiler and all other electrical disconnect switches.
3. Close fuel supply valve(s) and disconnect fuel line from the burner.

Removal:

4. Check to make sure all electric power is off, and the oil line is disconnected.
5. Remove Burner Mounting Plate and oil burner.
6. Remove the old Target wall, floor blanket, burner mounting plate insulation, and clean out door insulation.
7. Clean-out the combustion area.

Installation:

8. Insert the new target wall through the boiler opening, and press it into position against the backwall of the boiler. The target wall should be a tight press fit into the back section of the boiler. If it is loose, place the ceramic fiber paper shims provided between the target wall and the casting to insure a tight fit. **See Note B.**
9. Measure the distance from the front of the target wall to the front of the boiler and cut the 16" wide Kaowool blanket provided to this length.
10. Install the Floor Blanket. **See Note C.**
11. Press the new Burner Plate Insulation into the burner mounting plate. **See Note B.**
12. The Clean Out Door Insulation is mounted to the swing-out door with either one or two screws depending on the age of the boiler. There are three indentations to mark the possible hole locations. Look at your swing-out door and drill the hole locations that match up.
13. Mount the Clean Out Door Insulation and gasket using the stainless steel hardware provided. The gasket goes against the door with the door insulation on top of it. For single hole mounting, use one screw and one nut with the large 1-1/2" washer. If using two holes, use two screws and nuts with the two smaller washers. After tightening the screws, use a knife to enlarge the observation opening in the gasket.
14. Replace the rope seal around the burner mounting plate. **See Note D.**
15. Reinstall the burner mounting plate and burner.
16. Reconnect and turn on the oil line and electric power.
17. Fire the Burner. **See Note E.**

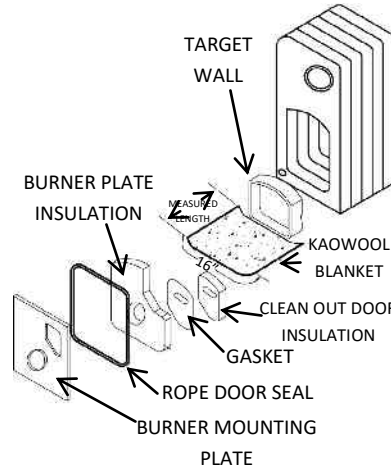

Note A: Correct Kit

Please check this is the correct kit for your make & model boiler by checking the box label or consulting our Ready Reference.

Note B: Fitting Ceramic Fiber Pieces

Many of the rigid ceramic fiber pieces are designed to be a firm press fit. To avoid breakage, press carefully and gradually. The fit may need to be adjusted by sanding or filing until a snug press fit is achieved.

Note C: Installing the Floor Blanket

The blanket provided with this kit is sized for the largest possible boiler and will normally have to be cut to size. The blanket must cover the entire bottom of the chamber. The blanket should be glued in place by covering the floor with waterglass before installing the blanket. Use the entire 4oz bottle that is provided and spread with a chip brush or rag.

Note D: Installing Rope Door Seal

After removing the old sealing rope from door perimeter, clean aggressively with a wire brush. Remove the paper backing from the rope adhesive, and press the rope into the sealing groove. Install so that the ends of the rope meet at the bottom of the door and butt firmly against each other. Maintain a gas-tight seal around door to avoid severe personal injury or death.

Note E: Initial Firing

Fire the burner for 15 minutes to allow ceramic fiber insulation to "cure". It is normal when first fired for some smoke and a slight odor to occur. Combustion test must be performed after curing process.

Application, Installation and Use Warning:

In applications including; boilers, furnaces, wood stoves, wood inserts, fireplaces, heating devices, and other appliances, parts must be used consistently with original equipment manufacturers specifications, design, function and operation.

Improper installation or use of this product could result in a fire, smoke inhalation or carbon monoxide poisoning. Products should be installed by a licensed and certified technician in compliance with all national, state and local codes. Products should be inspected annually by a licensed and certified technician for wear, brittleness, cracking or crumbling, and replaced as necessary. Lynn Manufacturing, Inc. recommends installers certified by NFI, CSIA or NORA.

Never work on a piece of equipment or touch the fibrous product when it is hot, as the product may show no visible signs of heat from glowing or smoking.

Lynn Manufacturing, Inc offers hundreds of products with many applications. Determining whether the product is a fit for the particular purpose and suitable for an application is the sole responsibility of the purchaser/installer.

In no event shall Lynn Manufacturing, Inc be liable for any damages to property or life arising from or connected with the use of this product.

V0420