


<b>Type of Appliance</b>	Vent free gas fan convection heater, suitable for homes, apartments, and condominiums, residential or commercial setting; modular/mobile home approved; forced combustion, forced convection	
<b>Rinnai Model Number</b>	<b>RCE-691TA-H-N (Natural gas)</b>	<b>RCE-691TA-H-P (Propane)</b>
<b>Gas Rate Input (BTU/hour)</b>	Low - 8,400 High - 24,000	Low - 8,000 High - 22,000
<b>Minimum Gas Supply Pressure</b>	5.0 in (135 mm) W.C.	8.0 in (203 mm) W.C.
<b>Maximum Gas Supply Pressure</b>	10.0 in (266 mm) W.C	13.0 in (330 mm) W.C.
<b>Electrical Connection</b>	AC 120V, 60 Hz, 29 watts	
<b>Gas Connection</b>	1/2 inch Male NPT	
<b>Combustion System</b>	Ceramic Burner	
<b>Ignition System</b>	Electronic spark ignition	
<b>Fan CFM Output</b>	Low: 109.5	High: 215.4
<b>Temperature Settings</b>	Low (LO): minimum combustion 60° - 80° F in 2° increments High (HI): maximum combustion	
<b>Temperature Control</b>	Electronic thermostat	
<b>Weight</b>	Approximately 26.5 lbs (12 kg)	
<b>Clearance from Combustibles</b>	Side: 2 in. (50 mm), Top: 2 in. (50 mm), Front: 30 in. (762 mm) Back: 2 in. (50 mm), Bottom: 0 in.	
<b>Noise Level</b>	Low-30dB	High-44dB
<b>Warm Air Outlet</b>	Bottom front louvers	
<b>Maximum Installation Elevation</b>	5,200 Feet	

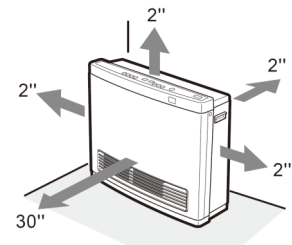

### FEATURES

- 99.9% Efficient**
- Cool-to-the-touch cabinet**
- Modulating Technology**
- Programmable Thermostat**
- Child-Safety Lock**
- Digital, Adaptive Control**
- Electronic Ignition - No Pilot Light**
- On Board Self-Diagnostics for Easier Maintenance**
- Tilt Switch**
- Push-Button, Electronic Ignition**

### Safety Devices

- **Overheat Switch:** The appliance will automatically shut down when the appliance exceeds a predetermined temperature.
- **Flame Failure Device:** The appliance will automatically shut down if the burner flame is extinguished.
- **Oxygen Depletion Sensor:** If the oxygen level in the room drops below a preset limit, this sensor disables the gas supply to the heater.
- **Tilt Switch:** If the heater is knocked over, the tilt switch will disable the gas supply. The fan will continue to purge. Convection fan continues to run after burner shutdown to cool internal parts.
- **Child Lock:** Prevents inadvertent operation.
- **Power Failure:** The appliance will disable the gas supply if it loses electrical power.
- **Fuse:** The electrical circuits are protected by a fuse. When the 5 amp fuse blows, the heater will not operate until the 5 amp fuse is replaced.

### Warranty

3 years from date of purchase on all parts

### Conversion Kit

NA-Unit is not field convertible

### ⚠ ATTENTION

This appliance is intended for supplemental heating only. The International Fuel Gas Code Standard 620-6 "Prohibited Use" states that "One or more unvented room heaters shall not be used as a sole source of comfort heating in any dwelling".

### DIMENSIONS

