



- A Wire Sink Grid - WSG6327SM, For use in 6317, 6327, 6339 and 6337 small bowl sinks
- B Wire Sink Grid - WSG6327LG, For use in 6317, 6327, 6339 and 6337 large bowl sinks
- C Wire Sink Grid - WSG2418, For use in RC2418 sink
- D Wire Sink Grid - WSG6347, For use in 6347 sink
- E Wire Sink Grid - WSG3018, For use in RC3018 sink
- F Wire Sink Grid - WSG6307, For use in 6307 sink
- G Wire Sink Grid - WSG3618, For use in RC3618 sink
- \* Wire Sink Grid - WSG4019SM, For use in RC4019 and RC4018 Shaws small bowls\*
- \* Wire Sink Grid - WSG4019LG, For use in RC4019 and RC4018 Shaws large bowls\*
- \* Wire Sink Grid - WSG6737, For use in 6737 sink\*
- \* Wire Sink Grid - WSG1515, For use in RC1515 sink\*
- \* Wire Sink Grid - WSG3719, For use in RC3719 sink\*
- \* Wire Sink Grid - WSG5927, For use in 5927 sink\*
- H Rinsing Basket - RB6327, For use in 6317, 6327, 6339 and 6337 sinks
- I Plate Rack - PR6327, For use in 6317, 6327, 6339 and 6337 sinks

- J Cutting Board - CB6327, For use in 6317 and 6327 sinks
- K Extended Flange - ISE10082, For I.S.E. disposals
- L Disposal Stopper/Escutcheon - 744/743, For I.S.E. disposals
- M Manual Strainer Basket without Pop-Up - 733, Chrome only
- N Manual Strainer Basket without Pop-Up - 735, Color
- O Strainer Basket with Remote Pop-Up - 737, Includes chrome basket
- P Strainer Basket with Remote Pop-Up - 739, Includes white basket
- Q Air Switch Disposal Button and Control Box - AS450
- R Sink Hole Cover - SHC-1
- S Luxury Air Gap - AG600
- T 10" Coverplate - COP10  
6" Coverplate available - COP6
- U Undermount Sink Kit - QN25UM 25" - QN36UM 36"

Wire Sink Grids are available for all ROHL Fireclay Sinks

\*Wire Sink Grids not shown.