

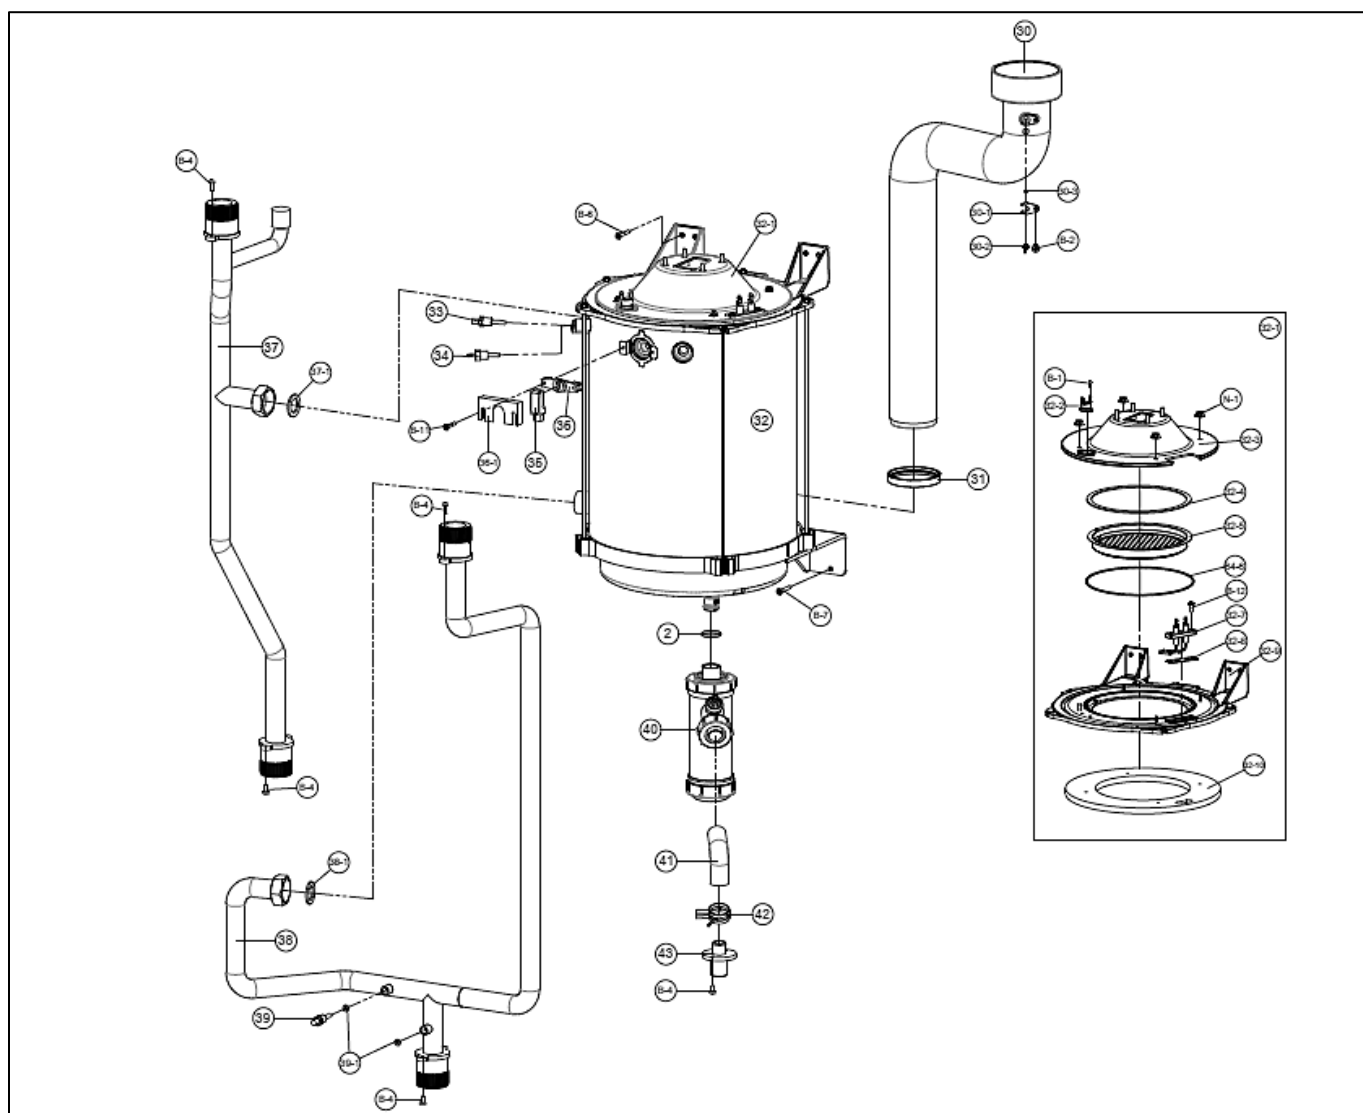


Figure 54 – Heat Exchanger Replacement Parts

NUMBER	DESCRIPTION	PART NUMBER	NUMBER	DESCRIPTION	PART NUMBER
30	Exhaust Pipe Assembly	7855P-237	33	CH Supply Temperature Sensor	7855P-030
30-1	Exhaust Temperature Sensor Clip	7855P-349	34	Water Level Detection Sensor (Low Water Cut-Off)	7855P-029
30-2	Exhaust Temperature Sensor	7855P-092	35	Flame Sensor	7855P-031
30-3	Exhaust Temperature Sensor O-Ring		36	Flame Sensor Bracket	7855P-356
31	Exhaust Pipe Gasket	7855P-351	36-1	Flame Sensor Cover	7855P-357
32	Heat Exchanger Assembly	80/100 Model	37	CH Supply Pipe	80/100 Model
		7855P-352			7855P-358
		120/140 Model			120/140 Model
		7855P-353			7855P-359
32-1	Burner Body Assembly	7855P-354	37-1	CH Supply Pipe Gasket	7855P-074
32-2	Burner Overheat Sensor	7855P-066	38	CH Return Pipe	7855P-361
32-3	Burner Body	7855P-067	38-1	CH Return Pipe Gasket	7855P-074
32-4	Burner Gasket	7855P-266	39	CH Return Sensor	7855P-097
32-5	Ceramic Fiber Burner	7855P-069	39-1	CH Return Sensor Gasket	7855P-364
32-6	Burner Plate O-Ring	7855P-249	40	Condensate Trap Assembly	7855P-053
32-7	Ignition Rod	7855P-068	41	Condensate Trap Drain Hose	7855P-255
32-8	Igniter Gasket	7855P-252	42	Condensate Trap Clamp	7855P-366
32-9	Heat Exchanger Top	7855P-355	43	Condensate Outlet Adapter	7855P-224
32-10	Burner Refractory	7855P-253			

Table 35 – Heat Exchanger Replacement Parts