Central Brass


Brecksville, Ohio 44141 Phone: (216) 883-0220 Fax: (440) 526-5745 www.CentralBrass.com

MODEL NO. <u>0477</u> UTILITY SHOWER

The utility shower faucet has a cast brass body with offset legs and 1/2-inch female coupling union connections (also available with copper

Female Coupling Union Connections 0477 (Rough Brass) 00477-RC (Rough Chrome Plate) <u>Copper Sweat Union Connections</u> 0477-C (Rough Brass) 00477-CRC (Rough Chrome Plate)

sweat union connections "C" suffix). The stems are all brass with a double O-Ring seal and rubber seat washer. The shower riser is galvanized steel pipe. The utility shower faucet has a rough cast brass finish or a rough chrome plated (RC suffix).

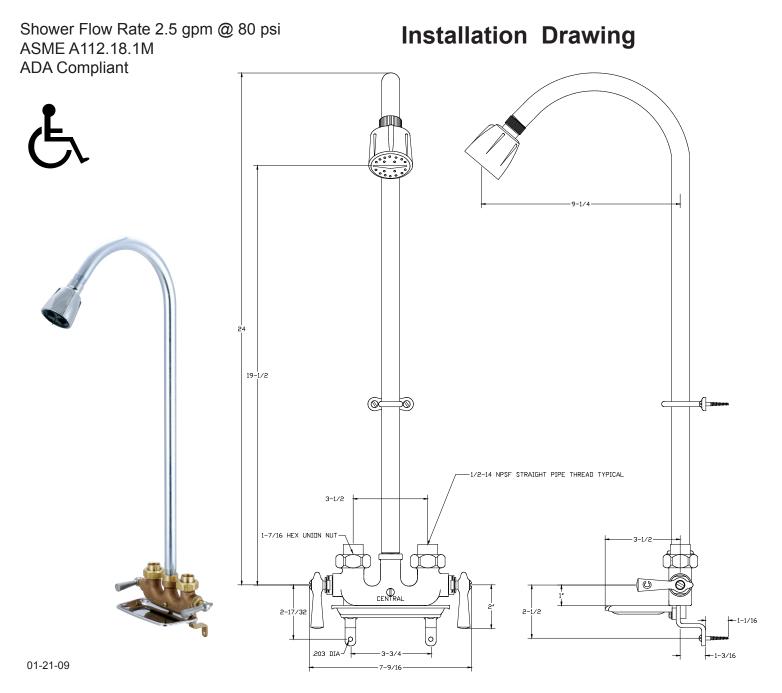

Central Brass

Brecksville, Ohio 44141 Phone: (216) 883-0220 Fax: (440) 526-5745 www.CentralBrass.com



Parts Breakdown

#	Part #	Description
1	126-S	Steel Screw
2	520-AC	Aluminum Handle Indexed "C"
2	520-AH	Aluminum Handle Indexed "H"
3	453-EWC	Brass Left Thread O-Ring Bonnet
3	453-EWH	Brass Right Thread O-Ring Bonnet
4	1038-453	O-Ring
5	453-FL	Brass Left Thread O-Ring Stem
5	453-FR	Brass Right Thread O-Ring Stem
6	901-WNN	Seat Washer
7	104	Brass Seat Washer Screw
8	1028-Y	Nylon Gasket
9	7223-A	Brass Body
10	PF-259-X	Brass Soap Dish
11	105-U	Brass Screw
12	420-N	Nylon Washer
13	105-Н	Brass Screw
14	128-RB	Brass Screw
15	7237	Brass Leg
16	1875	Brass Union

The parts listed in the parts breakdown above may not be offered separately as replacement parts. Please review the Replacement Parts page for the authorized replacement parts that are available for this item.

17	1876-BB	Brass Coupling
18	128-RB	Brass Screw
19	7238	Brass Bracket
20	157-I	Steel Riser
21	3034-1/2-02	Showerhead
22	SU-453-EL	Left Thread O-Ring Stem Assembly
22	SU-453-ER	Right Thread O-Ring Stem Assembly

ً

(1)

