



AIR ACTIVATED SWITCH BUTTON ONLY FOR WASTE DISPOSAL

ROHL Kitchen Accessories

AS425

FEATURES

- Remote on/off air switch button for activating continuous feed waste disposals
- Transmitter button with escutcheon, base and fastening nut included
- 1 1/4" cutout, 2" max. installation depth on deck or wall
- Escutcheon and button made of brass
- Does not come with control box, button only
- Matches ROHL finishes

COLORS/FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel
- Inca Brass
- Tuscan Brass
- English Bronze
- Stainless Steel

WARRANTY

- Two years on manufacturer defects
- No warranty on Tuscan Brass finish

