

# BLOWER PARTS & ACCESSORIES

**Installation Parts** 

### THRUST SLEEVE & SPACER KIT





Eliminates end play on sleeve bearing blowers. Replaces old style spring design.

Plastic sleeve with assortment of spacers adjusts to any size blower. Easy-to-follow instructions included. Only available in 3/4" shaft size.

Part No. Per Pair⁺	Shaft Diameter	
38220301	3/4"	

## THRUST COLLAR KIT



Sheet metal thrust collar in 3/4", 5/8" and 1" size. All with hollow head (Allen) setscrews.

Kit consists of one pair packaged with thrust washers. Order by part

Part No. Per Pair⁺	Shaft Diameter	
38243101*	5/8"	
38220601	3/4"	
38220701	1"	

## THRUST SPACER KIT



Packaged 12 per bag.

 
Part No. Per Doz.	Shaft Diameter	
38249101	5/8"	
38249102	3/4"	
38249103	1"	

# VIBRO-PADS - 5/16" HOLE



Part No. Per Doz. 38220901

Resilient rubber pads snap easily into place. Reduces vibration, wear and noise on blowers, fans, motors, etc. (packaged 12 per bag). Order by part number.



### MOTOR MOUNTING HARDWARE KIT



Part No. Per Doz. 38252101

## **MOTOR ADJUSTMENT KIT**

Tailpiece assembly for proper belt tension adjustment.





## **MOTOR ADJUSTMENT GROMMETS**

Resilient rubber tips for use with tailpiece assembly to reduce motor vibration and noise.

Part No. Per Doz. 38252501

Pack of 6.



**SHAFTS** 

When a bearing fails, the shaft is inevitably scored. If not replaced, it will destroy the new bearings.

Premium shafting is ground

and polished 1018 cold rolled steel. **Excess shaft may be cut off.** (Keyways and/or Flats are to be added as required in the field.)

Part No.	Diameter	Length	Shaft
38220501	5/8"	20"	Solid
38209601	3/4"	20"	Solid
38269301	3/4"	35"	Solid
38209501	1"	25"	Solid
38249201	1"	35"	Solid



- THRUST SLEEVE & SPACER KIT AND THRUST COLLAR KIT ON THIS PAGE SHIPPED IN PAIRS.

When replacing bearings, be sure to replace the shaft.

Specifications are subject to change without notice or obligation

937.253.2000 www.lauparts.com Blower Wheels 59