


*Options available based on the installation and system configuration.

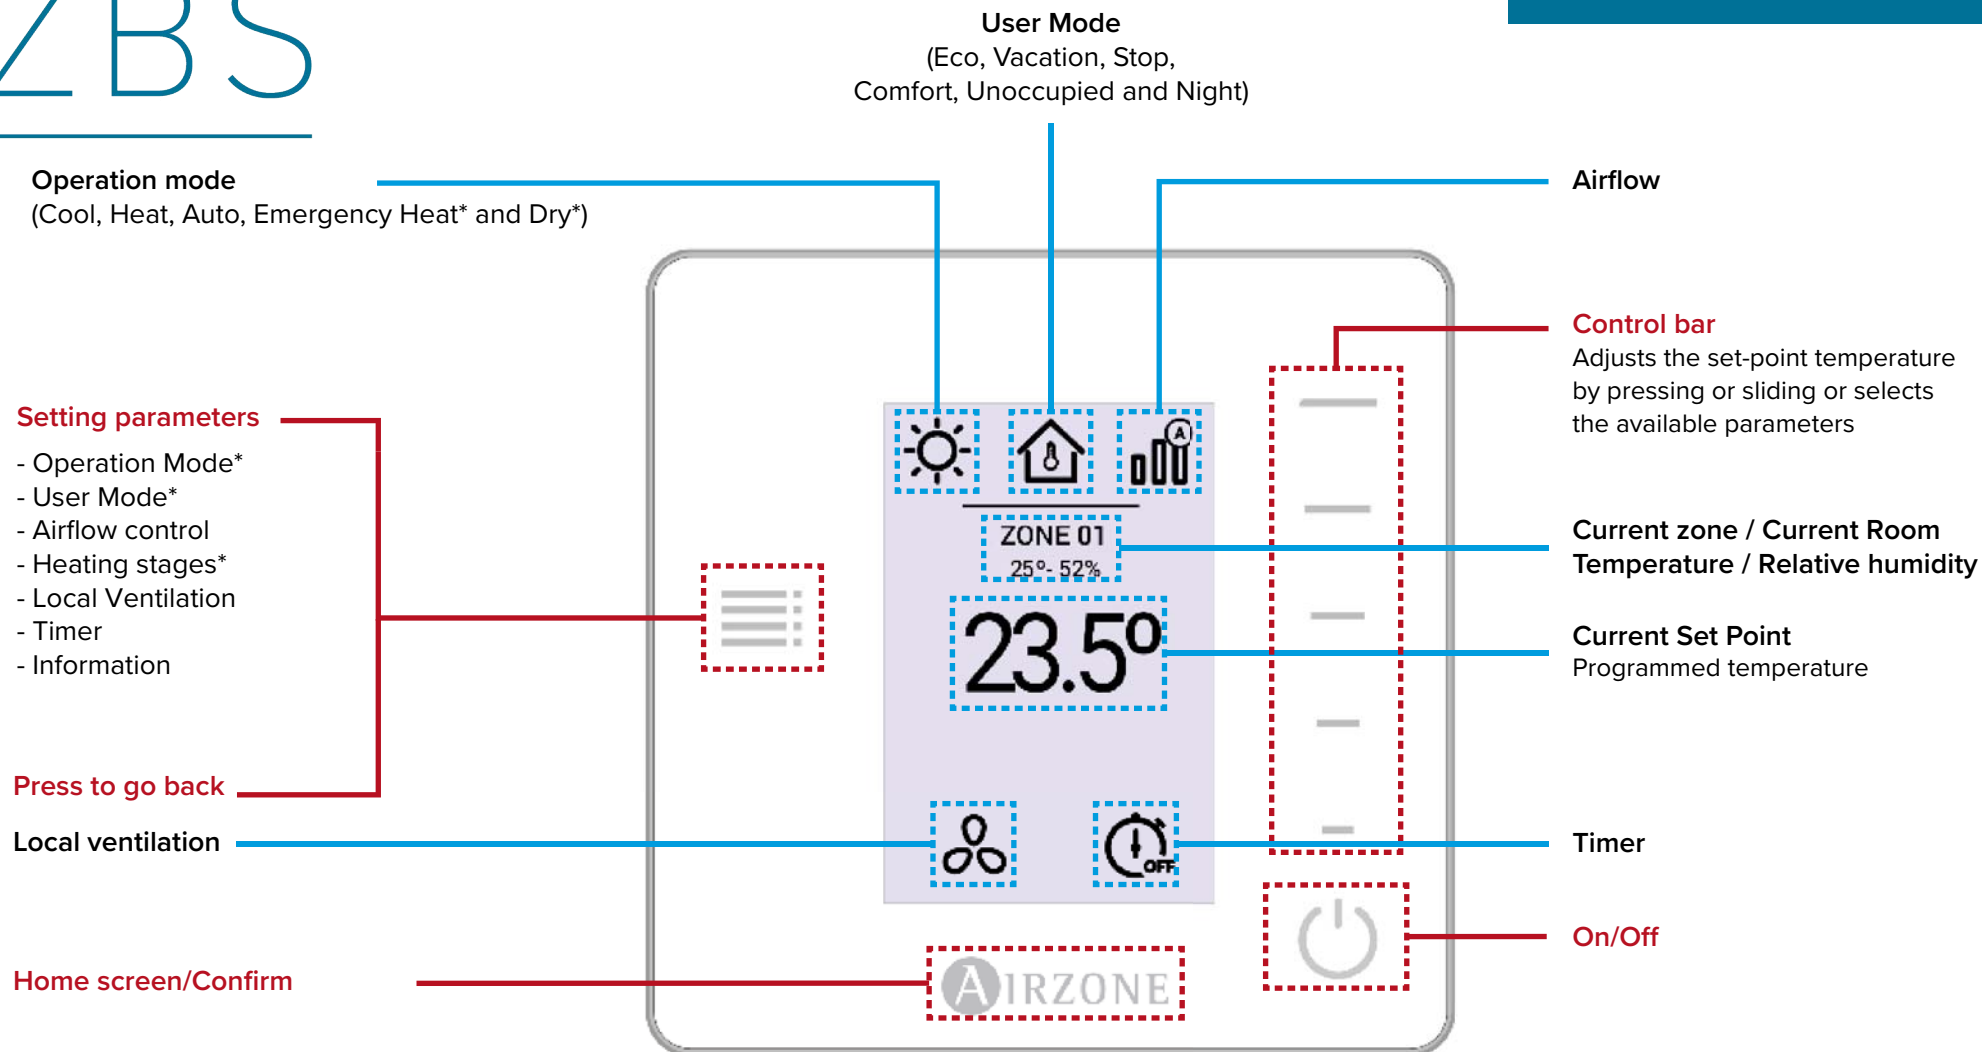

*Options available based on the installation and system configuration.

 HEATING MODE, EMERGENCY HEAT
  STOP
  SET POINT TEMPERATURE REACHED
  COOLING MODE, DRY MODE

If the button remains solid

The zone is ON.

If the button is blinking

If it is blinking slowly. The zone is OFF.

It can be turned On by pressing the Led or from remote zones.

If it is blinking quickly in red or purple there is an error.

It can be consulted on the Blueface or at the Airzone Clud app.

If the led is Off

The zone is in energy saving mode. On Wireless Lite, this mode is set by default. On Wired Lite, it can be configured in the Lite Settings parameter through Zone Navigation Menu on any Blueface thermostat or through the Airzone Cloud Webserver.

The current set point temperature is the programmed temperature for the zone. You can modify it through the Temperature Control icons, starting from the current set point temperature, which will be imposed by the user mode selected for the system.



Temperature setting:
lower temperature

-1°C / -2°C / -3°C
-2°F / -4°F / -6°F

Temperature setting:
raise temperature

+1°C / +2°C / +3°C
+2°F / +4°F / +6°F

— Capacitive buttons (tactile)