

TÖYÖTÖMI

HEAT CONVECTOR INSTALLATION AND OPERATION INSTRUCTIONS



MODEL **HC-190**



IMPORTANT

READ AND UNDERSTAND INSTRUCTIONS BEFORE INSTALLING OR USING UNIT.
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE. CHECK LOCAL CODES AND ORDINANCES FOR PERMITTED USE.

CONTENTS

SECTION A:		SECTION E:	
Specifications	1	Operating Controls and Part Names	8
SECTION B:		SECTION F:	
Unpacking	2	Safety Tips for Operation	10
SECTION C:		SECTION G:	
Safety Tips for Installation	3	Before use	11
SECTION D:		Operation	11
Installation	4	SECTION H:	
Selecting a Location	4	Test Run	14
Plumbing	5	SECTION I:	
Removing Trapped Air	5	Routine Maintenance	15
Permanent Wiring Installation	6	SECTION J:	
External Output Terminal Wiring	7	Troubleshooting	16
Wiring For External Output	7		

SECTION A: SPECIFICATIONS

Model:	HC-190
Type:	Hot Water Heating, Floor Standing Type
Heat Rating Range:	4,050 to 20,000 BTU/h (1.2 to 5.8 kW) *See the chart below for details.
Max. Allowable Pressure:	142 PSI (0.98 MPa)
Heat Exchanger Capacity:	0.16 gal. (0.6 L)
Flow Rate Range:	0.5 gal./min. to 1.5 gal./min. (1.89 to 5.68 L/min.)
Hot Water Temperature:	110°F – 190°F (43°C – 87.8°C)
Noise Level	High: 40 dBA Med: 35 dBA Low: 23 dBA NOTE: Noise levels tested at 2.5 m.
Air Volume	High: 226 CFM Med: 141 CFM Low: 64 CFM
Operation Mode:	Auto Fan Mode – 4 fan speeds (High/Med/Low/Off) Manual Fan Mode – 3 fan speeds (High/Med/Low)
Dimensions (W × H × D):	28-3/8" × 15-1/4" × 7-3/16" (720 × 387 × 182 mm)
Weight:	27.5 lbs. (12.5 kg)
Set Temperature Range:	50°F – 90°F (12°C – 30°C)
Electrical Rating:	120 Volts AC, Single phase 60 Hz High - 37W (0.4A) Med - 16W Low - 9W
Electrical Current Fuse:	5A

Heating Performance: (BTU)

Circulation Water Volume GPM (L/min)	Fan Speed	Temperature of Circulation Water								
		110°F (43°C)	120°F (49°C)	130°F (54°C)	140°F (60°C)	150°F (66°C)	160°F (71°C)	170°F (77°C)	180°F (82°C)	190°F (88°C)
0.5 GPM (1.89 L/min)	Low	4026 BTU	4991 BTU	5939 BTU	6905 BTU	7870 BTU	8818 BTU	9784 BTU	10732 BTU	11697 BTU
	Medium	4987 BTU	6183 BTU	7357 BTU	8553 BTU	9748 BTU	10923 BTU	12118 BTU	13293 BTU	14488 BTU
	High	5479 BTU	6775 BTU	8048 BTU	9345 BTU	10641 BTU	11914 BTU	13211 BTU	14484 BTU	15780 BTU
1 GPM (3.79 L/min)	Low	4372 BTU	5421 BTU	6451 BTU	7500 BTU	8548 BTU	9578 BTU	10627 BTU	11657 BTU	12706 BTU
	Medium	5793 BTU	7182 BTU	8547 BTU	9936 BTU	11325 BTU	12690 BTU	14079 BTU	15443 BTU	16832 BTU
	High	6427 BTU	7952 BTU	9449 BTU	10974 BTU	12498 BTU	13995 BTU	15520 BTU	17017 BTU	18541 BTU
1.5 GPM (5.68 L/min)	Low	4459 BTU	5529 BTU	6579 BTU	7649 BTU	8718 BTU	9769 BTU	10839 BTU	11889 BTU	12959 BTU
	Medium	5993 BTU	7430 BTU	8841 BTU	10278 BTU	11716 BTU	13127 BTU	14564 BTU	15976 BTU	17413 BTU
	High	6933 BTU	8578 BTU	10195 BTU	11841 BTU	13487 BTU	15103 BTU	16749 BTU	18365 BTU	20011 BTU

Room Temperature: 68°F (20°C)

Circulation Water Volume GPM (L/min)	Fan Speed	Temperature of Circulation Water								
		110°F (43°C)	120°F (49°C)	130°F (54°C)	140°F (60°C)	150°F (66°C)	160°F (71°C)	170°F (77°C)	180°F (82°C)	190°F (88°C)
0.5 GPM (1.89 L/min)	Low	1.19 kW	1.47 kW	1.75 kW	2.03 kW	2.31 kW	2.59 kW	2.88 kW	3.15 kW	3.44 kW
	Medium	1.48 kW	1.83 kW	2.17 kW	2.52 kW	2.87 kW	3.21 kW	3.57 kW	3.91 kW	4.26 kW
	High	1.62 kW	2.00 kW	2.37 kW	2.75 kW	3.13 kW	3.51 kW	3.89 kW	4.26 kW	4.64 kW
1 GPM (3.79 L/min)	Low	1.29 kW	1.60 kW	1.90 kW	2.21 kW	2.51 kW	2.82 kW	3.12 kW	3.42 kW	3.73 kW
	Medium	1.71 kW	2.12 kW	2.52 kW	2.93 kW	3.33 kW	3.73 kW	4.14 kW	4.54 kW	4.95 kW
	High	1.90 kW	2.34 kW	2.78 kW	3.23 kW	3.68 kW	4.11 kW	4.56 kW	5.00 kW	5.45 kW
1.5 GPM (5.68 L/min)	Low	1.32 kW	1.63 kW	1.94 kW	2.25 kW	2.56 kW	2.87 kW	3.18 kW	3.49 kW	3.81 kW
	Medium	1.77 kW	2.19 kW	2.61 kW	3.03 kW	3.45 kW	3.86 kW	4.28 kW	4.70 kW	5.12 kW
	High	2.05 kW	2.53 kW	3.00 kW	3.48 kW	3.97 kW	4.44 kW	4.92 kW	5.40 kW	5.88 kW

Room Temperature: 68°F (20°C)

Hydraulic Resistance

Circulation Water Volume	Resistance
1.5 G (5.68 L/min)	7.0 PSI/48 kPa
1.0 G (3.79 L/min)	3.2 PSI/22 kPa
0.5 G (1.89 L/min)	0.9 PSI/6 kPa

SECTION B: UNPACKING


UNPACKING

1. Unpack the unit carefully.
2. Check to see if there are any loose screws that may have occurred in transit.
3. Take accessories and the instruction manual out of the carton.

ACCESSORY PARTS

1. Installation and Operation Instructions
2. Warranty Card
3. Wall Fixing Kit (Wall bracket – 2 sets, Screw – 2 pcs., Wooden screw – 2 pcs.)

DIMENSIONAL OUTLINE

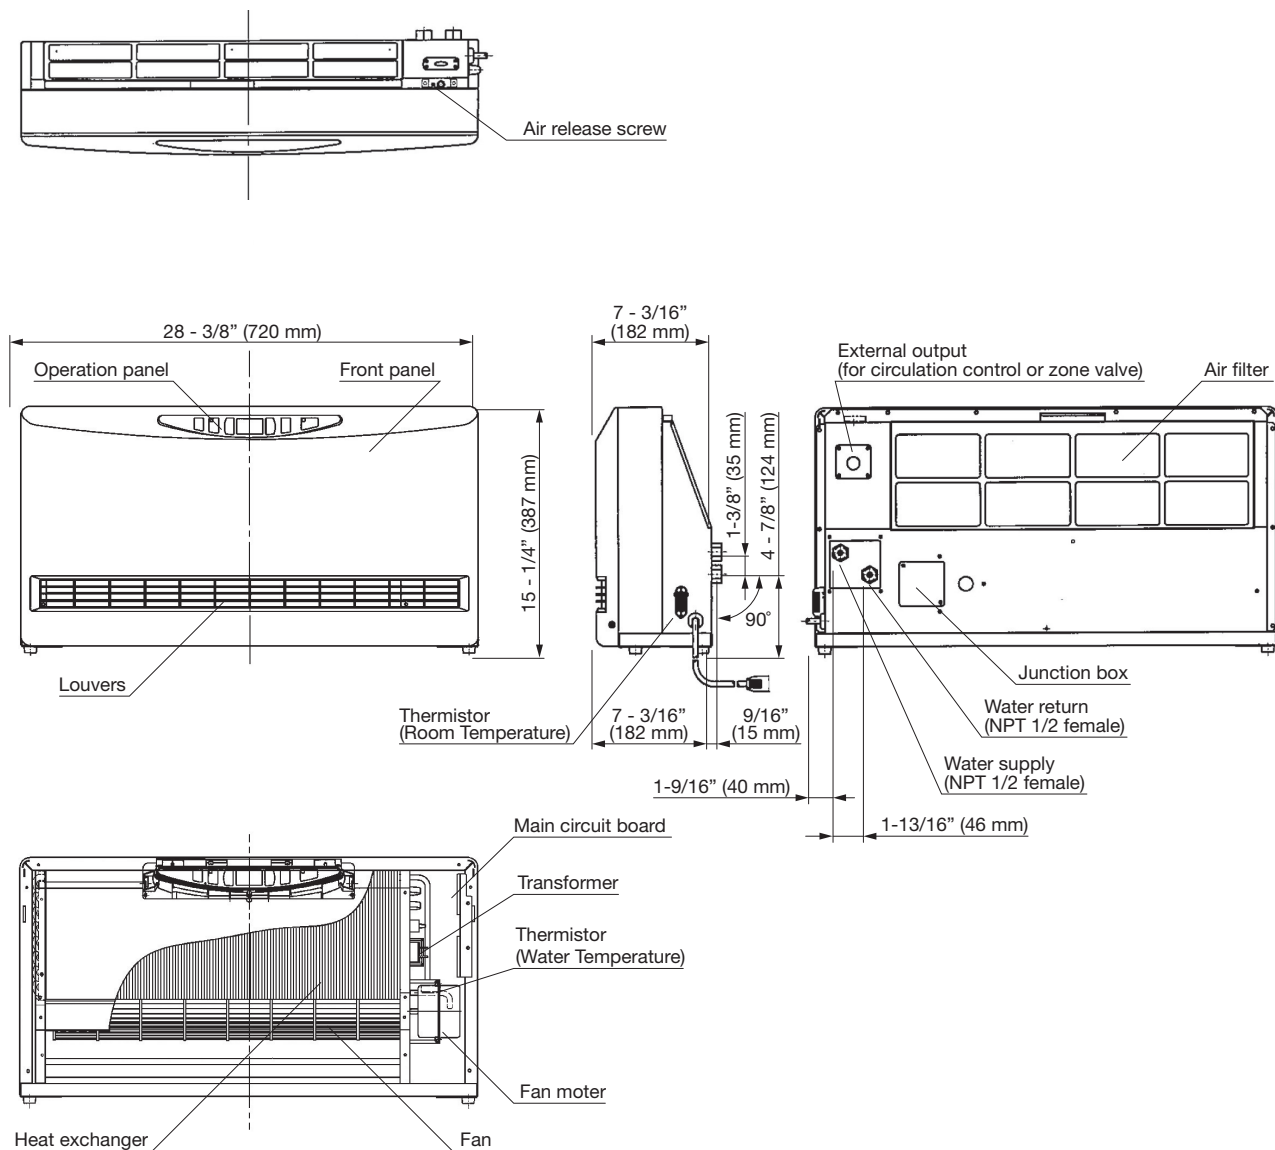

SECTION C: SAFETY TIPS FOR INSTALLATION

The instructions which are contained in this manual are classified into the following two types, which are “WARNING” and “CAUTION”. These instructions are intended to provide important information for safe operation.

“**WARNING**” indicates the possibility of causing the user a fatal accident or serious injury if the unit is incorrectly operated.

“**CAUTION**” indicates the possibility of causing the user injuries or material damages if the unit is incorrectly operated.

⚠ WARNING

1. Improper installation, adjustment, modification, or service and maintenance by an unauthorized person may cause **SERIOUS UNIT DAMAGE, BODILY INJURY, HAZARD OR PROPERTY DAMAGE**. This unit should be installed by a licensed, authorized person(s) due to the necessity of making electrical and water connections. Refer to the installation and operation instructions for assistance, or consult your dealer for further information.
2. **HAZARD OF ELECTRICAL SHOCK!** Before removing any access panels of unit for service, make sure the electrical supply to the unit is shut off. Failure to do this may result in **HAZARD, SERIOUS BODILY INJURY, OR PROPERTY DAMAGE**.
3. Check and comply with all state, and local codes before beginning the installation.

⚠ CAUTION

1. Keep the area around the unit clean and free of flammable materials.
2. **RISK OF FIRE AND ELECTRIC SHOCK. DO NOT** apply any excessive force or pressure to the power supply cord. Make sure the plug is free of dust. Be sure plug fits the receptacle securely.

SECTION D: INSTALLATION

WARNING: This unit must be installed in accordance with these instructions, local codes, ordinances and/or in the absence of local codes National Plumbing standards.

Check and comply with all state and local codes before beginning the installation.




This unit should be installed by a licensed, authorized person(s) due to the necessity of making electrical and water connections.

SELECTING A LOCATION

Select a place to install the unit where hot water and electric supply are easily available.

1. Select a place which is free of combustible substances.
2. Select a place where proper maintenance and repair can be provided for the unit after installation.
3. Install the unit on level floor.

NOTE: The unit may be installed on the wall directly.

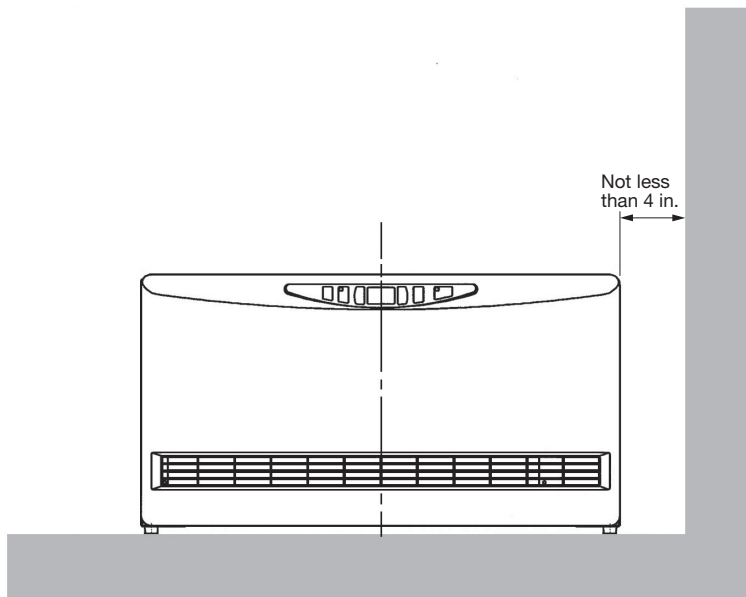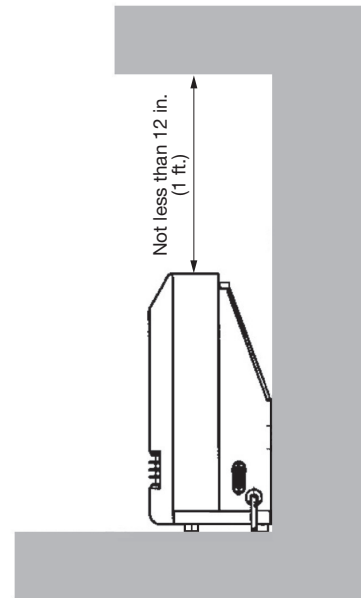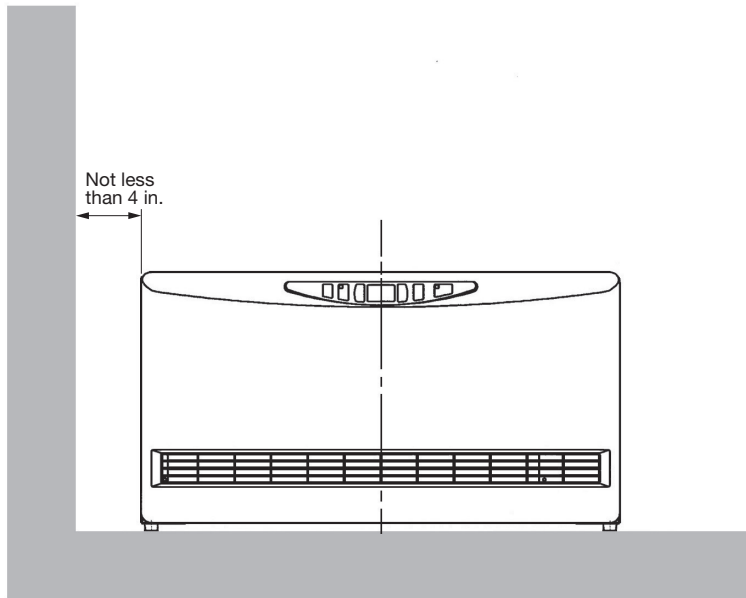


PLUMBING

NOTE: Make sure the piping for the unit is laid out properly, and also check for any water leakage.

1. Install heat insulation material on the water piping to prevent heat loss.
2. Copper or polyethylene pipe should be used for connecting pipes.
3. It is recommended to install shut-off valves on the supply and return sides for easy removal.
4. It is recommended to install a bypass loop in the water pipes with a shut-off valve.
5. Be sure to use anti-freezing solution, or non-scale block, or non-slime block, or corrosion-free water for the circulation water.

Temperature of circulation water has to be less than 190°F (87.8°C)

Maximum allowable working pressure has to be less than 142 PSI

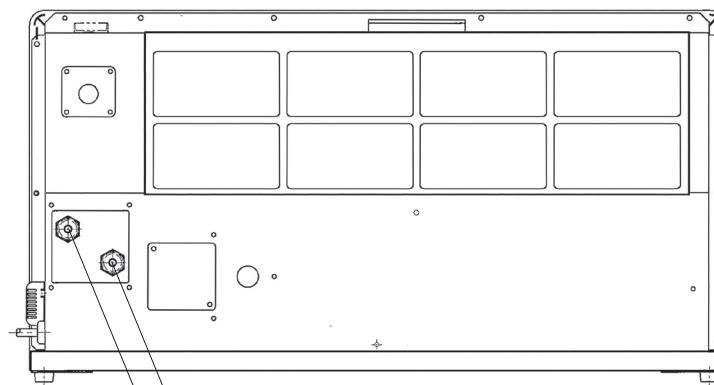


Supply opening NPT 1/2" Female

Return opening NPT 1/2" Female

REMOVING TRAPPED AIR

When operating for the first time, air may be trapped in the system. To release the air out of the piping and the unit, follow the procedures below.

1. To remove the air release cover, remove the two (2) screws.
2. Loosen the Air release screw by using the flat head screwdriver. Release the air out of the piping.
3. Tighten the Air release screw after removing all trapped air.
4. Immediately wipe off any spilled water.
5. Attach the Air release cover.

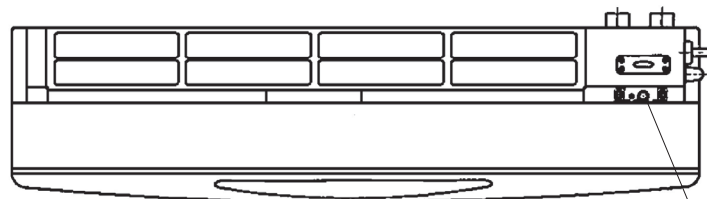

Air Release Screw


PERMANENT WIRING INSTALLATION

WARNING: TO AVOID ANY RISK OF FIRE AND ELECTRIC SHOCK. Make sure the Main circuit breaker and power supply cord is disconnected before servicing. Electric shock may cause serious injury. It is recommended that installation should be conducted by a Licensed Electrician.

PROCEDURE FOR PERMANENT WIRING

POWER SOURCE: 120V AC, 60Hz single phase

1. Turn off the Main circuit breaker. Disconnect power supply cord from the power source.
2. Remove the two (2) screws and Junction box cover on the back side of unit.
3. Disconnect the ground wire (green) from the power supply cord bracket.
4. Disconnect the two power supply wires from Junction box terminal.
5. Squeeze the strain relief bushing with an adjustable pliers to remove the plastic bushing from the unit (right side).
Remove the power supply cord.
6. Remove the Hole cap on the back side of the unit and put it in hole of the right side where the power supply cord was installed.
7. Use at least AWG 14/2 gauge copper wire to the Junction box, feed wire through hole to the right of Junction box Cover and use 1/2 inch clamp connector to secure to Heat convector cabinet.
8. Affix the Junction box cover to the unit and insert screws.

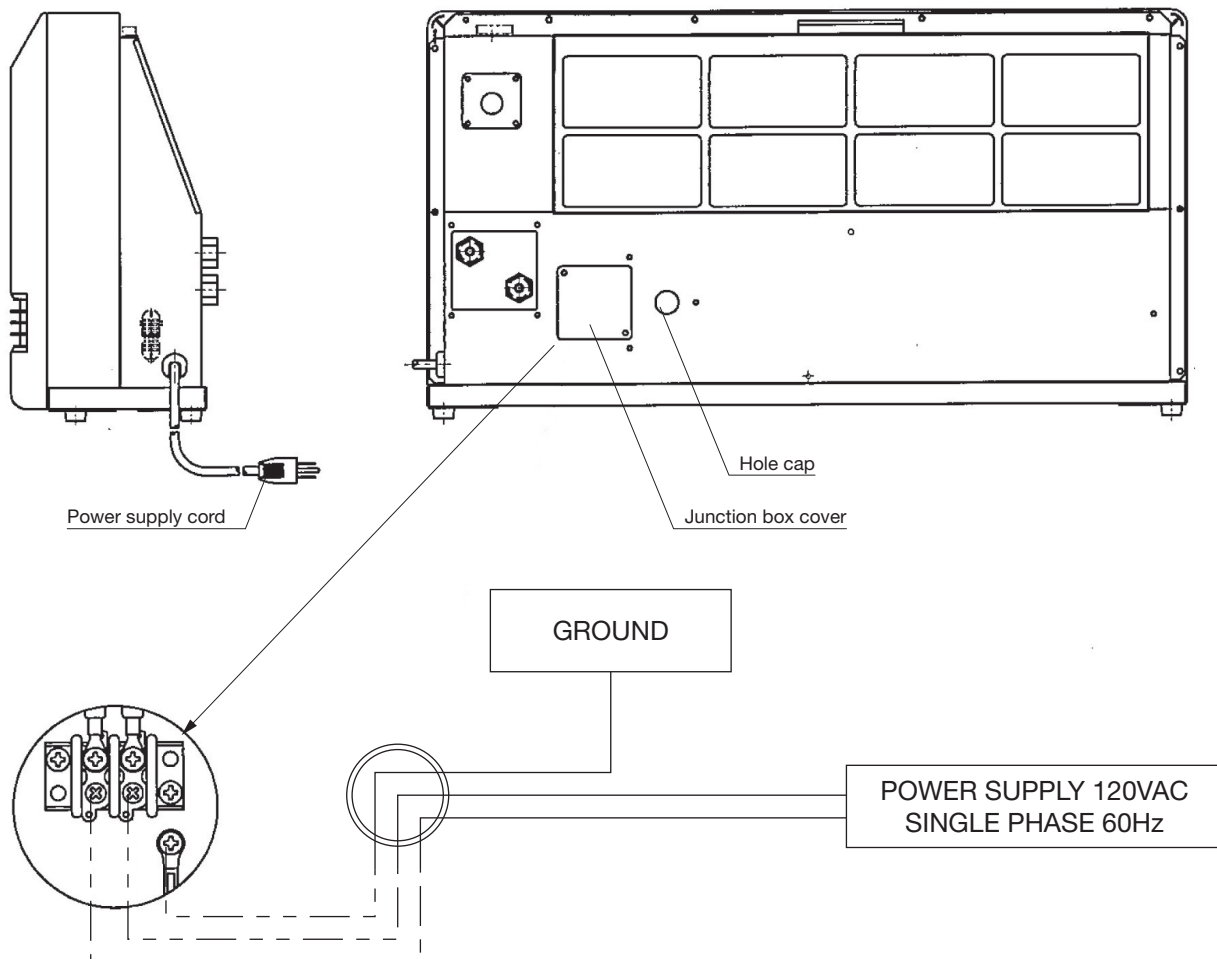


EXTERNAL OUTPUT TERMINAL WIRING

This unit has an External output terminal for low-voltage (24 volts or less) contacts to be connected to a circulation pump control or zone valve. When connecting the circulation control or zone valve unit to this terminal, it is possible to stop the circulation by the output from internal contact switch in the Heat convector. When the ⏻ Power switch is ON and there is a call for heat, the internal contact switch is closed. When ⏻ Power switch is OFF or the Room temperature reaches 4 degrees above Set temperature the internal contact switch is open.


WIRING FOR EXTERNAL OUTPUT

1. Remove the four (4) screws and the cover on the back side of the unit.
2. Cut the rubber bushing of the cover by a cutter and insert the wire for the circulation control or zone valve.
3. Connect the wire to the terminal block in accordance with the color indication.
4. Fix the cover to the unit with the four (4) screws.


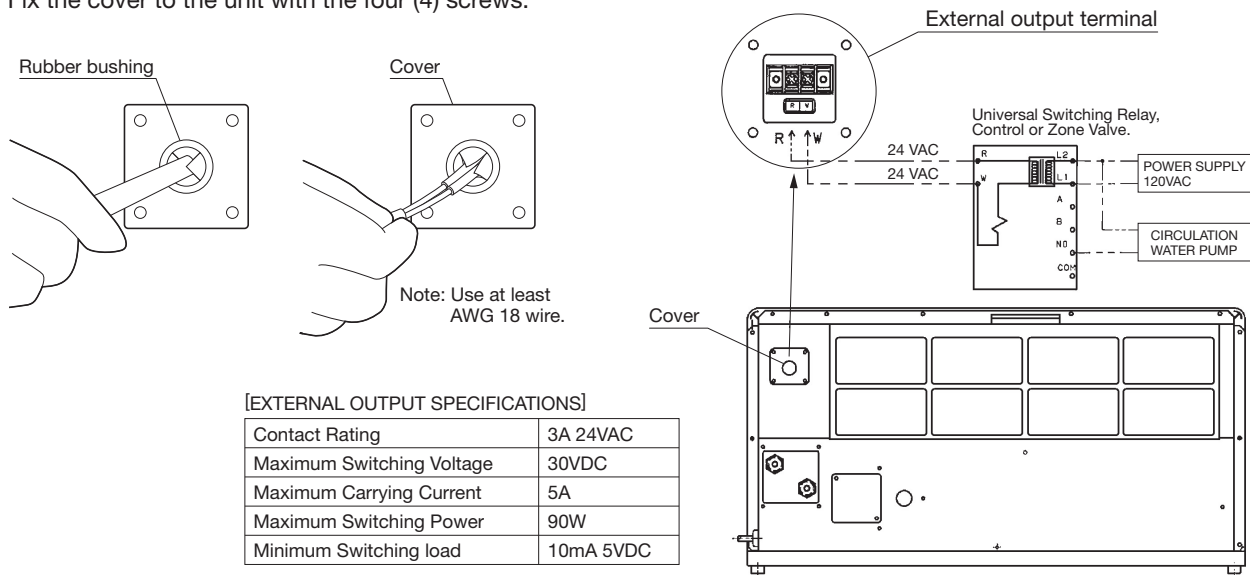


After installation is completed, secure the unit to the wall with the wall fixing kit provided with the unit.


NOTE: Make sure the unit is parallel to the wall.

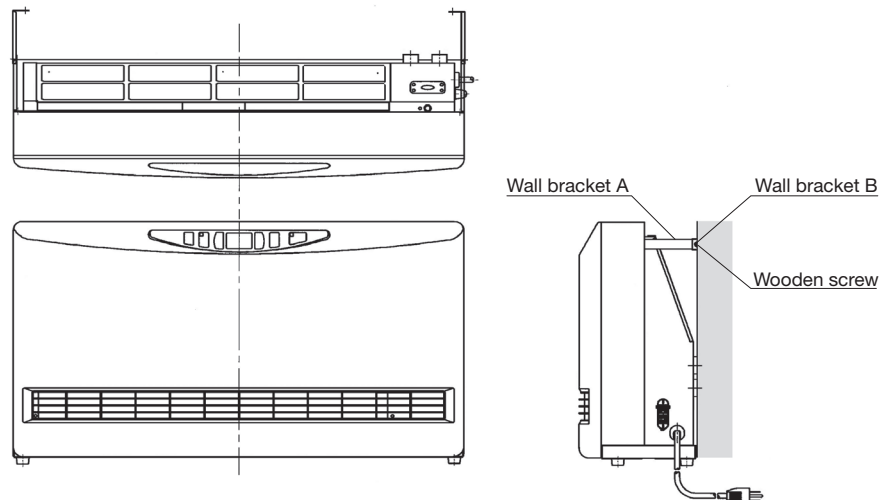

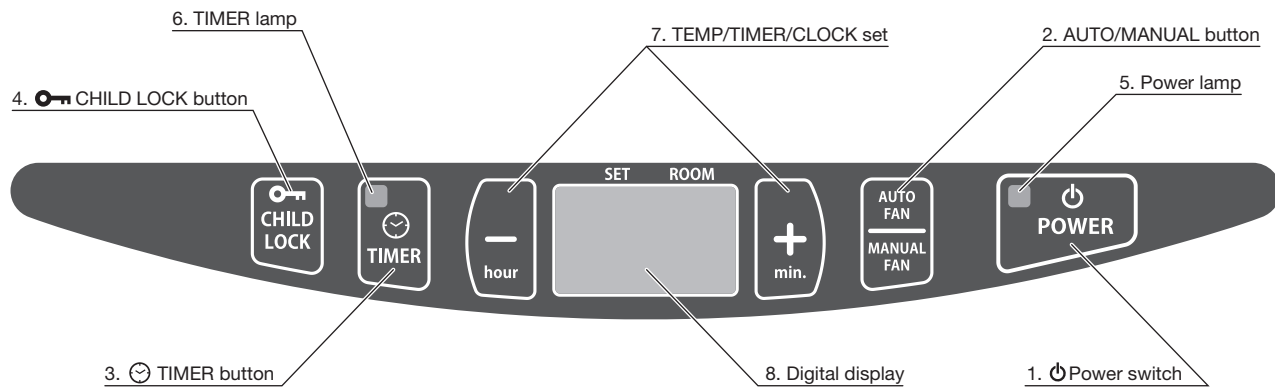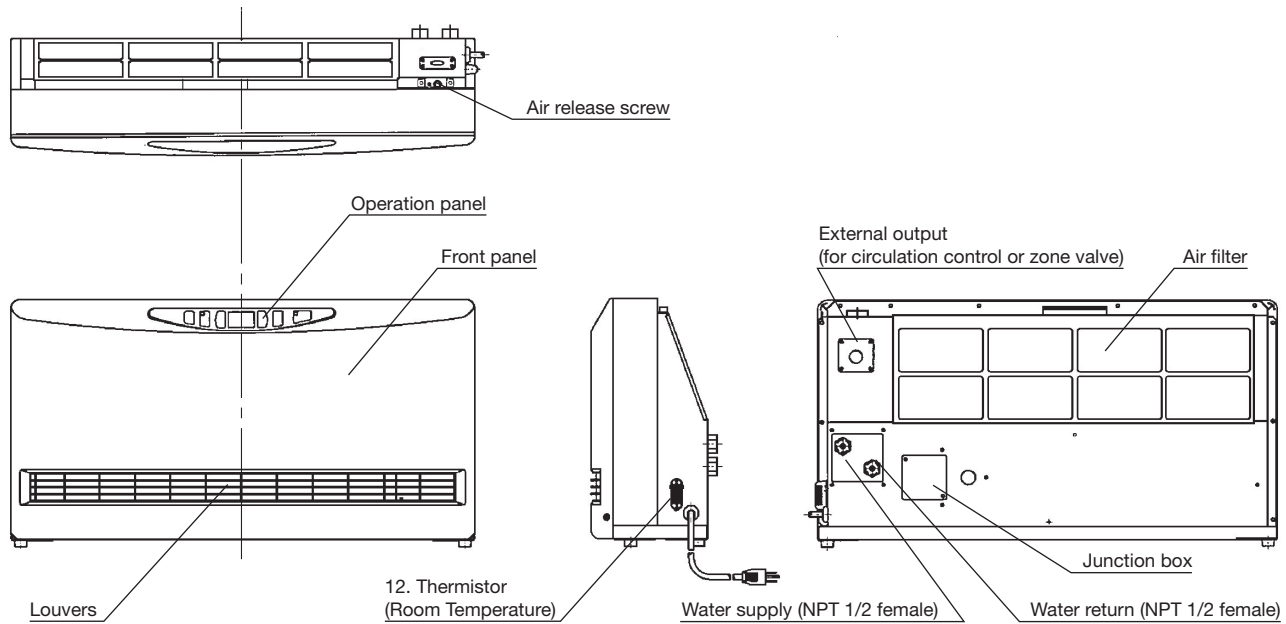


SECTION E: OPERATING CONTROLS AND PART NAMES

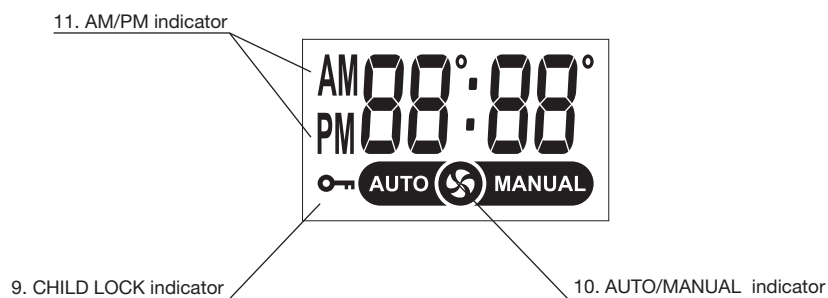

DIGITAL DISPLAY



- | | |
|---|---|
| 1.  POWER switch: | Main switch turns the unit on or off. |
| 2. AUTO/MANUAL button: | Button switches fan speed to either AUTO and MANUAL. |
| 3.  TIMER button: | Button turns Timer operation mode on or off. |
| 4.  CHILD LOCK button: | The button turns CHILD LOCK operation mode on or off. |
| 5. POWER lamp: | Light means the unit is in operation. |
| 6. TIMER indicator: | Light means the unit operating in Timer setting mode. |
| 7. TEMP/TIMER/CLOCK set: | TEMP/TIMER/CLOCK set modes can be set by pressing “-/hour” or “+/min.” buttons. |
| 8. Digital display: | Displays clock, set temperature, room temperature and error code. |
| 9. CHILD LOCK indicator: | Light – The unit is in CHILD LOCK mode. |
| 10. AUTO/MANUAL indicator: | Light – Digital display shows fan speed mode. |
| 11. AM/PM indicator: | Light – Digital display shows current time. |
| 12. Thermistor: (Room Temperature Sensor) | Constantly senses room temperature and supplies information to the unit so that desired room temperature can be maintained. |
| Power supply cord: | For use in 120V, AC electrical outlet. |

SECTION F: SAFETY TIPS FOR OPERATION

The instructions which are contained in this manual are classified into the following two types, which are “WARNING” and “CAUTION”. These instructions are intended to provide important information for safe operation.

“**WARNING**” indicates the possibility of causing the user a fatal accident or serious injury if the unit is incorrectly operated.

“**CAUTION**” indicates the possibility of causing the user injury or material damages if the unit is incorrectly operated.

WARNING

1. ALWAYS plug into 120 V, 60 Hz, single phase electrical outlet.
2. Due to high surface temperatures, keep heater away from children, furniture and clothing while in operation.
3. DO NOT touch the Heat exchanger.
4. NEVER insert objects of any kind into the air intake or air outlet.
5. DO NOT unplug if your hands are wet. An electrical shock may occur.
6. DO NOT run power cord under carpets, rugs, or floor mats of any kind.
7. DO NOT apply any excessive force or pressure to the power supply cord.
8. Make sure that the plug is free of dust or debris.
9. DO NOT use an extension cord.
10. RISK OF INJURY FROM MOVING PARTS AND ELECTRICAL SHOCK. Disconnect power cord before servicing unit.

CAUTION


1. Keep objects more than 20 in. (50 cm) away from front of unit.
2. DO NOT place animals, plants, or combustion equipment in a place which is subjected to the direct air flow of the unit.
3. DO NOT ride or place objects on the unit.
4. DO NOT try to repair or alter unit by yourself.
5. DO NOT place flower vase or water containers on the top of the unit.
6. DO NOT block the air inlet or outlet.
7. To prevent abnormal operation and prolong heater life, be sure to perform routine maintenance.

SECTION G: OPERATION

BEFORE USE

1. Position of the Unit

Make sure the position of the unit is level.

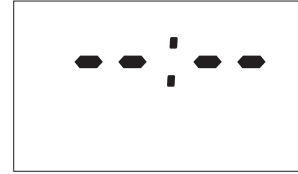

2. Plug in the Unit


Plug unit into a 120V AC electrical outlet. On digital display will appear two sets of dashes. Indicating the time is not set.

3. Setting the Clock

Important: Clock on the unit must always be set to current time. Press “-/hour” and “+/min.” button to change to the correct time. NOTE: “-/hour” or “+/min.” button will change the time every one (1) unit.

Holding the button continuously will cause the time to change rapidly.

NOTE: In the event of a power failure all clock and timer setting are cancelled and will need to be reset.

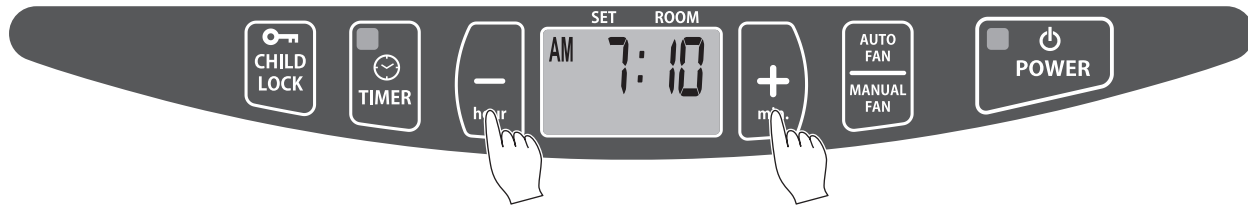


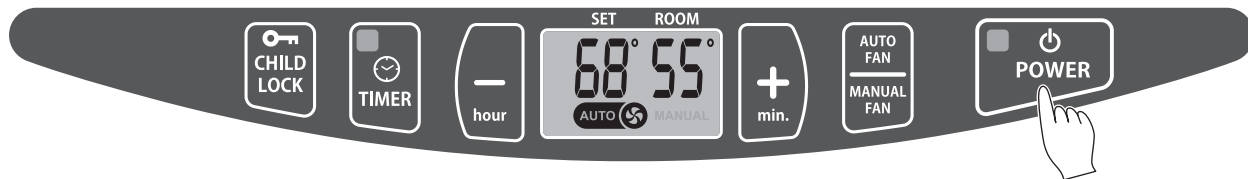
OPERATION

NOTE: When you first use your unit, or when you plug the unit into an electrical outlet to start to use, operation mode has been set to Auto Fan mode.

NOTE: When the circulation water at the temperature of 100°F (38°C) or more flows into the unit, the fan will start rotating. If the temperature of the circulation water is less than 100°F (38°C), the fan will not start rotating. If the temperature of the circulation water is between 100°F (38°C) and 110°F (43°C), the unit will operate at low fan speed. When the temperature of the circulation water is more than 110°F (43°C), the fan speed is adjusted automatically according to the set temperature and the room temperature.

1. Turning Unit ON

Press  Power switch. The current room temperature and the set temperature will be shown on the digital display. POWER lamp will light and will hear a beep sound.



Adjusting Room Temperature


A. Press “-/hour” or “+/min.” button. the “ ° ” marks will start to flash.

NOTE: “-/hour” or “+/min.” button will change the temperature every 2°F (1°C).

B. Press “-/hour” or “+/min.” button as required. Room temperature can be set from 50°F – 90°F (12°C – 30°C). (Initial setting : 68°F (20°C))

NOTE: Desired temperature setting will be displayed on the digital display when you set the room temperature.


- C. When room temperature exceeds the selected setting by approx. 4°F (2°C), the Fan will automatically stop. As room temperature drops, the Fan will automatically re-start to maintain the desired temperature.

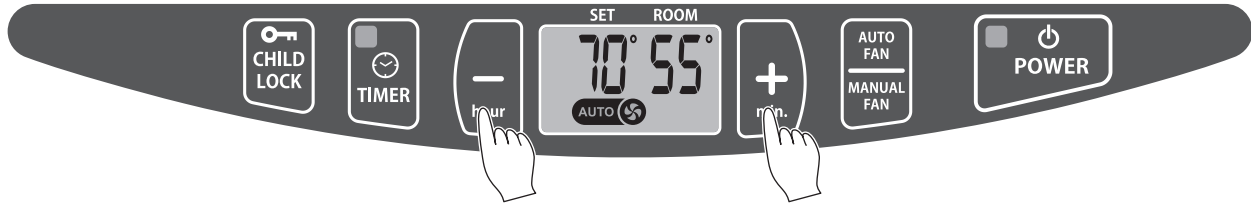

NOTE: Initial setting of the temperature is Fahrenheit. If you like to change to Celsius, contact your dealer.

2. Turning Unit OFF

Press ϕ Power switch. POWER lamp will go out and there will hear a beep sound. The current time will be shown on the digital display. If the clock is not set, two sets of dashes will be shown.

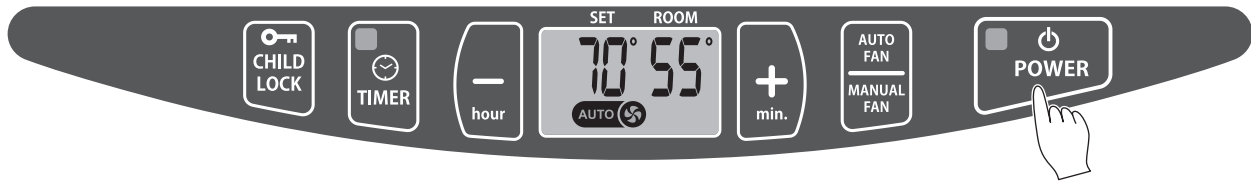

NOTE: When the unit is turned off, always stop the circulation of the hot water to the Heat convector. If a circulation pump control is connected to the External output terminal, the Circulation pump will stop automatically when the Heat convector is turned off.

AUTO FAN OPERATION

The Auto Fan mode shifts the fan speed automatically to adjust the room temperature according to the set temperature.

1. Press the ϕ Power switch. The current room temperature and the set temperature will be shown on the digital display. Power lamp will light. If the unit is set to Auto Fan mode, "AUTO" is shown on the digital display. If "MANUAL" is shown on the digital display, press the AUTO FAN/MANUAL FAN button to switch the fan mode.
2. Press "-/hour" or "+/min." button as required. Room temperature can be set from 50°F – 90°F (12°C – 30°C).

NOTE: The fan speed is shifted automatically between low, medium, and high fan speed to maintain the room temperature.

Once the room temperature exceeds the selected setting by approx. 4°F (2°C), the Fan will automatically stop.

MANUAL FAN OPERATION

1. Press the ϕ Power switch. Power lamp will light and the current room temperature and the set temperature will be shown on the digital display. If the unit is set .. Manual Fan mode, "MANUAL" is shown on the digital display. If "AUTO" is shown on the digital display, press the AUTO FAN/MANUAL FAN button to switch to the manual mode.

2. Press "-/hour" or "+/min." button to select the fan speed "F3" is high fan speed, "F2" is medium, and "F1" is low.

NOTE: The room temperature is not controlled during the Manual Fan mode. The fan speed will stay in the set fan mode regardless of room temperature.

TIMER OPERATION


"TIMER" operation is programmed for a particular time and temperature, in order to save energy when the unit is used for example at night or while you are away from home.

NOTE: Meaning the timer feature allows a user to automatically change the temperature (set by user) until a certain time of day (set by user) by pressing the \odot Timer button. This button must be pushed each time you want the temperature to go to a different temperature. It does not automatic start.

"TIMER OPERATION" is not available in Manual Fan mode

Example:

Your normal room temperature is set for 70 degrees. You work from 8 am until 5 pm. You want the room temperature to drop to 62 degrees while you are at work and you want the room to return to 70 degrees at 4 pm so it will be warm when you get home. When you leave for work you must press the ⌚ timer button to activate the timer. The temperature will drop to 62 degrees and return to 70 degrees at 4 pm.

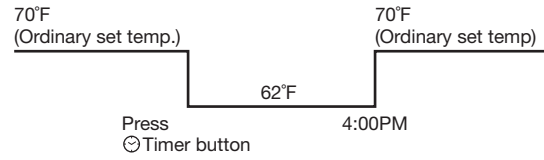

Setting Timer:

1. Make sure the clock is set. If not, press the hour and minute button until the correct time is indicated.
2. Press ⌚ Timer button. The Timer lamp will flash. Use the “-/hour” and “+/min.” buttons to set the time at which you want the room to return to normal temperature. This would be 4:00PM to have the room start heating up at 4 pm. You have ten seconds from the time you push the button to start entering this setting.
3. After ten seconds of not pressing the “-/hour” or “+/min” button, the display will change to temperature. The display will show 68 degrees by default. Use the “-/hour” or “+/min” button to adjust the temperature setting, in this case to the desired 62 degrees. The timer is now set and you are in the timer mode. To return to the normal operation mode, press the Timer button again to turn off.
4. If the unit has been set for a particular hour and temperature of the timer operation while in shutdown, the time lamp will change from flashing to continuous and the timer time will be shown on the digital display after completion of setting the timer. To start the timer operation press ⏻ Power switch to turn on and then press the ⌚ Timer button. The Timer lamp will light and the timer operation will start.

NOTE: The unit operates at the same hour and at the same temperature, if it has once been set for such hour and temperature.

NOTE: If at any time a power failure occurs the time and temperature settings are cancelled.


NOTE: To cancel the timer operation, press the ⌚ Timer button again. The Time lamp will go out. Normal operation will then be restored.

NOTE: After the unit has been set for a particular hour and temperature it will operate at that same time and temperature when the ⌚ timer button is turned on.

NOTE: To change the setting on the timer, during timer operation, press “-/hour” or “+/min.” button to change the timer setting in the same way as 2. under “Setting Timer”.

CHILD LOCK OPERATION

Press the 🔑 CHILD LOCK button for more than 3 seconds to set the child lock while in operation or not operation. “CHILD LOCK” sign will be shown on the digital display.

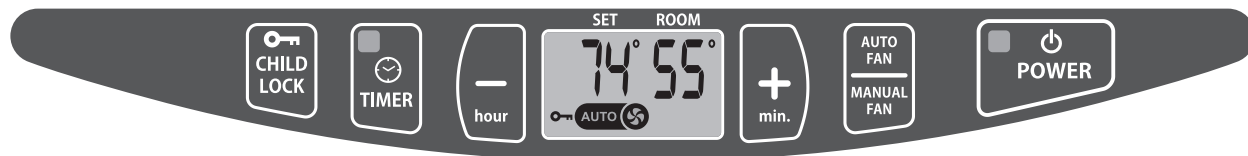

If the ⏻ Power Switch is pressed while the Child Lock is on and the unit is off, the unit will not start operation. If the ⏻ Power Switch is pressed when the Child Lock is on and the unit is in operation, then the unit will automatically shut down with a continuous beeping sound. The Child Lock symbol on the digital display will flash and “OFF” will be shown on the digital display. See diagram below.




To stop the beeping sound, press the 🔑 CHILD LOCK button for more than 3 seconds.

SECTION H: TEST RUN

PREPARATION

1. Make sure there is no water leaking from the unit and piping.
2. Make sure electrical connections and grounding are wired properly.
3. Check for air trapped in the plumbing.

OPERATION

1. Plug into the receptacle.
2. Press the  Power switch to ON position. Power lamp will come on.
3. When the hot water at the temperature of 100°F (38°C) or more flows into the unit, the Fan will start rotating.

POWER FAILURE RECOVERY SYSTEM

If at any time a power failure occurs during operation, the time, timer and temperature settings will be erased. When the power returns, the unit will automatically restart with the following conditions.

- Operation mode: The unit will restart in AUTO FAN mode.
TIMER: The Timer settings will be reset. Please reset the TIMER. (See page 12 TIMER OPERATION)
Set temperature: The Set temperature will resume to the previous temperature set.
Child Lock: The Child Lock will be restored to the previous setting.

The power lamp will blink to indicate that a power failure has occurred and that the time and timer has been erased. To stop the blinking power lamp, press any button once.


SECTION I: ROUTINE MAINTENANCE

CAUTION: Be sure to unplug the unit before performing any checks or cleaning.

FOR OPTIMUM UNIT PERFORMANCE, THE PARTS SHOWN BELOW SHOULD BE CLEANED REGULARLY:

1. Clean Louvers (ONCE A MONTH)



Dust and stains should be wiped off louvers with a damp cloth.

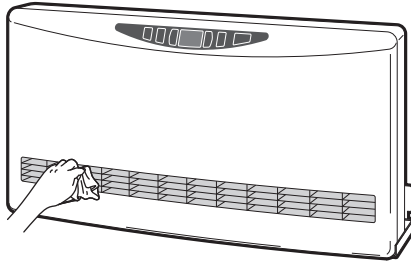

2. Clean Air Filter (ONCE A MONTH)

A mesh filter is located on the cabinet's rear side. Once a month slide the filter up to remove and vacuum it clean. To remove the air filter, remove the two (2) screws by using Phillips head screwdriver.

WARNING: NEVER touch the Heat exchanger. It can very hot and cause injury.

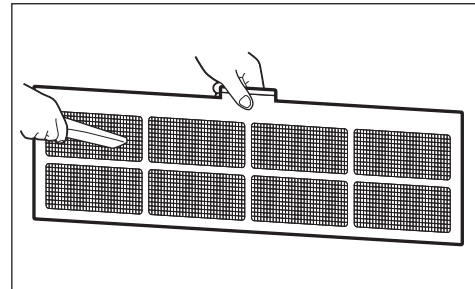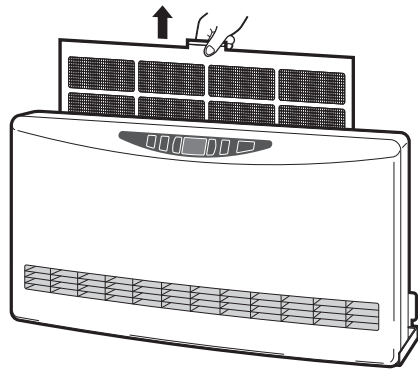

SECTION J: TROUBLESHOOTING

PLEASE NOTE THE FOLLOWING BEFORE REQUESTING FOR HELP FOR REPAIR AND SERVICES


The following conditions can happen during operation of the unit.

CONDITION	REASON
Does not operate.	<ul style="list-style-type: none"> - Power outage. - Power supply cord is disconnected. - Child Lock is on.
Warm air does not blow.	<ul style="list-style-type: none"> - Room temperature is higher than set temperature when unit is in Auto fan mode. - Water temperature is too low at the time of start of operation. The temperature of the circulation water is less than 100°F (38°C).
Warm air does not blow and the displayed room temperature is much different from actual temp.	<ul style="list-style-type: none"> - Unit is exposed to direct sunlight. - Room thermistor is exposed a heat source.
Cold air blowing out.	<ul style="list-style-type: none"> - Even if the temperature of the circulation water is 110°F (43°C) or more, the wind blowing off may feel it cold.
Heating performance has decline.	<ul style="list-style-type: none"> - Clogged or dirty Air filter. - Water pipe flow has been restricted.
Occasionally makes “cracking” noise when starting or after shutdown.	<ul style="list-style-type: none"> - Expansion and shrinkage of plastic and metal parts when they are heated or cooled. Normal
“Ticking” noise.	<ul style="list-style-type: none"> - Noise of relay, valve and/or Fan motor. Normal.
Cannot be operated, beeping noise, and “OFF” is shown on digital display.	<ul style="list-style-type: none"> - ⏻ POWER switch has been turned off while Child Lock is turned on.
Water running noise.	<ul style="list-style-type: none"> - Hot water is flowing into the unit. Normal
Air flow is poor.	<ul style="list-style-type: none"> - When the temperature of the circulation water is between 100°F (38°C) and 110°F (43°C), the unit will operate at the low fan speed only. - The Air filter is clogging.
⏻ Power lamp blinks.	<ul style="list-style-type: none"> - Indicating that the power failure occurred. To stop the blinking power lamp, press any button once.

Should problems arise during operation, use this chart to determine the cause and the proper steps to take. Be sure to unplug the unit and allow to cool completely before taking corrective measures.

In the event that the unit should shut down itself, without any action on your part, you should look to the digital display for any of the following error codes.

ERROR CODE	CAUSE	SOLUTION
<i>E-03</i>	Short-circuit of the Water thermistor	Consult your dealer.
<i>E-08</i>	Electrical power supplied to unit has abnormal Hz or frequency. (Less than 45 Hz or more than 65 Hz)	Check power supply. Main circuit board malfunction.
<i>E-13</i>	Water thermistor is disconnected.	Consult your dealer.
<i>E-40</i>	Water temperature too low	Boiler malfunction. Circulation pump malfunction. Consult your dealer. (If the boiler and the circulation pump are not malfunction)
<i>F-0</i>	⏻ POWER switch was pressed at the time power was restored.	Press ⏻ POWER switch, if it does not correct then ⏻ Power Switch is defected.

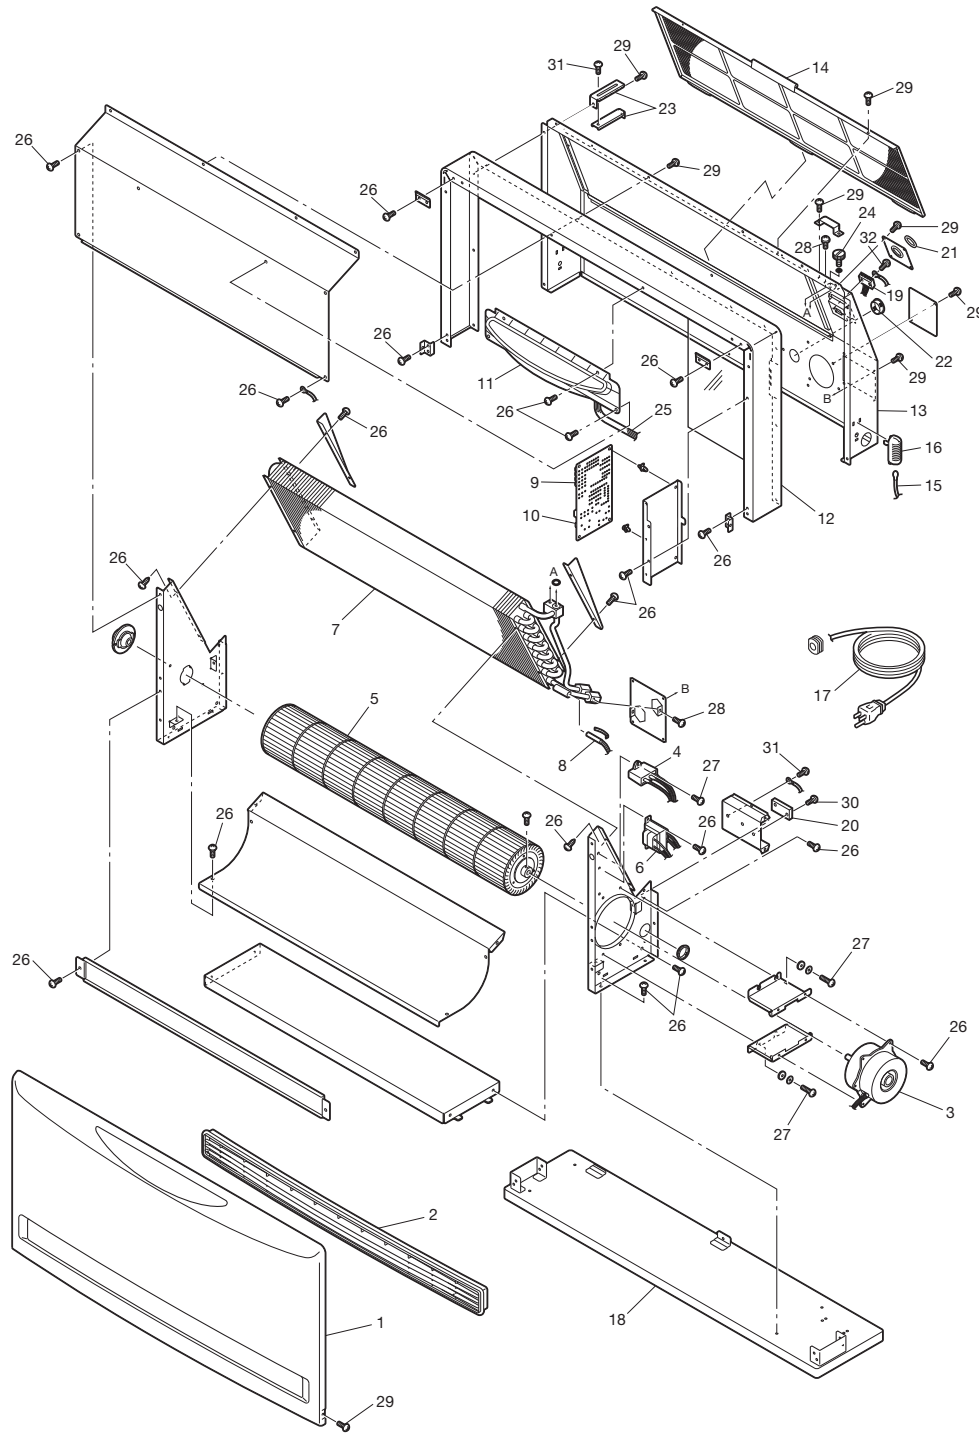

RE. #	PART #	DESCRIPTION	RE. #	PART #	DESCRIPTION	RE. #	PART #	DESCRIPTION
1	20477046	Front panel	13	20477066	Rear panel	25	20477052	FFC ribbon cable
2	20477032	Louver assembly	14	20477040	Filter	26	20474050	Screw C
3	20477069	Fan motor assembly/ Capacitor	15	20477073	Room temp. thermistor	27	20474051	Screw D
4	20477003	Fan capacitor	16	20477075	Room thermistor cover	28	20476459	Screw B7
5	20477004	Fan cross assembly	17	20477035	Power supply cord	29	20475862	Screw S2
6	20477017	Transformer	18	20477029	Base assembly	30	20477084	Screw F5
7	20477144	Heat exchanger assembly	19	20477014	Switch terminal block	31	20476454	Screw B4
8	20477074	Water temp. thermistor	20	20477015	Power terminal block	32	20477086	Screw D4
9	20477012	Main circuit board	21	20477039	Rubber bushing	33	20477195	Instruction manual
10	20478379	Fuse 2 (5A)	22	20475850	Hole plug	34	20477199	Carton
11	20477076	Lamp circuit board	23	20477062	Wall bracket			
12	20477020	Top / Side panel	24	20477051	Bleeder screw			

PRODUCT REGISTRATION

To register your product please visit our website at www.toyotomiusa.com/productRegistration.php or scan the QR code on your smart device.



Make a note of your heater's serial and lot number, located on the side of the cabinet.
Your heater's serial and lot number:

SERIAL NO.

LIMITED WARRANTY

TOYOTOMI U.S.A., INC. ("TOYOTOMI") warrants each product and any parts thereof sold by it to be free from defects in materials or workmanship under normal use and service for TWELVE (12) MONTHS* from the date of delivery to the original purchaser at retail subject to the following terms and conditions :

WHAT IS COVERED : Product or any parts thereof which are defective in materials or workmanship.

WHAT IS NOT COVERED :

(1) This warranty does not extend to any defect due to the negligence of others: failure to install, operate, or maintain unit in accordance with instructions (Installation and Operation instructions are furnished with each new unit); unreasonable use; accidents; alteration, use of unauthorized or non-standardized TOYOTOMI parts and accessories; electrical malfunction, i.e., as resulting from large power surges, short circuit, etc.; incorrect installation; or repair by anyone other than a service facility specified by TOYOTOMI.

(2) Normal wear and tear of parts, including hoses, wires, filters and accessories.

(3) This warranty does not cover shipping costs.

WHO IS COVERED : The original purchaser at retail.

WHAT WE WILL DO : TOYOTOMI will either repair or replace, at its option, all defective parts free of charge that are covered by this limited warranty on a carry-in basis, to your nearest authorized dealer or distributor of TOYOTOMI.

WHAT YOU MUST DO FOR WARRANTY SERVICE : You must return the defective Product or part to any authorized dealer or distributor of TOYOTOMI with this LIMITED WARRANTY and a copy of your bill of sale or credit card charge receipt or other documents evidencing the date of the Product's delivery, if service is not available locally, please contact our CUSTOMER RELATIONS DEPARTMENT at :

TOYOTOMI U.S.A., INC.
604 Federal Road, Brookfield, CT 06804
(203)775-1909

THE FOREGOING EXPRESSES ALL OF TOYOTOMI'S OBLIGATIONS AND LIABILITIES WITH RESPECT TO THE QUALITY OF PRODUCT FURNISHED BY IT. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. TOYOTOMI SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL ARISING OUT OF, THE USE OF, OR INABILITY TO USE, THE PRODUCT OR DAMAGES RESULTING FROM OR ATTRIBUTABLE TO DEFECTS IN THE PRODUCT.

No one other than TOYOTOMI has authority to extend or modify the terms of this Limited Warranty in any manner whatsoever.

Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may also have other rights that vary from state to state, or province to province.

* In addition to the warranty period stated above, an extended two (2) year warranty (3 years from date of purchase) is on for the following parts. :

1. Heat Exchanger

NOTE : THE EXTENDED WARRANTY POLICY IS APPLICABLE ONLY FOR THE REPLACEMENT OF THE ORIGINAL FACTORY-INSTALLED PARTS THAT HAVE FAILED WITHIN THE TIME LIMITATIONS AS INDICATED. REPLACEMENT PARTS ARE WARRANTED FOR THE REMAINDER OF THE ORIGINAL PART WARRANTY PERIOD. LABOR IS NOT COVERED ON THE EXTENDED WARRANTY.

2718003000

TOYOTOMI

TOYOTOMI U.S.A., INC.

604 Federal Road, Brookfield, CT 06804
www.toyotomiusa.com

New 05/21
Part #20477195

Printed in Japan