



Build With Purpose

Installation, Operation & Maintenance Instructions for the PRIER C-108SH1 Shower Attachment Kit

Please leave this sheet for the property homeowner

The C-108SH1 is fully compatible with the C-108 hot and cold freezeless hydrant (sold separately). The self-draining C-108SH1 comes with everything you need to install, including a standard MPT shower head, mounting hardware and a stainless-steel riser that will maintain its attractive finish.

INSTALLATION

1. Hold onto nut with a wrench and turn 45° elbow clockwise to remove from C-108 body. The elbow is not needed (See Image 1). A screwdriver in the opening of the spout may be helpful to apply leverage.
2. You will replace the gasket and o-ring with the pieces from the kit. The o-ring will go in the same spot as old o-ring. Place new gasket inside 90° elbow, making sure it's fully seated. (See Image 2).
3. Secure shower assembly with new elbow to the C-108 body by tightening nut counterclockwise into elbow. (See Image 3). Recommend start by hand tightening to get threads engaged, secure with wrench.
4. Use provided stainless steel bracket and screws to secure shower riser to wall. Make sure bracket is installed in position as shown below. (See Image 4).



Image 1

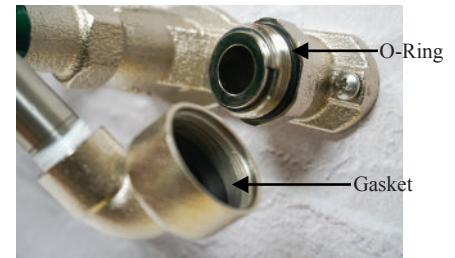


Image 2



Image 4



Image 3

OPERATION

Operation of the C-108SH1 Shower Attachment Kit is a simple process. Water flows through the C-108 hydrant and fills the shower riser after turning the handles (or operating key for the C-208 style) counter-clockwise to the “on” position. Turn off the shower by turning the handles clockwise to the “off” position. The hydrant will drain out of the elbow for a few minutes. If the dripping persists after a few minutes, tighten the handle slightly until the dripping stops. Be careful not to overtighten. The C-108/208 incorporates a backflow preventer that operates as a check valve in the rare case that water is forced backwards into the valve. The backflow preventer has been tested to 125 PSI pressure.

MAINTENANCE

The C-108SH1 Series Hot and Cold Wall Hydrant leaves the factory fully air tested and operational. It is treated with an FDA approved lubrication. The hydrant requires no scheduled maintenance to provide long life.

Installation Instructions

C-108KT-810 Adapter Kit



The C-108KT-810 Adapter Kit will be used when replacing the 90° elbow for the shower. This adapter kit will also be used when a previous shower model needs to connect to a newer C-108 body.



1. Remove shower riser from old 90° elbow being careful not to scratch the riser.



2. Apply threadlocker or sealant tape to shower riser and thread shower into new 90° elbow.



3. Remove 45° elbow, gasket, and O-ring from new C-108 body. They are not needed.



4. Replace O-ring with the one from the kit and place new gasket inside new elbow.



5. Secure shower assembly with new elbow to the C-108 body by tightening nut into elbow.