


# Installation Procedure for MF-2W/BC-4650 FIBERGLASS LAUNDRY TUB

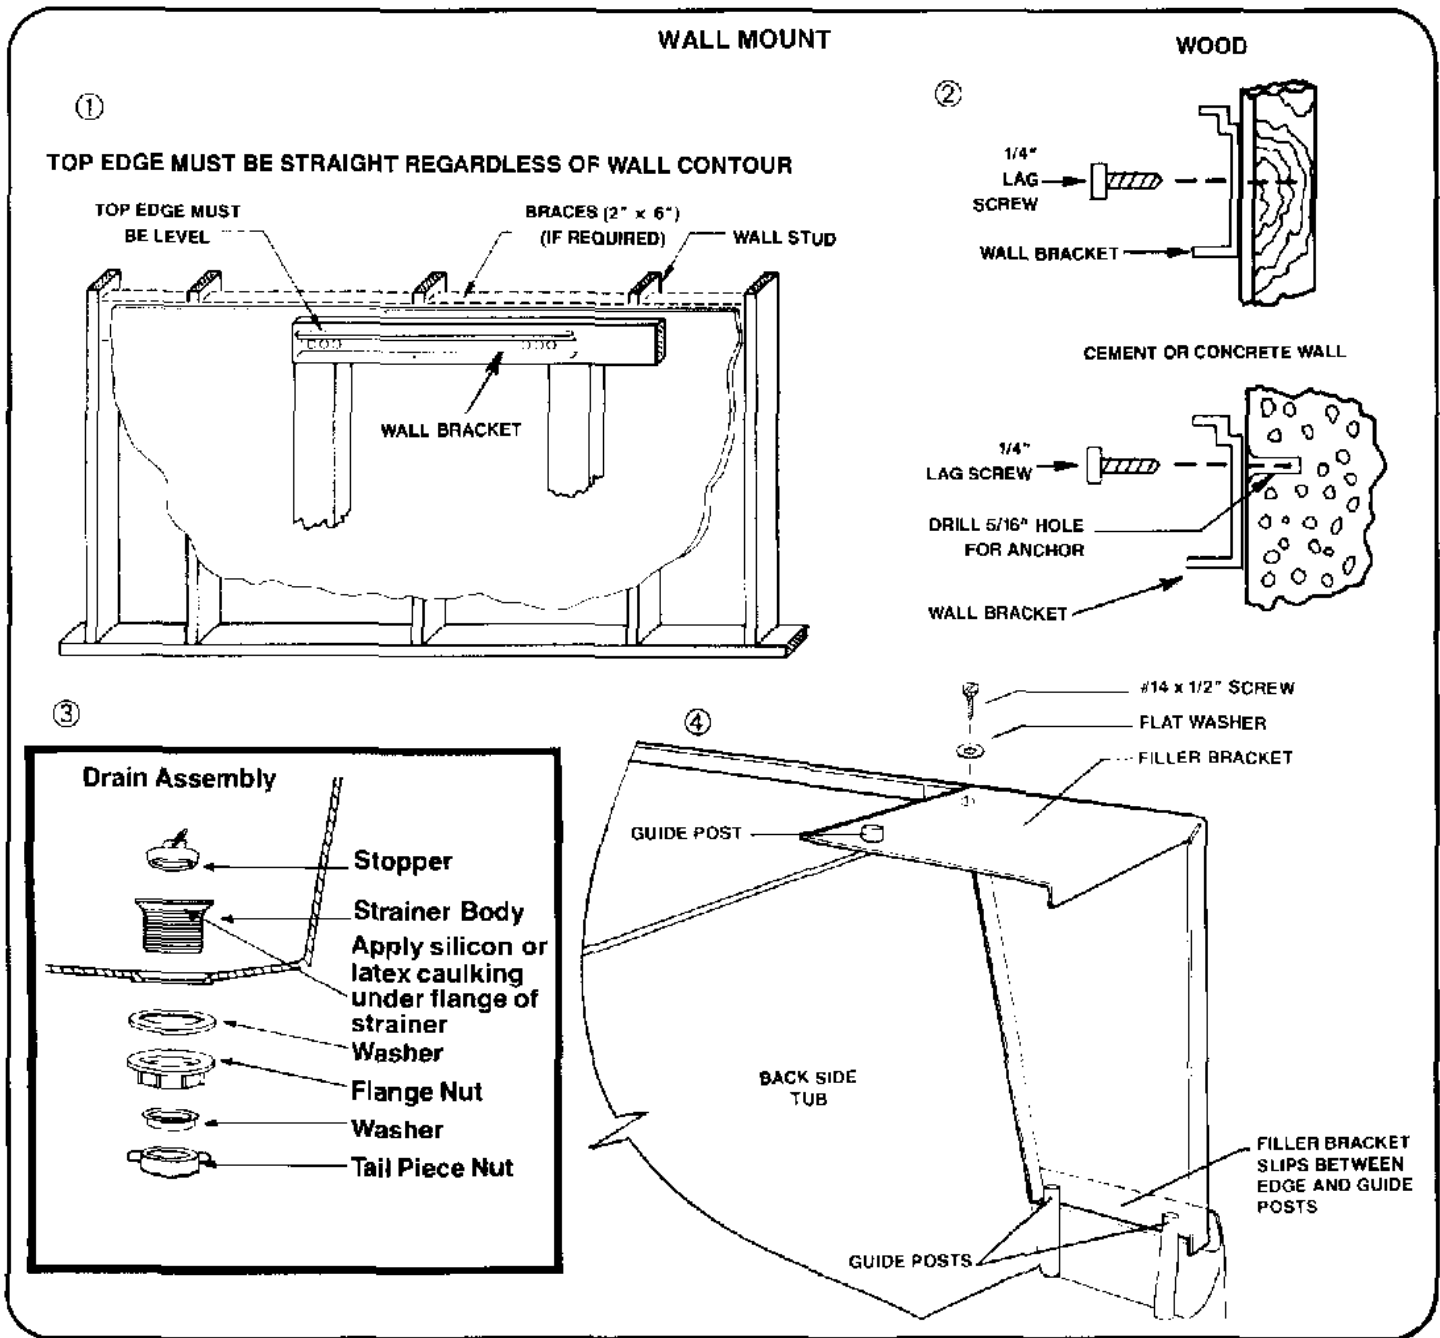

① Mount wall bracket—locate studs—drill holes 3/4" for lag bolts. If only one stud can be used, attach a 2" x 4" between studs and then attach wall bracket.

② For cement or concrete wall use 5/16" drill for holes—use plastic anchor and lag screws provided. Make sure the wall bracket is level regardless of wall contour before completely tightening the bolts. If wall is not level, shim as needed.

③ Install drain assembly.

④ Place tub upside-down on smooth surface. Attach right and left filler brackets, make sure holes line up. Guide top of filler bracket into groove provided under shelf. Secure with #14 x 1/2" slotted hex head self tapping screw and washer. Recommend securing with 3/8" end wrench (do not over tighten). Hang tub, secure plumbing, and mount faucet or faucet block (not supplied).

# Installation Procedure for MF-2F/BC-4600 FIBERGLASS LAUNDRY TUB

## FLOOR MOUNT

