



# CORNER SOAP DISH

## Model SS-7211

### Installation • Care and Cleaning

#### Included in Carton

- A. One Corner Soap Dish
- B. One Tube of Color Match Silicone

#### Surface Preparation






Surface must be dry, smooth, and free of any dirt soap scum, or other contaminants. Wipe surface with a damp cloth.

#### Cleaning

Following Installation: Silicone sealant residue can be cleaned up with mineral spirits.

#### Day-To-Day Cleanup

Like all Swanstone material, use normal household detergents and cleaners. Just wiping the surface removes water marks and residues. Occasional scrubbing with household abrasive cleaners ensures that the original luster is maintained similar to tile and other permanent bath fixture materials.

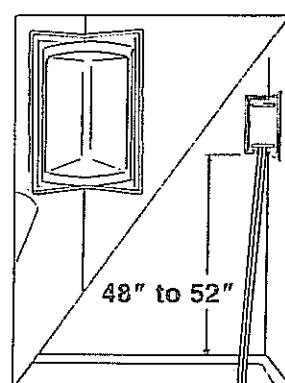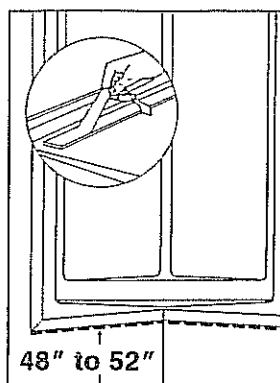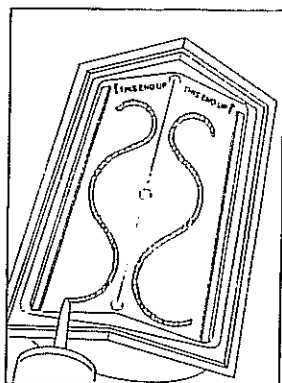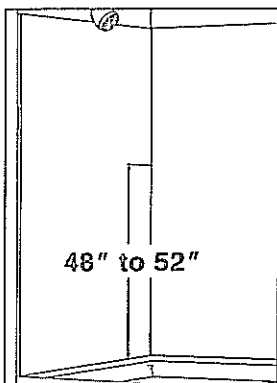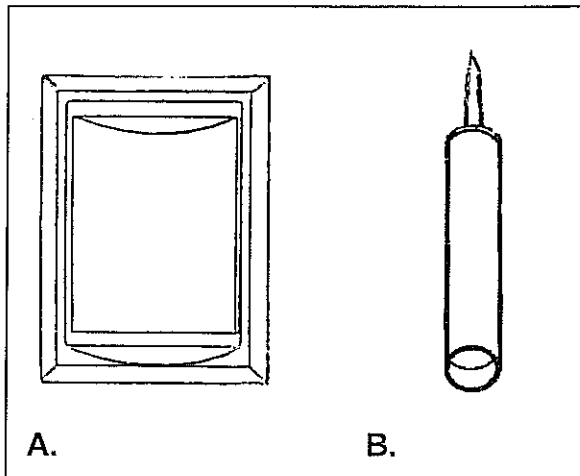

1. Select which corner you wish to locate your corner soap dish. For purposes of convenience, the manufacturer, recommends you locate the corner soap dish in the corner nearest the shower head. Measure up from the ledge of the shower floor 48" to 52" and make a mark on the wall in the desired corner. This is a recommended location of the bottom of the corner soap dish.

2. Apply a 1/8" bead of color match silicone sealant (supplied) as illustrated. Keep adhesive at least 1" away from factory applied pressure sensitive tape.

3. Remove backing from factory applied pressure sensitive tape. **NOTE:** The back side of the Corner Soap Dish is marked "THIS END UP". Properly position and locate. Press into place for a firm fit.

4. Read instructions on the back of the tube of color match silicone sealant. Complete Installation by caulking around all edges of the corner soap dish. Allow 24 hours for the sealant to dry. **NOTE:** The weight of the corner soap dish may cause the corner soap dish to "sag" or "slip" down the shower panel. To prevent this, cut a length of board to support the corner soap dish until the silicone has time to "set-up" (approximately 24 hours).