


## CTS J-Hook Installation and Operating Instructions

## **Note:**

Holds pipes firmly allowing for expansion and contraction.

- Holds copper (CTS), CPVC, Polybutylene and Crosslinked
   Polyethylene (PEX) water line pipes firmly and securely in place.
- Provides a neat and even installation of hot and cold lines in a horizontal application.
- Nails can be driven through any side of the pipe holder allowing for versatile placement.

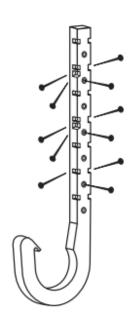

## Installation

- 1. Snap J-H00K on pipe.
- 2. Adjust J-H00K for grade.
- 3. Use nails supplied to attach J-H00K.

