


Mini Split 12" Stand - Thin Installation: *(Please adhere to all local laws and building codes)* Model#: (QSMS1200)

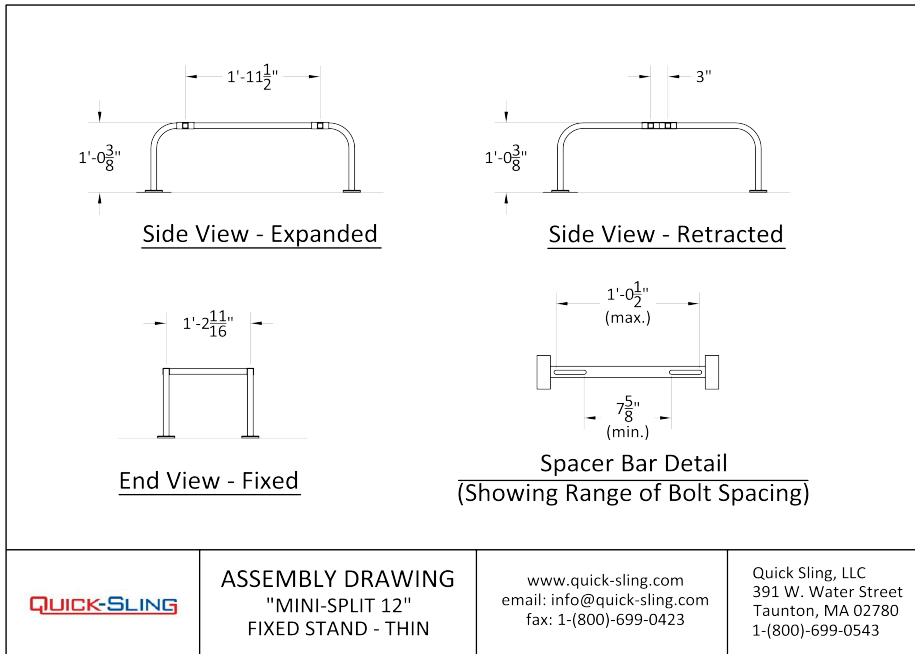

Step #1: Remove U-Bar Frames (2 - Parts of MS107) from box and stand in place.

Step #2: Remove Spacer Bar & Saddle (2 - Parts of MS108) and attach on top of U-Bar Frames to connect the two frames together.

Step #3: Measure the distance between foot slots on your Mini-Split Condensing Unit and position Spacer Bars & Saddle the same distance apart.

Step #4: Place Mini-Split Stand in place for installation. It is recommended to use a plastic, cement or other base to stabilize your overall installation (See *Photo #1 or #2 for reference*).




Photo #1
(On left) Mini-Split 12" Stand (Thin) with Unit shown on 18" wide pad.



Photo #2
(On left) Mini-Split 12" Stand (side view) showing connection to stand.



Photo #3
(On left) Mini-Split 12" Stand. Close-up of Spacer Bar w Saddle attachment.

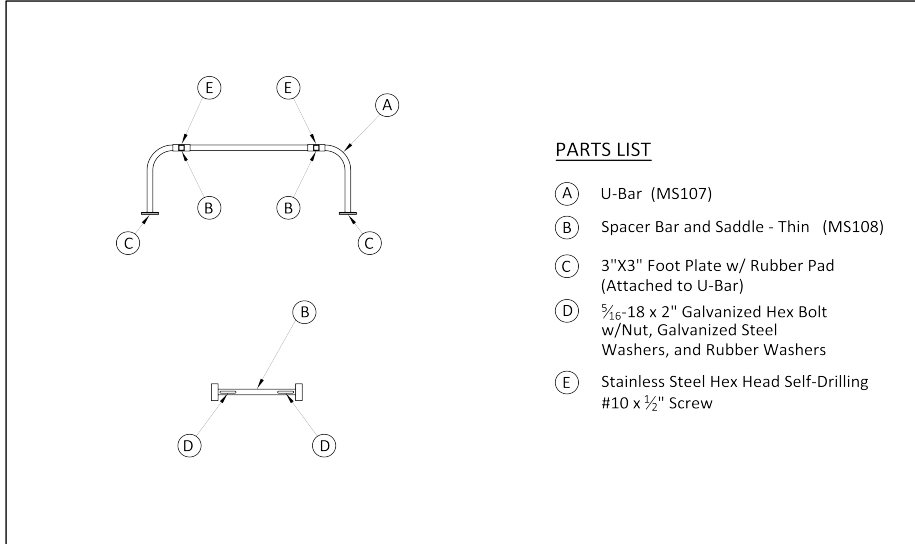

Step #5: Place Mini-Split Condensing Unit on Stand and line-up foot slots with openings in the Spacer Bar & Saddle.

Step #6: Secure Mini-Split Condensing Unit to Stand with galvanized hardware and Anti-Vibration Washers included in box (*Pink & Yellow Labeled Bags*).

Step #7: Once Mini-Split Condensing Unit is secured with enclosed hardware, secure Spacer Bars & Saddle to the U-Bar Frame with stainless steel self-drilling Tech Screws (*Tan Labeled Bag*).

Step #8: Your Mini-Split Condensing Unit is now ready for connection to plumbing and electrical installation leads.

	PARTS LIST "MINI-SPLIT 12" FIXED STAND - THIN	www.quick-sling.com email: info@quick-sling.com fax: 1-(800)-699-0423	Quick Sling, LLC 391 W. Water Street Taunton, MA 02780 1-(800)-699-0543
	<p>Step #5: Place Mini-Split Condensing Unit on Stand and line-up foot slots with openings in the Spacer Bar & Saddle.</p> <p>Step #6: Secure Mini-Split Condensing Unit to Stand with galvanized hardware and Anti-Vibration Washers included in box (<i>Pink & Yellow Labeled Bags</i>).</p> <p>Step #7: Once Mini-Split Condensing Unit is secured with enclosed hardware, secure Spacer Bars & Saddle to the U-Bar Frame with stainless steel self-drilling Tech Screws (<i>Tan Labeled Bag</i>).</p> <p>Step #8: Your Mini-Split Condensing Unit is now ready for connection to plumbing and electrical installation leads.</p>		

Please see important "Safe Install" information on back page.

Safe Install Warning

Install At Your Own Risk!

The load capacity of this product can only be assured if installation is carried out properly.

Mounting hardware is included with most models. However, it is the Buyer's sole responsibility to determine that the enclosed hardware is safe and suitable for the selected mounting location. Additional materials and safety precautions may be required, depending upon the size and location of the installation. When hardware is not included, the Buyer is solely responsible for furnishing and installing anchors and related mounting materials that are safe and suitable for the selected mounting location. Quick-Sling™ is not responsible for any installation faults or defects. It is highly recommended that the installation/mounting location be periodically inspected by a skilled technician. Make sure that the installation location is suitable enough to hold the brackets and associated equipment loads.

Disclaimer Of Liability

Quick-Sling LLC and its successors, distributors, jobbers, dealers and retailers ("Seller") shall in no way be responsible for any direct, indirect or consequential damage resulting from improper installation, misuse or misapplication of this product. It is the BUYER's sole responsibility for assuring proper installation and use.

Seller makes no warranty of merchantability of the goods or the fitness of the goods for any particular purpose. Seller makes no warranties of any kind, express or implied. The goods are sold as-is and with all faults.