

# Shower Rods Technical Specification


## Shower Rod Flange Set

63-F

### Stock Numbers:

- **63-F –Shower Rod Flange Set**  
Polished Chrome Finish  
Exposed Mounting Screws  
Two Assemblies per Set  
Fits 1" Diameter Rods

### Dimensions:

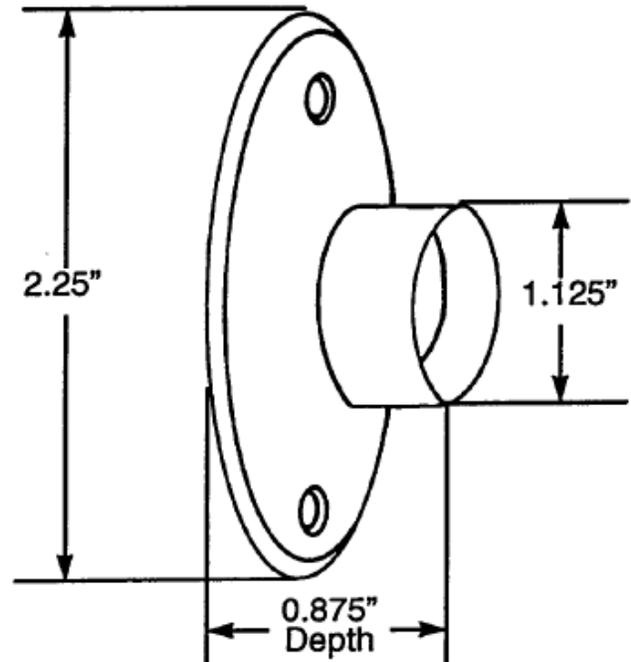

### Materials:

**Flanges** are cast from the highest quality zinc alloy (zamac). Castings are triple plated with a polished chrome or polished brass finish.

### Installation Instructions:

1. Place flanges on both ends of shower rod.
2. Position rod assembly in desired location.
3. Mark location of mounting holes for both flanges.
4. Drill starter holes.
5. Attach left bracket to wall using 1" screws (provided).
6. Insert rod and right bracket assembly into left bracket.
7. Slide right bracket against wall and attach with 1" screws (provided).

Note: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following optional fasteners are suggested: Tile/Masonry – Plastic or Lead Anchors; Plaster/Drywall – Toggle Bolts

**Stock Number:** \_\_\_\_\_ Shower Rod Flanges  
By Creative Specialties



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070  
CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636  
INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726  
CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720  
WWW.MOEN.COM

©Copyright Creative Specialties International

Literature #BA1636