
VURSA kd, 3-Piece, Center & End Drain Installations

Tub/Showers: TS3P-6030 (all versions) TS3P-6032 (all versions)

Showers: SH3P-3232 (all versions) SH3P-3636 (all versions)

SH3P-4832 (all versions) SH3P-4834 (all versions) SH3P-6030 (all versions) SH3P-6032 (all versions)



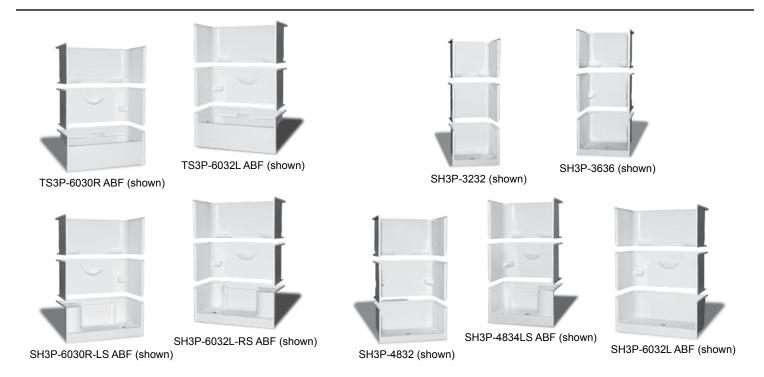

These guidelines are recommended for the proper installation of Oasis products. A careful review of these procedures (and any referenced publications) before starting is important in avoiding an improper assembly and/or installation.

NOTE: All illustrations in this publication are typical, and may appear different than the actual product. Optional items may also be shown that were not ordered on the product being installed.

Special Notes to Installer

- ◆ It is the sole responsibility of the installer to determine the requirements necessary for compliance with all installation code requirements!
- ◆ All paperwork packaged with the product should be saved and presented to the home owner upon completion of the installation!
- ◆ All published product dimensions are for reference only. Any critical dimensions required for installation should be taken directly from the product being installed!
- ◆ Any independent modifications made to the product (or any options / accessories supplied) beyond those required for normal

installation can void all warranties! (Refer to warranties for further information)

INSPECTION GUIDELINES

Carefully check the unit upon receipt. Notify your supplier immediately if any questions or problems are encountered during this process.

DO NOT INSTALL PRODUCT
WITHOUT FIRST ADDRESSING
QUESTIONS WHICH ARISE DURING
THE INSPECTION!

Basic Module Check

- Check unit drain position for match to bathroom drain location.
- Check unit for surface damage.
- Check wall section(s) and base for color match.
- Check unit color for coordination to other bathroom fixtures.

INSTALLATION SITE FRAMING

The recommended framing and dimensional requirements shown are for a traditional application and may vary, based on site requirements.

The dimensions shown in the dimensional diagram(s) are from the surfaces where the unit will be attached. This surface can be bare studding, dry wall or other suitable under layment material. It is important that the floor and all framing be square, plumb and level. Framing must be done using accepted materials and construction techniques in accordance with all applicable codes for the site.

NOTE: Any pre-constructed wall(s) may require modification or additional framing to allow for factory applied pipes and/or fittings which may protrude from the body of the unit.


NOTE: A minimum of 48-inches of drywall must be removed from the framing area in order to place the components in the alcove.


INSTALLATION PROCEDURE


NOTE: 'Wet-set' is not required to support the floor under an Oasis product due to the encapsulated Balsa wood construction.

The VURSA kd, multi-piece system is designed as a front side installation procedure, with three (3) individual sections locking securely together.

Illustrations 1a - Center Drain, Unit Dimension & Alcove Framing Guidelines (dimensional tolerance +0 / -3/8")






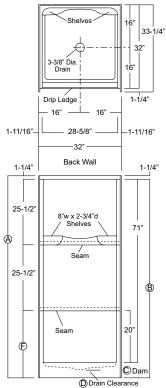

SH3P-3636 ABF (illustr.)


Sto	d Unit	ABF Unit				
Α	76"	78"				
В	74-3/4"	76-3/4"				
С	4"	6"				
D	1"	3"				
E	-	-				
F	23-3/4"	25-3/4"				

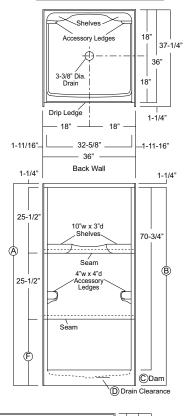


17-1/8" 35-1/4" \bigoplus 34" 16-7/8" Drip Ledge 1-1/4" 24" 1-3/4" -44-1/2" _ -1-3/4" 48" -Back Wall 1-1/4" 26-3/4" ⇎ 53-1/2" 26-3/4 Toe Hold Contoured Seat Seam 18" ø © Dam -----Drain Clearance


SH3P-4834RS (illustr.above) SH3P-6032R (illustr.below)


	Std Unit	ABF Unit
Α	76-3/4"	78-3/4"
В	75-1/2"	77-1/2"
С	4"	6"
D	1"	3"
E	-	-
F	22"	24"



SH3P-4832 ABF (illus	str.)	Shelves	
Std Unit ABF Un	it	Jileives —	16" 33-1/4"
A 76-1/2" 78-1/2" B 75-1/4" 77-1/4" C 4" 6"		3-3/8"Dia. Drain	32" 16"
D 1" 3" E F 21-3/4" 23-3/4"	,	Drip Ledge 24"	1-1/4"
	1-3/4" —	44-1/2"	_1-3/4"
		48"	-
	1-1/4"	Back Wall	1-1/4"
	26-3/4"		
	A _	16"w x 3"d Shelves	71-1/4"
	26-3/4"	6°x 4" Accessory Ledges	(B)
	(F)	Seam	
		·	© Dam
		Drain Clearance	

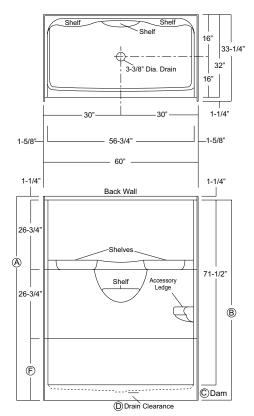

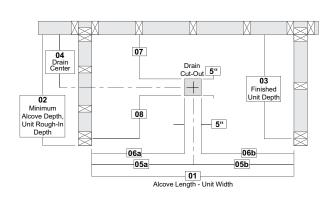

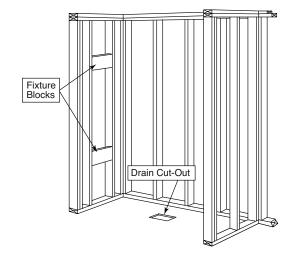

Model	01	02	03	04	05a	05b	06a	06b	07	08
SH3P-3232	32"	33-1/4"	32"	16"	16"	16"	13-1/2"	13-1/2"	13-1/2"	13-1/2"
SH3P-3636	36"	37-1/4"	36"	18"	18"	18"	15-1/2"	15-1/2"	15-1/2"	15-1/2"
SH3P-4832	48"	33-1/4"	32"	16"	24"	24"	21-1/2"	21-1/2"	13-1/2"	13-1/2"
SH3P-4834	48"	35-1/4"	34"	17-1/8"	24"	24"	21-1/2"	21-1/2"	14-5/8"	14-3/8"
SH3P-6032	60"	33-1/4"	32"	16"	30"	30"	27-1/2"	27-1/2"	13-1/2"	13-1/2"

Factory-installed pegs have been positioned on the top ledge of the base and midsection components, and align with holes on the underside of the mid and top-sections. Each hole has been fitted with a unique connector which locks to the peg.

The connection process provides an audible "CLICK" when each peg and insert are mated, resulting in compression along the seam.

WARNING: Alcove framing members cannot tilt, angle or protrude into the area intended for the three (3) individual unit sections to occupy, as this can compromise proper alignment of the VURSA kd sections.

- 1a. Position the base component in the framed area. Before attaching the base section to the framing, a series of details must be checked (photo 1).
- Confirm the lower apron/dam is resting flush on the floor.
- Confirm the base component is level along the back, the front and ends.
- Confirm the base component is positioned square in the framed area.
- Confirm the base component is positioned plumb in the framed alcove.
- Confirm the drain hole position.

SPECIAL NOTE:

Move base section forward within alcove by applying 1/8"-thick shims behind attachment flange across entire back wall.

NOTE: Use of additional shims behind the attachment flanges may be required to ensure the base component remains square, and plumb in the framed area. Caution must be used to avoid distorting the unit shape, which can compromise proper alignment of the VURSA kd sections.

THE BASE MUST BE LEVEL, SQUARE AND PLUMB TO INSURE PROPER FIT OF THE UPPER SECTIONS!

1b. With the base component correctly positioned, drill a 1/8" hole through the



flange at each framing member. Attach the flange across the back first, followed by the ends and then along the front vertical flanges, using 1-1/4" long nails or other appropriate fasteners, approximately 7"-9" apart. Continually check to make sure the base component remains square and plumb within the framed area as it is being secured to ensure proper alignment for the upper sections (photo 2).


NOTE: Usage of a thin shield to protect the unit surface while fastening it to the framing is recommended.


WARNING! THE BASE COMPONENT FLOOR SHOULD BE CLEAR OF ALL LOOSE DEBRIS AND THE SURFACE PROTECTED BEFORE STEPPING INSIDE.

2a. With the base component securely attached to the framing, dry-fit the mid-section to confirm proper alignment, and identify any required shim adjustments necessary for the base component.


To perform the dry-fit procedure, position the mid-section above the pegs on the base component with the front edge overhanging the base about 2-inches. Apply even pressure to the front of the mid-section on both sides, moving it back across the top of the pegs (photo 3). When properly positioned the base component pegs enter holes along


Illustration 1b - End Drain, Unit Dimension & Alcove Framing Guidelines (dimensional tolerance +0 / -3/8")

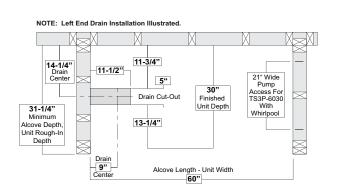

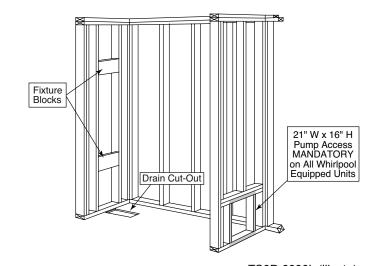

SH3P-6030R-LS (illustr.)

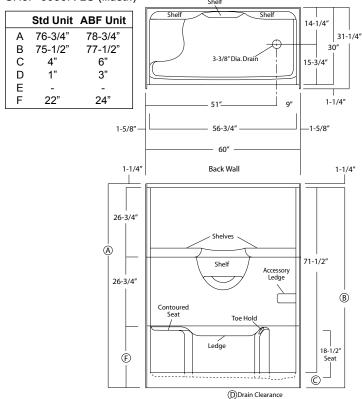

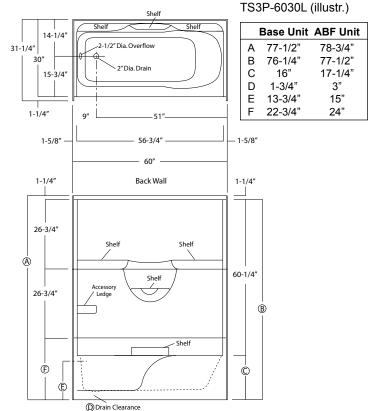



the underside of the mid-section ledge and 'CLICK' in place confirming a positive connection. With the mid-section fully seated, confirm proper mating and seam alignment with the base component at the front face and across the inner sidewalls.


NOTE: The VURSA kd back wall uses offset face contouring to direct water away from the seam, intentionally eliminating flush face alignment along the back wall seam.

2b. With proper alignment confirmed, lift the mid-section off the base and out of the alcove area. Thoroughly clean the mating surfaces on both the base component and the mid-section.


NOTE: Oasis recommends a high quality silicone based sealant with a mold and mildew resistant content.


Apply a SMALL (approximately 1/8-inch wide - photo 4) continuous bead of sealant on the top ledge of the base component, beginning at the attachment flange at the first peg, along an imaginary line from pegto-peg on the shower side (photo 5). At the front corners, extend the bead at the base of the front peg to the front and back to the face of the attachment flange. (photo 6).

Illustration 1c - End Drain, Unit Dimension & Alcove Framing Guidelines (dimensional tolerance +0 / -3/8")

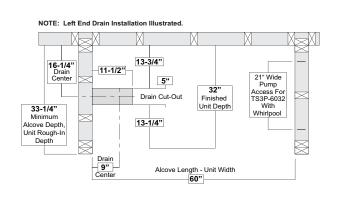

Shelf

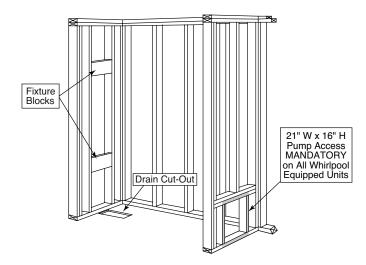



24"


À

26-3/4"

(F)

Seat

SH3P-6032R-LS (illustr.)

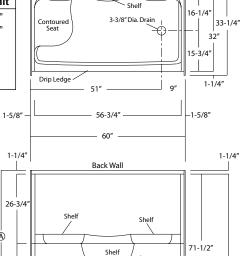



Toe Hold

Ledge

(D) Drain Clearance

TS3P-6032R (illustr.)

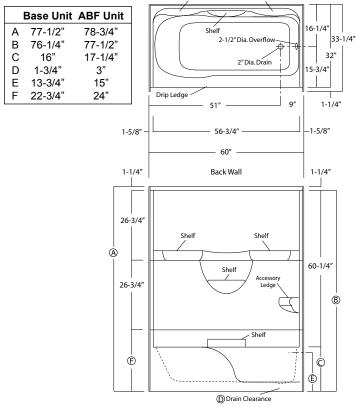

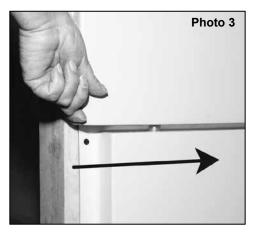

WARNING! DO NOT APPLY SEALANT ON THE TOP OF ANY PEGS AS IT WILL COMPROMISE THE LOCKING CONNECTION.

(B)

18-1/2' Seat

(C)Dami

(Silicone ribbons enhanced for photo visibility.)

Carefully reposition the mid-section over the pegs on the base component and listen for the audible 'CLICK' to confirm the connection. Remove any excess silicone from the seam at this time.

2c. Secure the mid-section by drilling a 1/8" hole through the attachment flange at each


framing member and approximately every 7"-9" along the vertical flanges. Continually check to make sure the horizontal seam remains tight as the mid-section is being attached to the framing (photo 2).

NOTE: The use of shims behind the attachment flange may be required to ensure the mid-section remains properly aligned vertically. Caution must be used to avoid distorting the unit shape, which can affect top-section alignment.


3. With the mid-section securely attached to the framing, repeat the dry-fit process with





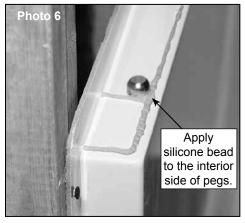



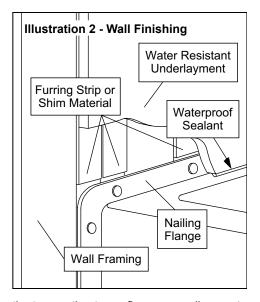

the top-section to confirm proper alignment, and identify any shim adjustments required to the mid-section. (Refer to and follow steps 2a, 2b and 2c for detailed instructions, and supporting notes to complete the assembly of the top-section.)

Water Supply and Drain Connections Refer to, and follow, the assembly and installation instructions provided with the supply valves and drain system. Carefully check all connections for leaks.

Finishing Guidelines

Filler strips or filler material may be required over the framing to ensure the under layment mounts flush over the flanges. A water resistant under layment is recommended surrounding the unit. Stop the under layment 1/16 to 1/8-inch from the unit surface, and fill the space with a continuous bead of water resistant sealant (illust. 2).

Use care when fastening the under layment near the unit surface to avoid damage. Seal the under layment seams and edges, as required, and install the finish material to specifications.

UNIT SURFACE CARE

<u>WARNING!</u>
<u>NEVER USE ABRASIVE MATERIALS,</u>
<u>OR ABRASIVE CLEANERS</u>
<u>ON THE UNIT SURFACE!</u>

EXTREME CAUTION is urged regarding the use of any cleaner, acid or solvent on the unit surface.

READ AND FOLLOW PACKAGE
INSTRUCTIONS FOR ALL
PURCHASED CLEANING PRODUCTS!

Through routine use, the unit surface can collect residues from soap, bath additives and natural body oils. Additional deposits can also collect from minerals or particles found in the water. After each use, wipe the excess water from the unit. This practice will reduce the buildup of deposits and help maintain the natural unit lustre.

Following a thorough surface cleaning, an application of quality automotive wax will help reduce major accumulations. The actual schedule for cleaning and waxing will depend on unit usage and water quality.

<u>WARNING!</u> <u>NEVER APPLY WAX</u> <u>TO THE UNIT FLOOR!</u>

- ◆ Routine Cleaning: Mild, non-abrasive cleaner specifically formulated for gelcoat and acrylic surfaces recommended. (Rinse surface thoroughly)
- ◆ <u>Heavy Soap Deposits:</u> Liquid ammonia household cleaner, applied full strength. (Rinse surface thoroughly)
- ◆ <u>Stubborn Stains:</u> Liquid household cleaner or hydrogen peroxide applied full strength. Place a saturated clean rag directly on stain and let stand several hours. (Rinse surface thoroughly)
- ◆ <u>Hard Water Scales:</u> Liquid scale remover or white vinegar, applied full strength. (Rinse surface thoroughly)
- ◆ <u>Mold/Mildew:</u> Liquid mildew remover or baking soda and water paste. (Apply paste and allow to fizz several minutes.) (Rinse surface thoroughly)
- ◆ <u>Construction Adhesive</u>: Soften adhesive with a hand held hair dryer and peel off adhesive. (Caution is advised when using any electrical device near water.)

For adhesive residue, apply rubbing alcohol or nail polish remover, full strength. (Rinse surface thoroughly)

WARNING!
BATH MATS AND OTHER ITEMS HELD IN
PLACE USING SUCTIONS
MUST BE REMOVED FROM THE UNIT
SURFACE AFTER EACH USE.

OVER AN EXTENDED PERIOD, FAILURE

TO REMOVE

SUCTION ATTACHED ITEMS WILL DAMAGE THE UNIT SURFACE.



Oasis Lifestyle Product Assurance Program

Bathing and Shower Unit Structure & Surface Finish Limited Warranty

Oasis Lifestyle provides a performance assurance program for unit structural integrity and surface finish covering a five (5) year period from the date-of-purchase on GELCOAT, and covering a ten (10) year period from the date-of-purchase on VACUUM FORMED ACRYLIC product, for the original purchaser and subsequent consumer. This Oasis limited warranty program addresses specific defects in the product, and the workmanship associated with the manufacture of the Oasis bathing and shower product. The specific defects covered must result in a significantly altered appearance and/or affect the intended performance standards for the product under normal residential use.

Hydro-Massage Systems (water recirculation & air), Option & Accessories Limited Warranty

Oasis Lifestyle provides a performance assurance program for their hydro-massage systems (herein called 'system'), and their options and accessories covering a two (2) year period from the date-of-purchase for the original purchaser and subsequent consumer. This Oasis limited warranty program addresses specific defects in the system components, and the workmanship associated with the assembly of the systems, along with offered options and accessories installed by Oasis, on an Oasis unit. The specific defects covered must result in a significantly altered appearance and/or affect the intended performance standards for the system, the option and/or the accessory.

During the coverage period, Oasis will, at its discretion (following a verification by an authorized Oasis representative), either provide service or supply a replacement product without charge, but excluding any cost associated with the transportation, removal of and/or reinstallation of the unit (module). Failure to allow requested inspection by an authorized Oasis representative, and/or failure to provide adequate accessibility for an authorized inspection, and/or service performed prior to documented authorization from Oasis Lifestyle, LLC., may delay service, and/or possibly terminate any warranty coverage, and remove any liability to Oasis Lifestyle, LLC.

This 'Product Assurance Program' does not cover service resulting the following:

- a) Improper field installation of the product, system, option, accessory, and/or surrounding structure modifications, and/or utility service connections beyond the recommendations supplied by Oasis and within the scope of applicable codes and ordinances; or
- b) Carelessness, damage, abuse, misuse, negligence, improper care, fire, flood, or acts of God; or
- c) Non-conforming use, including any use beyond those intended for the product, system, option and/or accessory, including failure to follow the Prescribed Care and Maintenance Instructions; or
- d) Any unauthorized alterations or modifications to the product, system, option, accessory and/or the individual parts or components supplied by Oasis.
- e) Any surface and/or component staining, discoloration, component failure and/or build-up caused as a result of water chemistry or water quality at the site.
- f) Service resulting from normal use and wear for the product, system, option and/or accessory.

Repair or the supplying of replacement product and/or components, under this limited warranty program, shall be the exclusive remedy. Oasis Lifestyle, LLC., shall not be liable for any incidental or consequential damages, including damages to the building / structure, the contents, the occupants, or breach of any expressed or implied warranties. Oasis Lifestyle, LLC., does not recognize, nor authorizes any party to provide implied or written warranties regarding a product, system, option and/ or accessories fitness for a particular purpose, nor modify the terms of the limited warranty beyond those stated.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on the duration of any implied warranty. Therefore, the above exclusions and/or limitations may not apply.

THIS WARRANTY PROVIDES SPECIFIC LEGAL RIGHTS, WHICH CAN VARY FROM STATE-TO-STATE.





