# spirax Sarco


# **Cast Iron Float & Thermostatic Steam Traps** FT-15, FT-30, FT-75, FT-125


continuously at stear temperature, while non-condensible gas are released by a se arate internal balanc pressure thermostat air vent.

The trap contains a float valve mechanism which modulates to discharge condensate continuously at steam temperature, while non-condensible gases are released by a sep- arate internal balanced pressure thermostatic air vent.	Model	FT-15	FT-30	FT-75	FT-125	
	РМО	15 psig	30 psig	75 psig	125 psig	<b>Typical A</b> All process e
	Sizes	3	controlled by r trol valves; uni heat exchange tions.			
	Connections					
	Construction					
	Options	G	For Capaciti See TIS 2.3			

## pplications

uipment, particularly when modulating temperature conit heaters, air heating coils, ers and steam main drip sta-

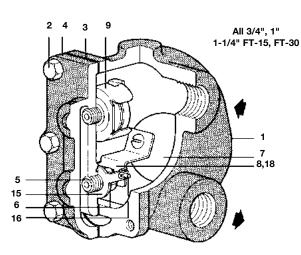

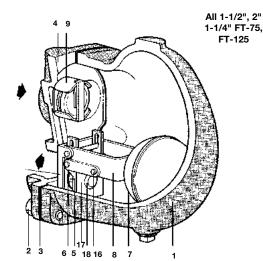

#### Limiting Operating Conditions Max. Operating Pressure (PMO) FT-15: 15 psig (1.0 barg) FT-30: 30 psig

		1 0	(2.1 barg)			
		1 0	(5.2 barg) (8.6 barg)			
Max. Operating Temperature		. ,				
	operati	ng press	ures			

## **Pressure Shell Design Conditions**

**PMA** 125 psig/up to 450°F 9 barg/up to 232°C Max. allowable pressure

TMA 450°F/0-125 psig 232°C/0-9 barg Max. allowable temperature


Construction Materials						
No.	Part	Material				
1	Body	Cast Iron	ASTM A126 CL B			
2	Cover Screws	Carbon Steel	ASTM A449			
3	Cover Gasket	Graphite				
4	Cover	Cast Iron	ASTM A126 CL B			
5	Valve Seat	Stainless Steel				
6	Valve Seat Gasket	Stainless Steel				
7	Ball Float	Stainless Steel				
8	Float Arm	Stainless Steel				
9	Air Vent Assembly	Stainless Steel				
	Air Vent Head	Stainless Steel				
	Air Vent Seat	Stainless Steel				
15	Seat Bracket	Stainless Steel				
16	Pivot Pins	Stainless Steel				
17	Head Bracket, Stop, L	_ink	Stainless Steel			
18	Valve Head	Stainless Steel				

Local regulation may restrict the use of this product below the conditions quoted. Limiting conditions refer to standard connections only. In the interests of development and improvement of the product, we reserve the right to change the specification.

502

## **Cast Iron Float & Thermostatic Steam Traps** FT-15, FT-30, FT-75, FT-125

All 1-1/2", 2"

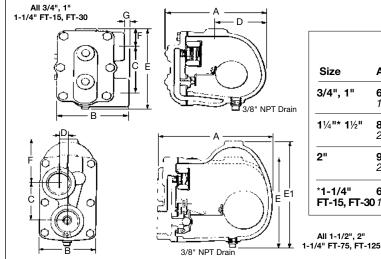

Dimensions (nominal) in inches and millimeters									
Size	Α	в	С	D	Е	E1	F	G	Weight
3/4", 1"	<b>6.2</b> 157	<b>4.6</b> 117	<b>3.3</b> 84	<b>3</b> 77	<b>5.75</b> 146	-	<b>1.3</b> 33	<b>0.3</b> 7.9	<b>9 lb</b> 4.1 kg
11⁄4"* 11⁄2"	<b>8.5</b> 216	<b>4.25</b> 108	<b>3</b> 76	<b>0.7</b> 17	-	<b>8.4</b> 213	<b>3.5</b> 89	-	<b>18 lb</b> 8.2 kg
2"	<b>9.8</b> 249	<b>4.9</b> 124	<b>4.9</b> 124	<b>0.12</b> 3	<b>9.1</b> 230	-	<b>1.9</b> 49	-	<b>26 lb</b> 11.8 kg
*1-1/4" FT-15, FT-3	<b>6.2</b> 0 <i>1</i> 57	<b>4.7</b> 119	<b>3</b> 76	<b>2.8</b> 72	<b>5.75</b> 146	-	<b>1.5</b> 38	<b>0.3</b> 7.9	<b>9.3 lb</b> 4.2 kg

### Sample Specification

Steam traps shall be of the mechanical ball float type having cast iron bodies, NPT connections, and all stainless steel internals. Incorporated into the trap body shall be a stainless steel balanced pressure thermostatic air vent capable of withstanding up to 450°F(25°C) and resisting waterhammer without sustaining damage. Internals of the trap shall be completely servicable without disturbing the piping.

#### Installation


A pipeline strainer should be installed ahead of any steam trap. Full port isolating valves should be placed to permit servicing. The trap should be installed below the drainage point of the equipment with a collecting leg before the trap, in a position so that the float arm is in a horizontal plane so that the float rises and falls vertically, and with the direction of flow as indicated on the body. Refer to IM-2-300 for complete instructions.

## Maintenance

This product can be maintained without disturbing the piping connections. Complete isolation from both supply and return line is required before any servicing is performed. The trap should be disassembled periodically for inspection and cleaning of the valve head and seat, operating mechanism and air vent.

Worn or damaged parts should be replaced using a complete valve mechanism assembly and/or air vent assembly. Complete installation and maintenance instructions are given in IM-2-300, which accompanies the product.

## Spare Parts

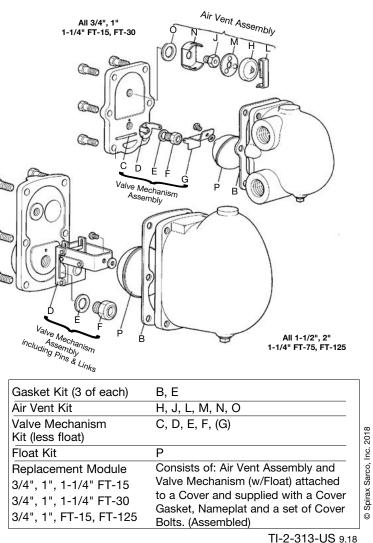

Spirax Sarco, Inc., 1150 Northpoint Blvd, Blythewood, SC 29016

Telephone: (803) 714-2000 FAX (803) 714-2222